





DRYERSTAND

twin stack

ASSEMBLY INSTRUCTIONS

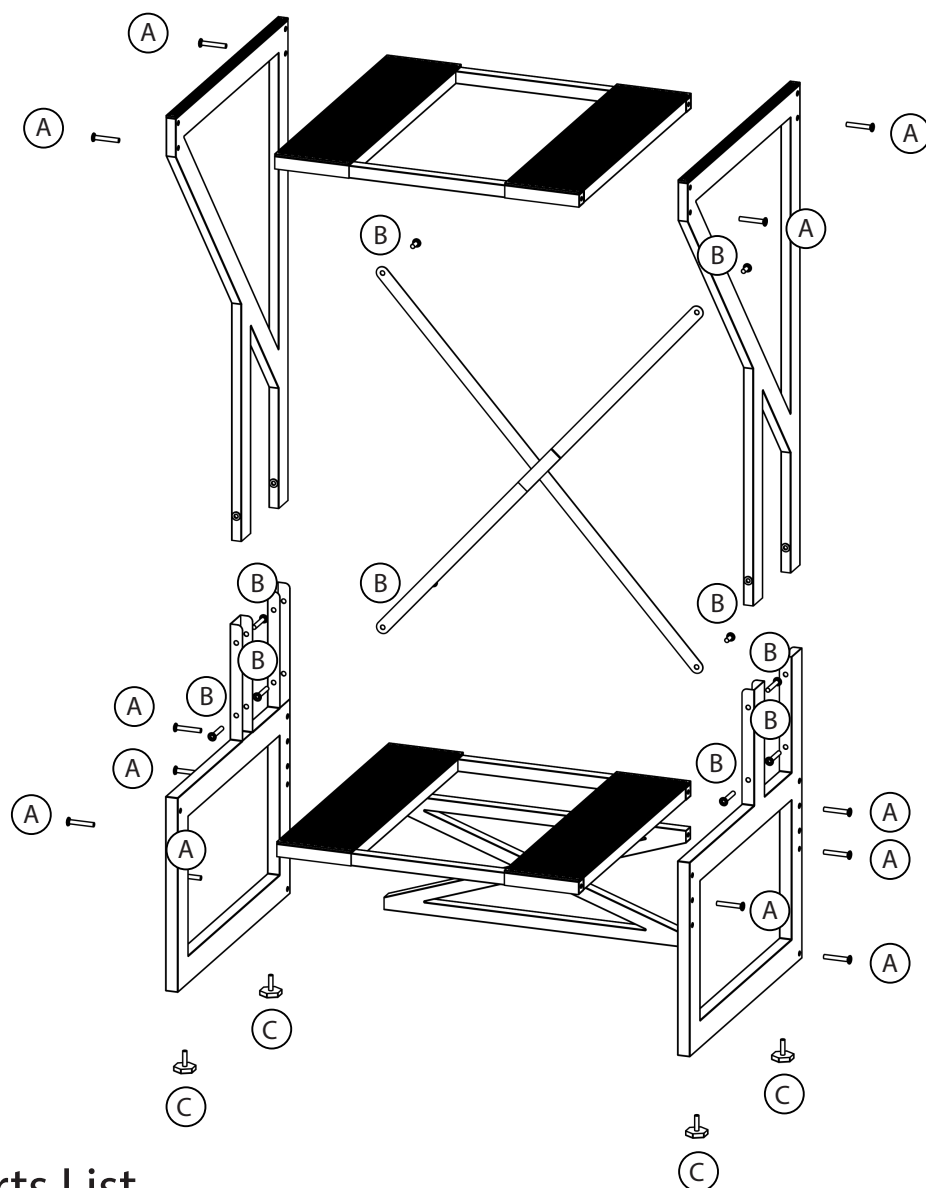

 Parts List

- | | | |
|-----|---|--------------------------|
| (A) |  | M8x50 Bolt - Qty. 12 |
| (B) |  | M8x20 Bolt - Qty. 10 |
| (C) |  | Adjustable Foot - Qty. 4 |


Allen Key - Qty. 1

FOLLOW THE STEP BY STEP INSTRUCTIONS

Step 1

Begin by placing top shelf upside down on work surface.

Fasten the top side frames to the top shelf one side at a time.

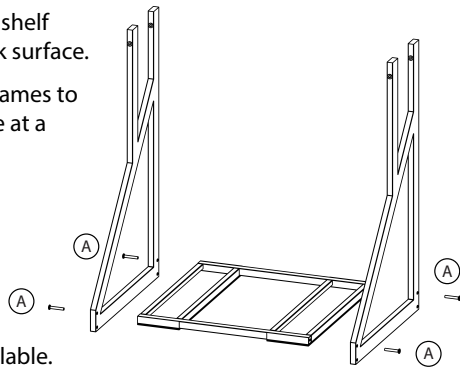


2 height options available.

(A) M8x50 Bolt - Qty. 4

Step 2

Screw in the adjustable feet to the side frames.

Attach the cross brace to the side frames.

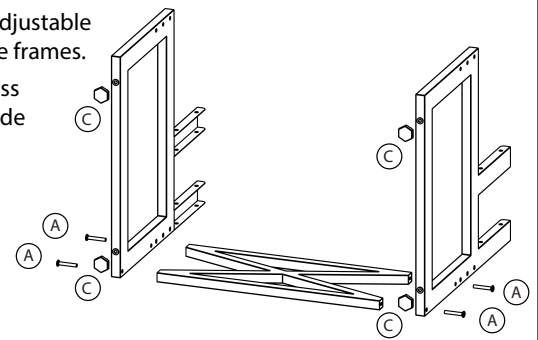


(A) M8x50 Bolt - Qty. 4

(C) Adjustable Foot - Qty. 4

Step 3

Fasten lower shelf to the stand with provided screws.

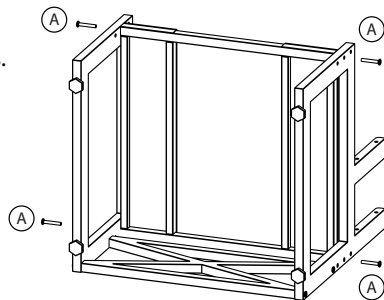


3 height options available.

(A) M8x50 Bolt - Qty. 4

Step 4

Connect both halves of stand. Flip stand to standing position.

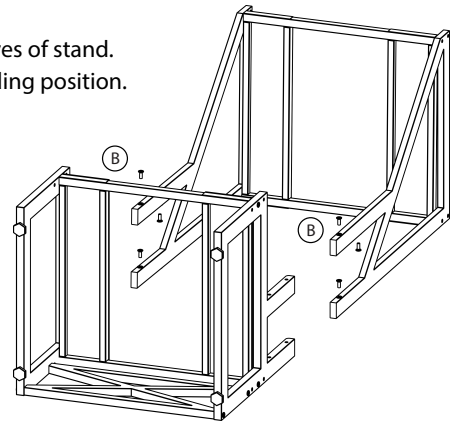


(B) M8x20 Bolt - Qty. 6

Step 5

Attach crossbar to the side frames by bolting onto the rear threads of the stand.

Once stand is fully assembled ensure all bolts are securely fastened with included allen key.

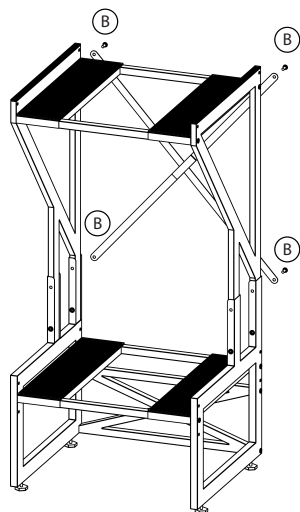

(B) M8x20 Bolt - Qty. 4

Step 6

Disconnect and remove your washing machine. Place the Dryer Stand Twin Stack in place.

Place your washing machine on the bottom shelf and reconnect the power cord and hoses.

Place your Dryer on top of the stand.



Caution: Ensure the total combined appliance weight does not exceed 250kg.
The top shelf is designed to support a clothes dryer with a maximum weight capacity of 100kg.
For the Washer Base, ensure the appliance weight does not exceed 150kg.

Support: If you have any questions about this product, please contact our customer support team at customersupport@britec.com.au

Warranty: 5 year warranty on all our Dryer stands.

For full details, please visit our website at www.britec.com.au and check our terms and conditions