

Floor Stand TV Mount



 
 
Download Assembly Instructions with Text



Warning! Ignoring the safety and assembly instructions may result in **SERIOUS OR FATAL INJURIES** from tip over or the falling of the product and the electrical appliances. Opening the package represents your undertaking to closely read and follow the instructions. This product is not intended for use in public places. **For Safety Instructions, warranty and further information, go to: www.barkanmounts.com › Support › Safety Instructions & Warranty**

For more information: barkanmounts.com

If you are satisfied with the product, please give us a 5 stars ★★★★★ rating on the website you bought it from. If you are not satisfied please contact us at <https://www.barkanmounts.com/support> and we will solve the problem for you.

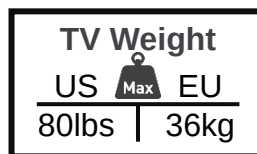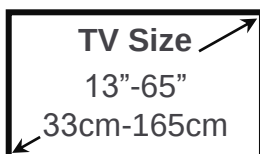

**Safety instructions and installation warnings (provided separately)
must be read in full, prior to assembly.**

 


Warnings!

Tip Over Hazard!




Anchor the product to the wall – using 2 strong cables

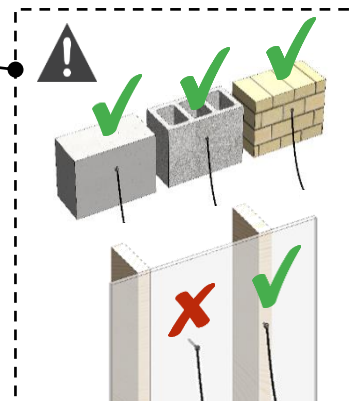

Collision Hazard – place the product in a position that will prevent people from colliding with it




Do not place the product on inclined surfaces, at the edge of a surface or near stairs

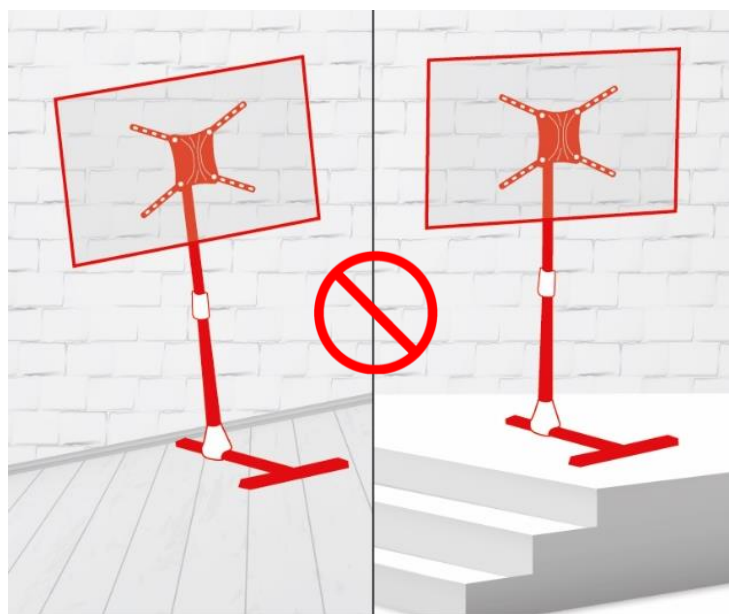

Keep children under the age of 15 away from the product



Adjust the TV tilt angle carefully. Using excessive force might break the screen or tip over the product.

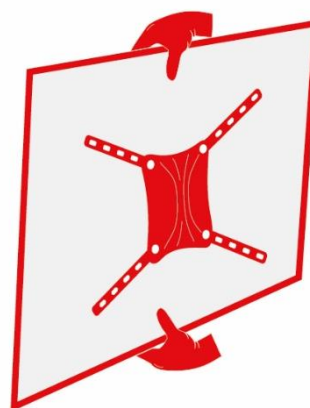

Main Parts

S Swivel Mechanism

T1 Anchor
cables

F Upper pipe

P11 Plastic cover

P10 Plastic cover

C Central base

 
A TV plate

B Adaptor x4

E Lower pipe

P12 Plastic cover

D Front base

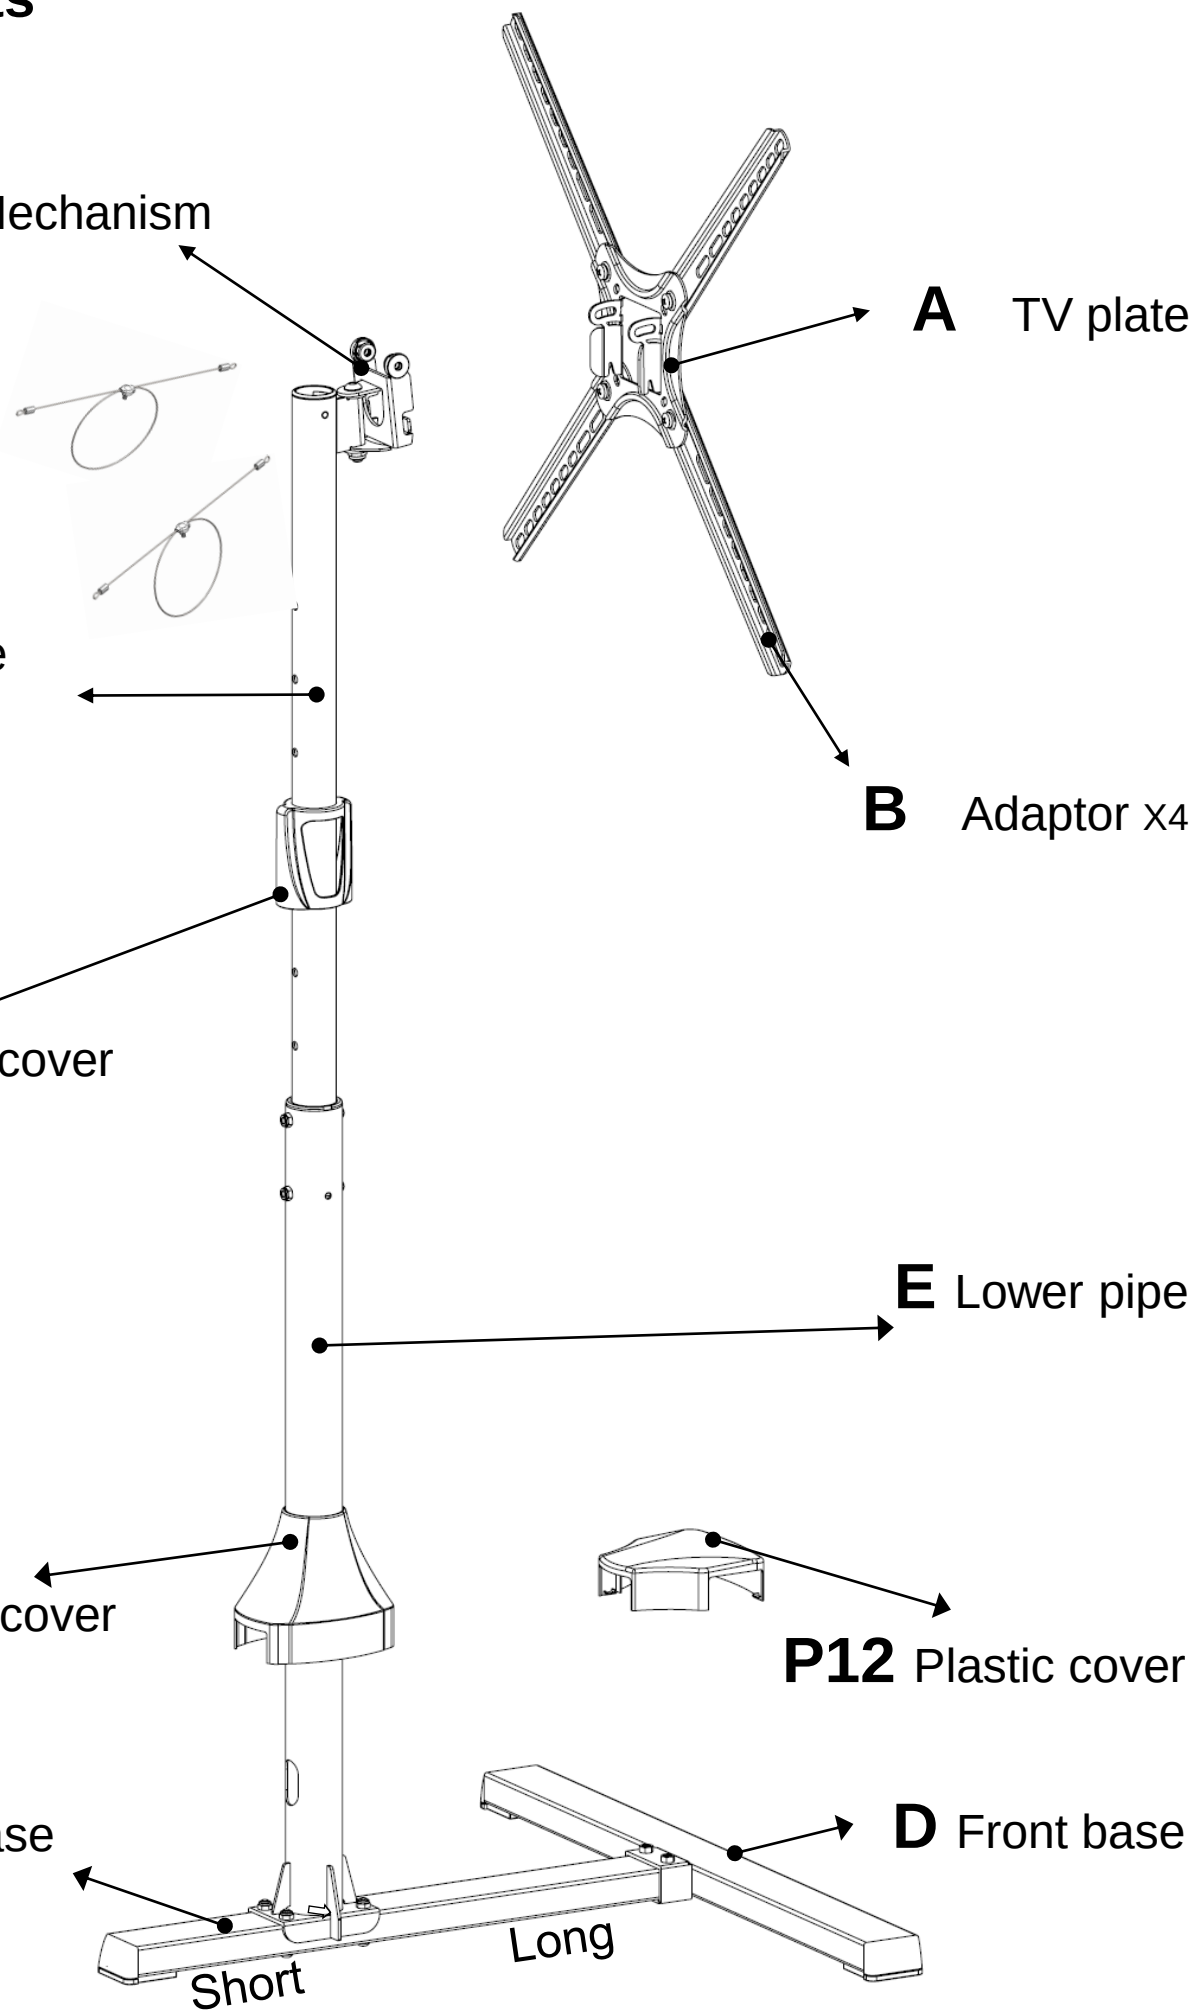

Z6



x6

Z7



x4

Z8



M6
x2



#	M	L mm	L inch	pcs
Z1	4	20	$\frac{3}{4}$	4
Z2	6	16	$\frac{5}{8}$	4
Z3	6	25	1	4
Z4	8	25	1	4
Z5	8	45	$1\frac{3}{4}$	4

Z9



 
x2

Z10




x4

Y1

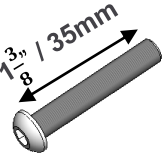

6x

 Y2

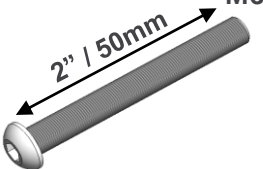


x2

Y3



M6
x2

 Y4



M6
x6

Y5



x1

T1



x2

T2



x2

T3



 
x2

 
T4



x2



Required Tools

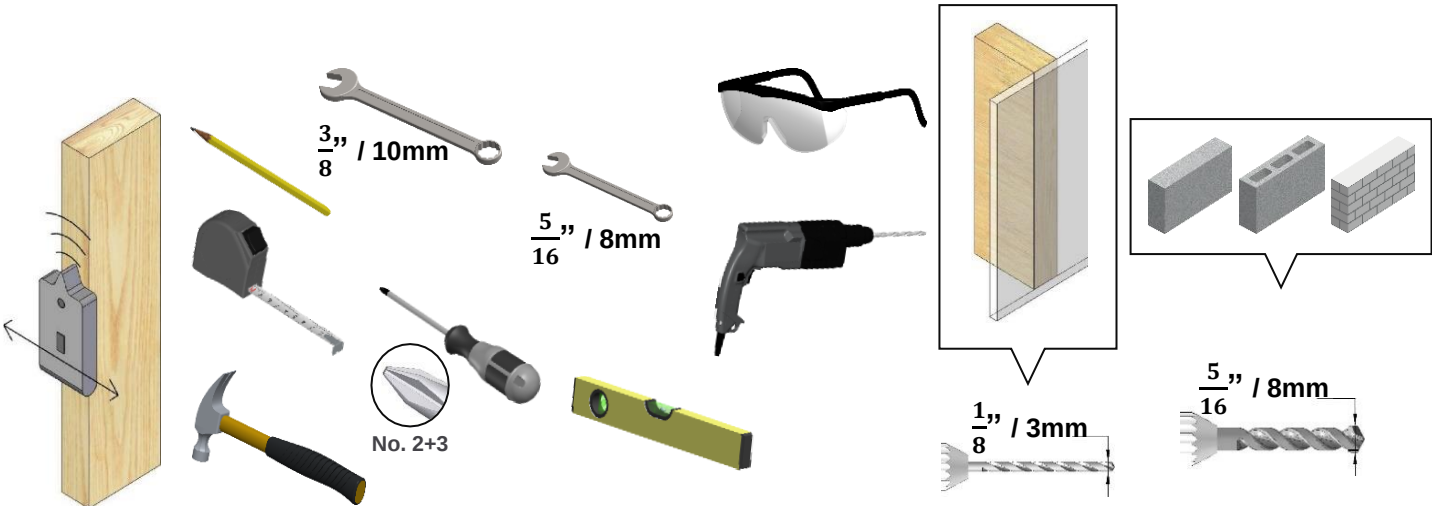


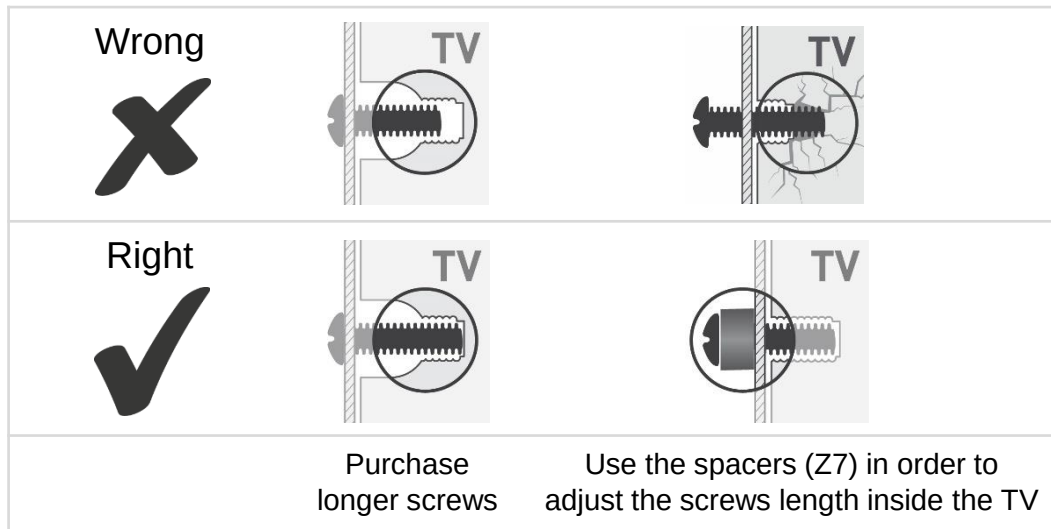


1

  Continue according to your TV mounting hole pattern

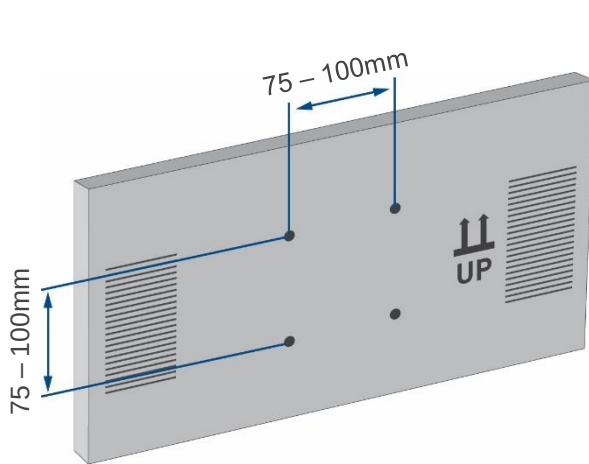



1a

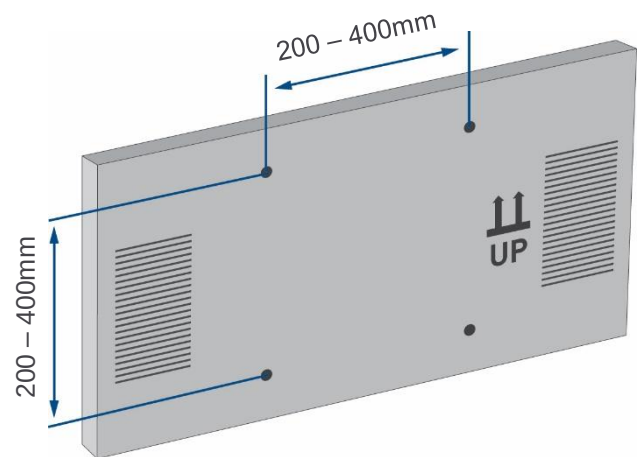  

1b

Page 6

  1a 75x75 mm up to 100X100 mm hole pattern

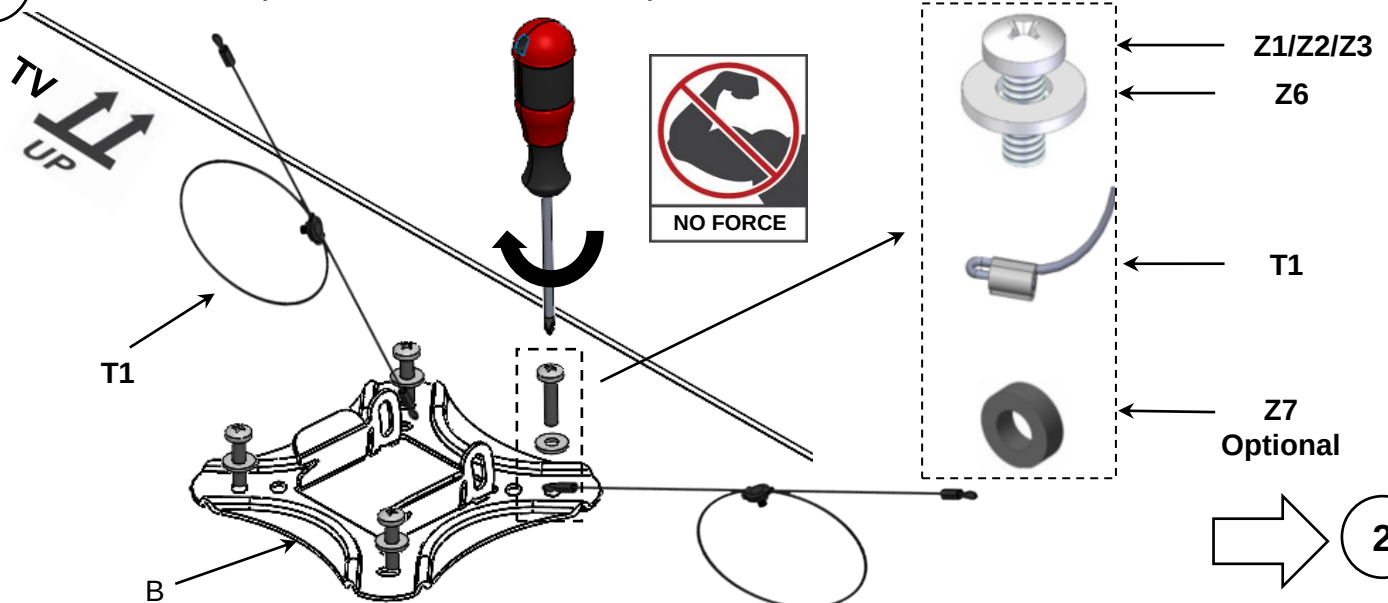


2

Page 8


1b Hole pattern 100x200 mm up to 400x400 mm:

 ① Disassemble the screws


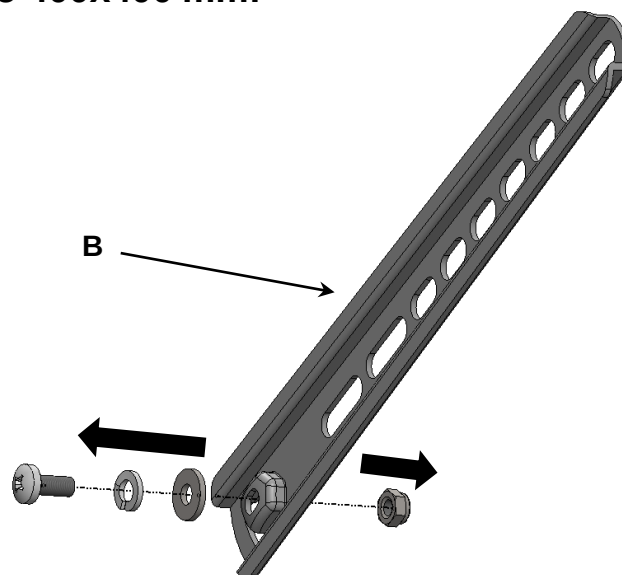


② Connect the 4 adaptors to the TV plate, and reassemble the screws

 Flat TV

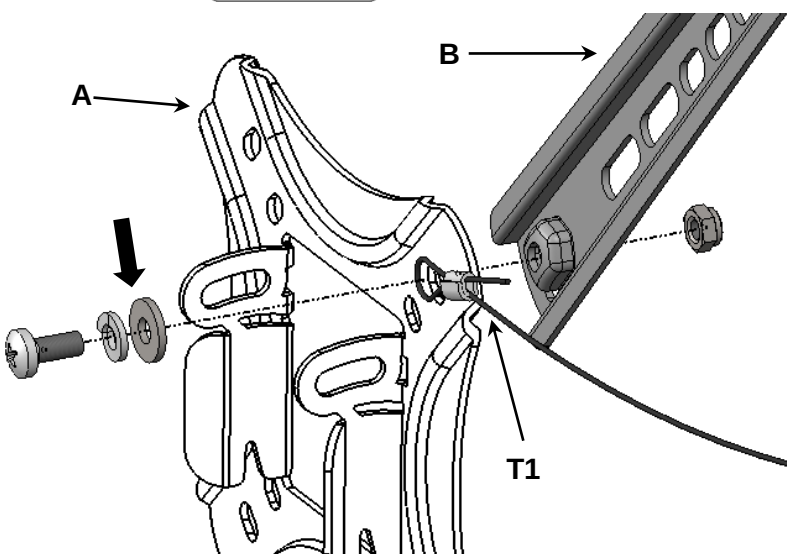



Curved TV

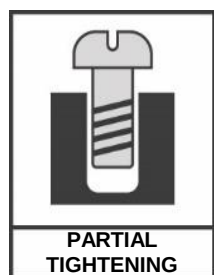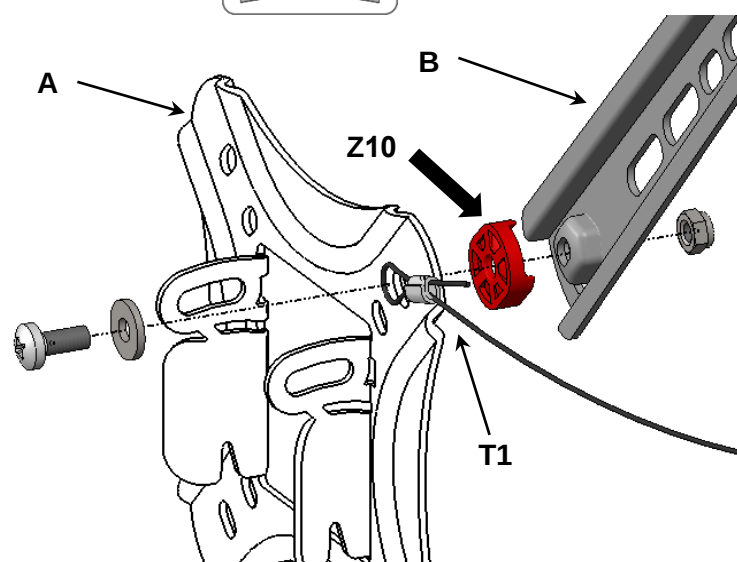  


Z10



  
Right

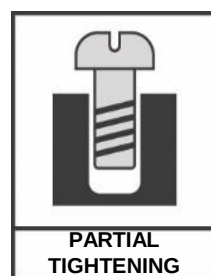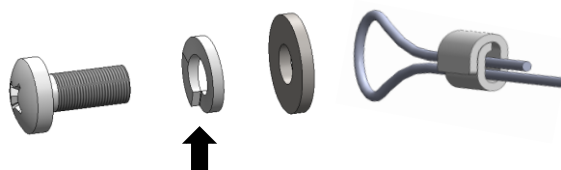


Right

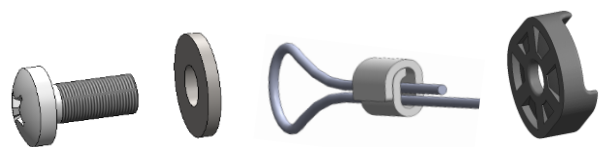 


Wrong

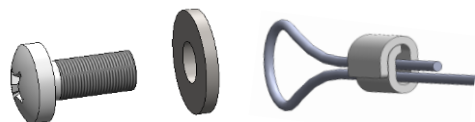 

Wrong

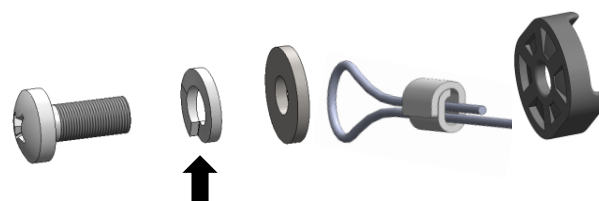 


 Position the Adaptors according to your TV's hole pattern

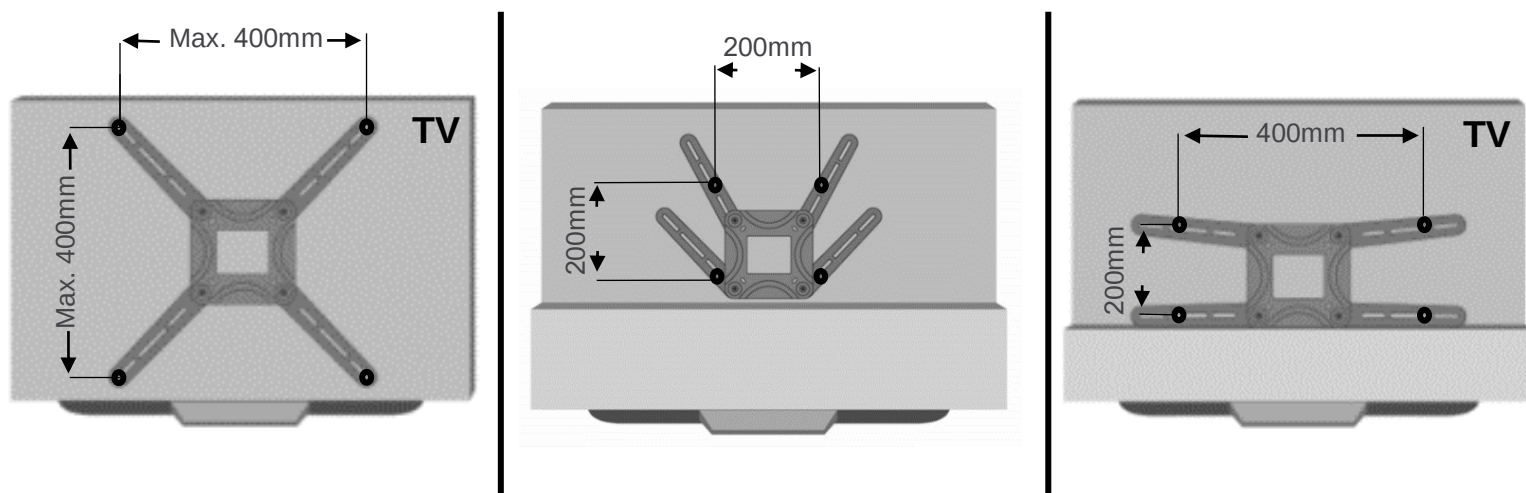


For more positioning options turn to page 13

 
Connect the TV Plate with the Adaptors to the TV in all 4 connection holes

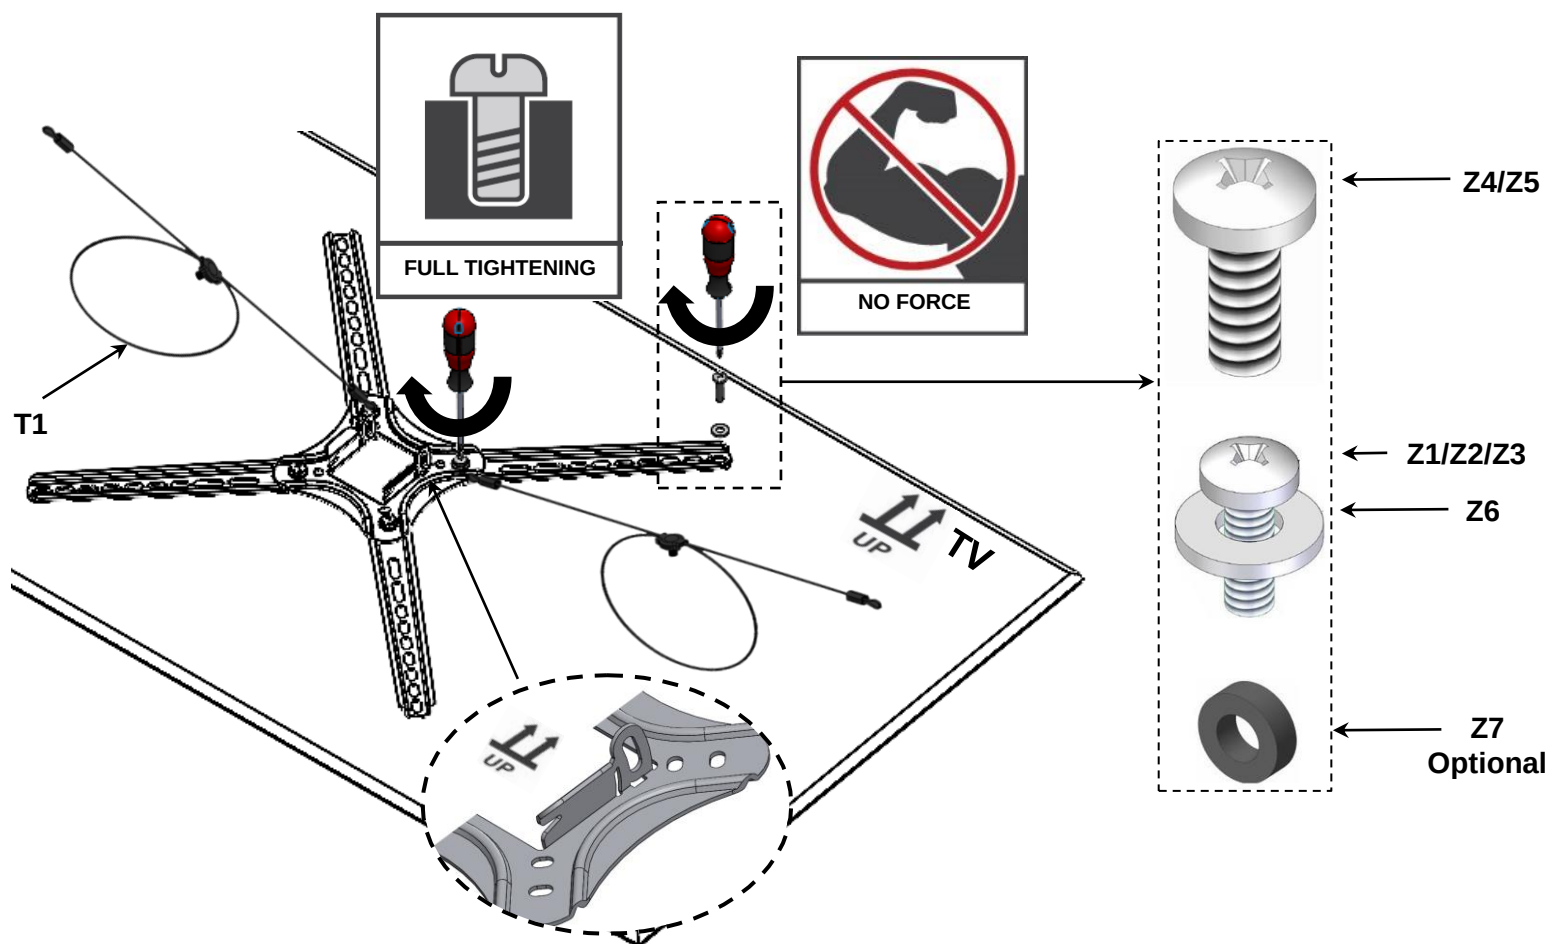

2 Connect central base (C) to front base (D).

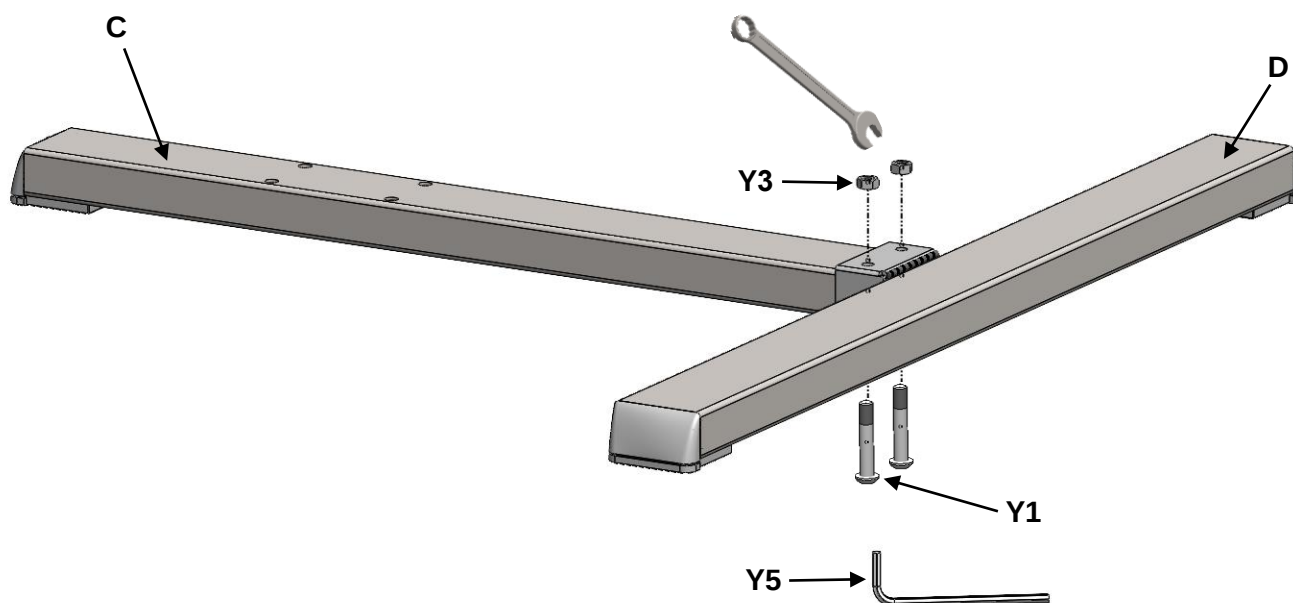


3 Connect the lower pipe (E) to the central base profile (C). Make sure that the cable hole is in the back.

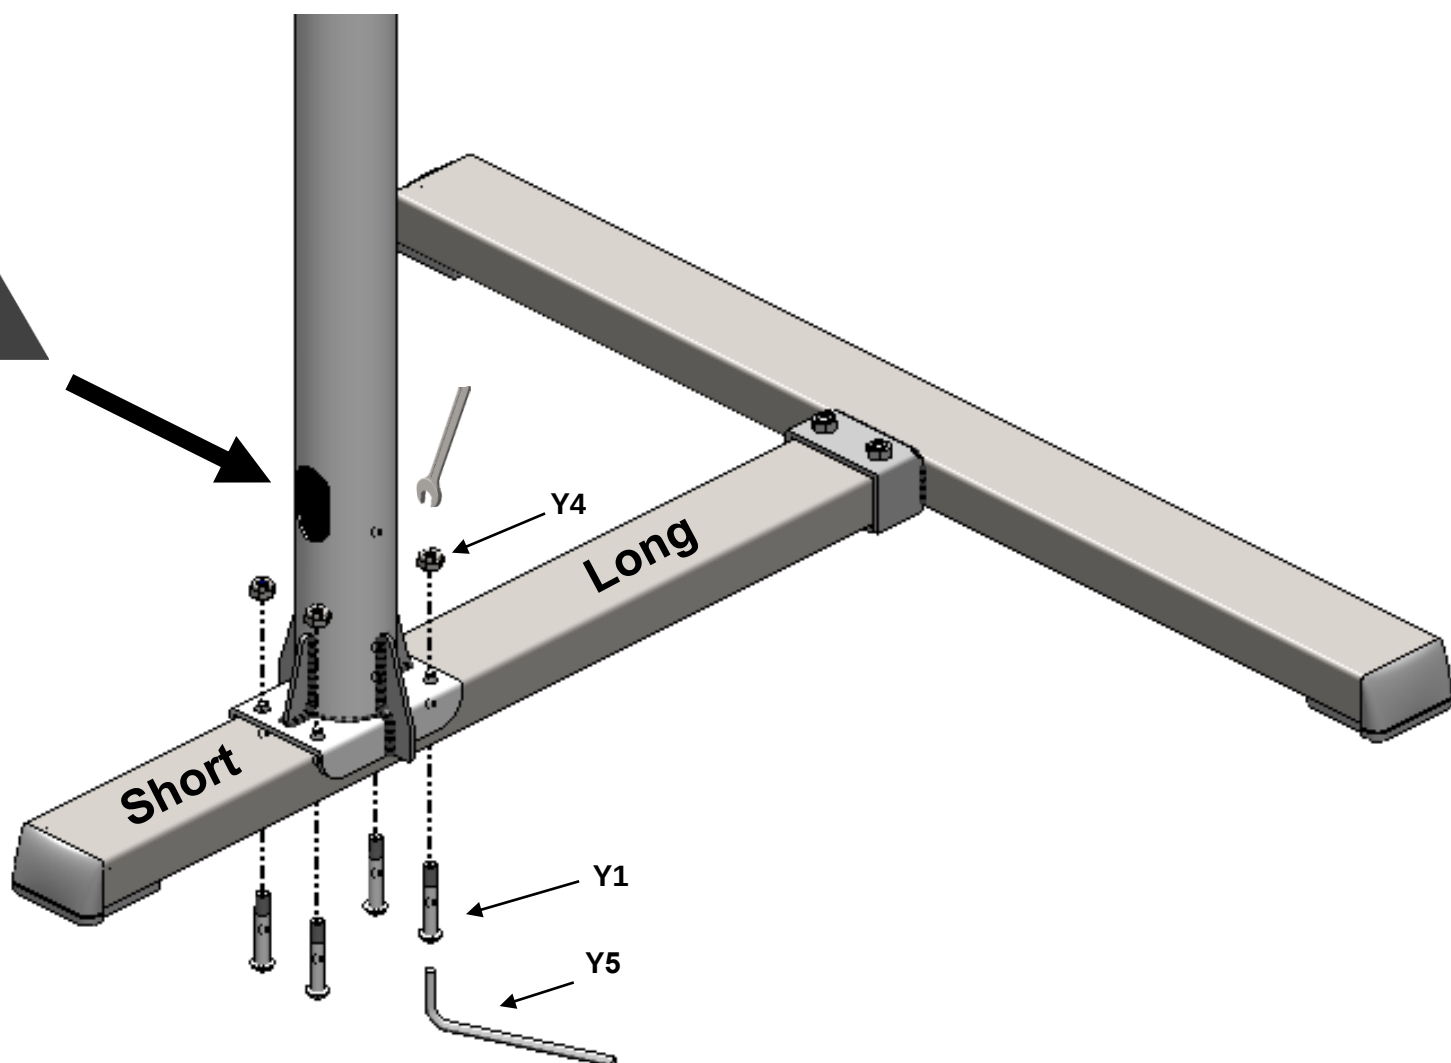

4

Assemble the plastic covers:

1. Slide P10 to the bottom of the lower pipe.
2. Place P11 on the top of the lower pipe.
3. Place P12 on the connections between the beams.
4. Slide the upper pipe into the lower pipe.

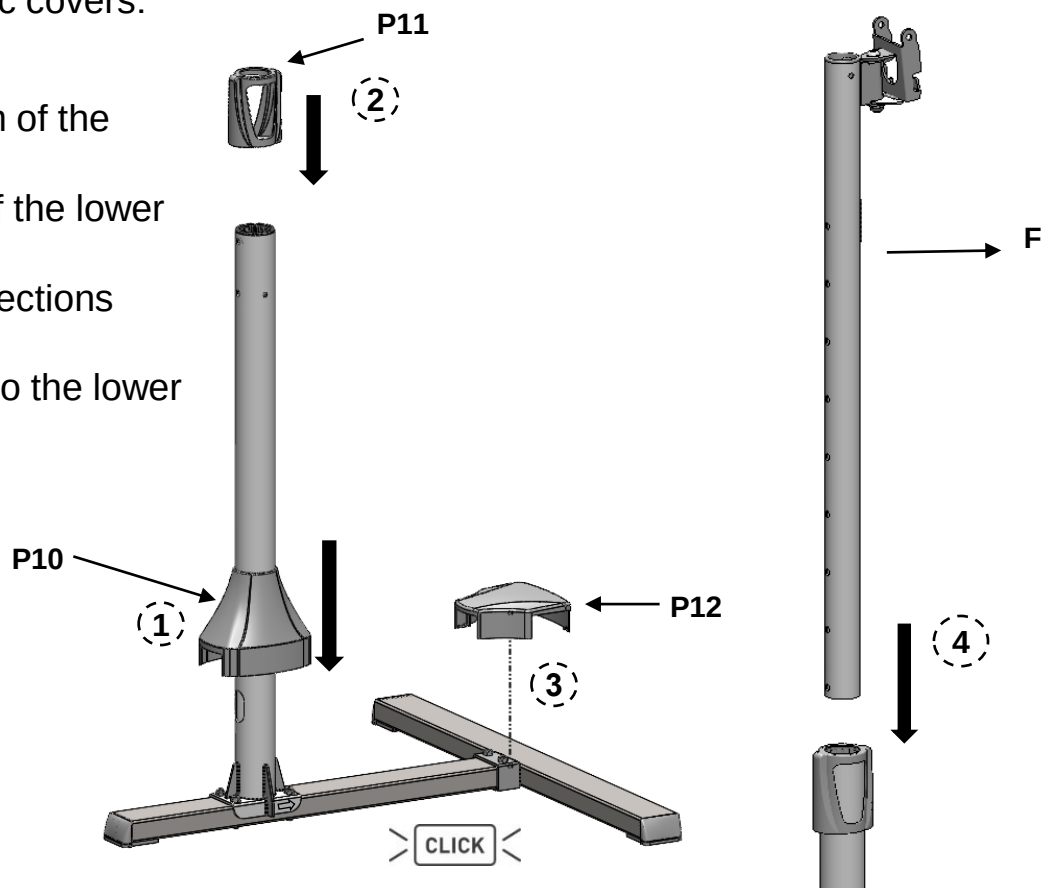


5

- (1) Pass the cables through the pipes.




- (2) Adjust the stand to the desired height and connect the screws

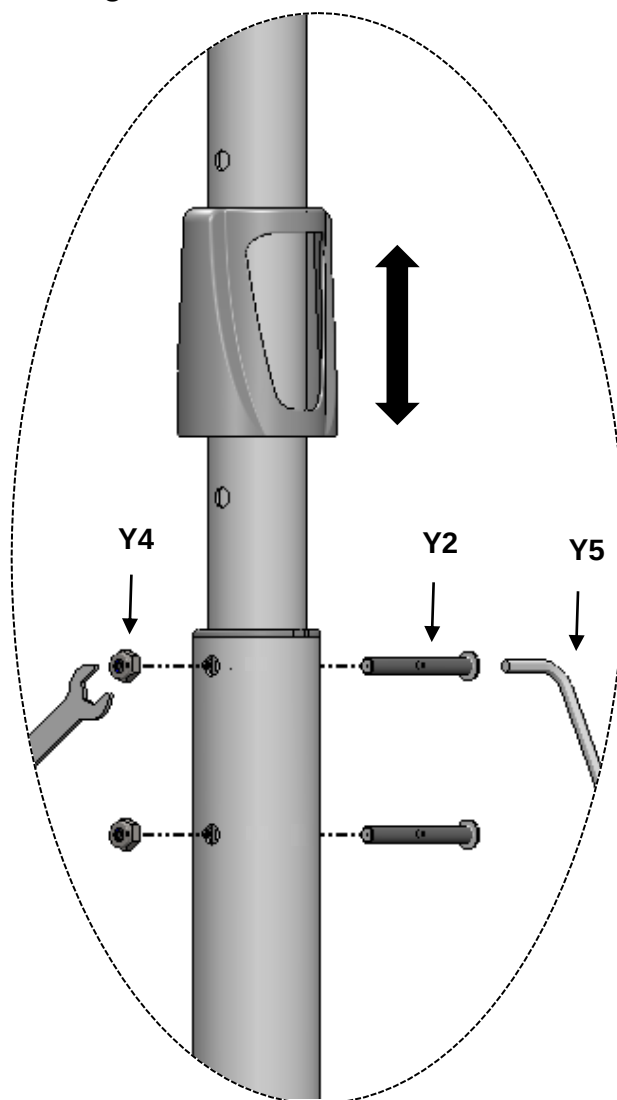


6 Weight test



Apply force on the upper part of the product and make sure it is assembled properly.

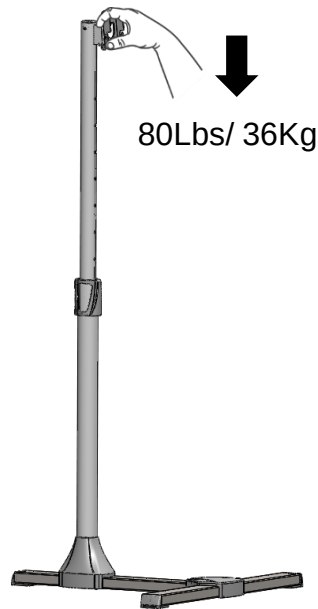

7 Attach the plastic nut-housings (Z9), and then insert the nut (Z8).


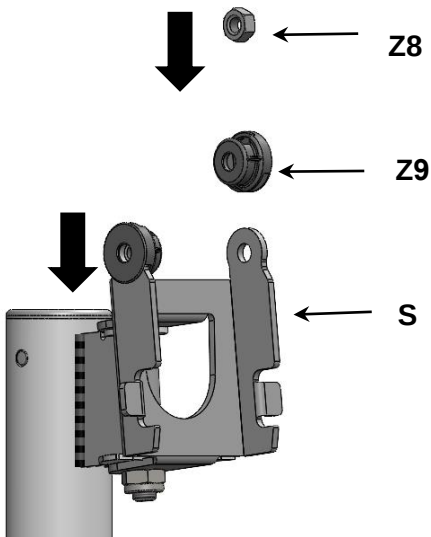


8 Connect the TV with the TV plate to the tripod

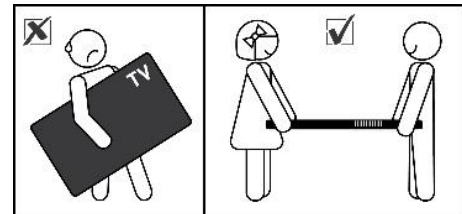
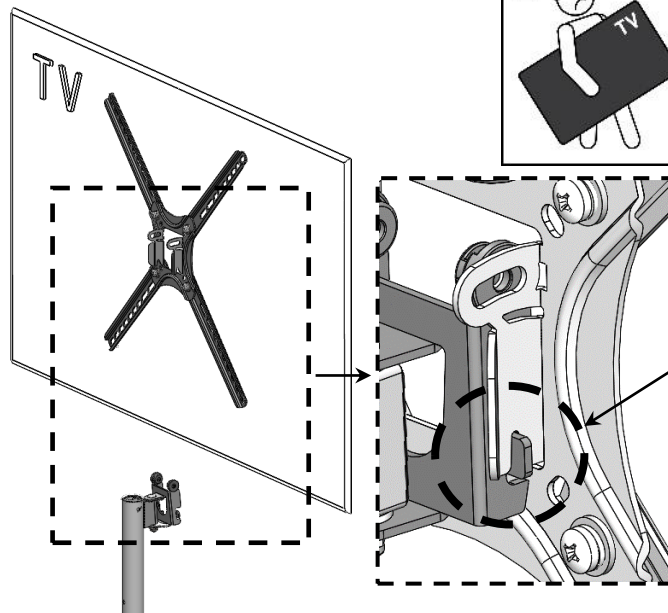


Make sure that the TV Plate slots are positioned properly

9 Insert and tighten the screws from both sides to create friction for the tilt mechanism. Adjust the TV tilt angle carefully.

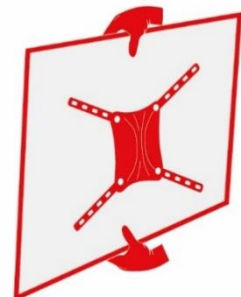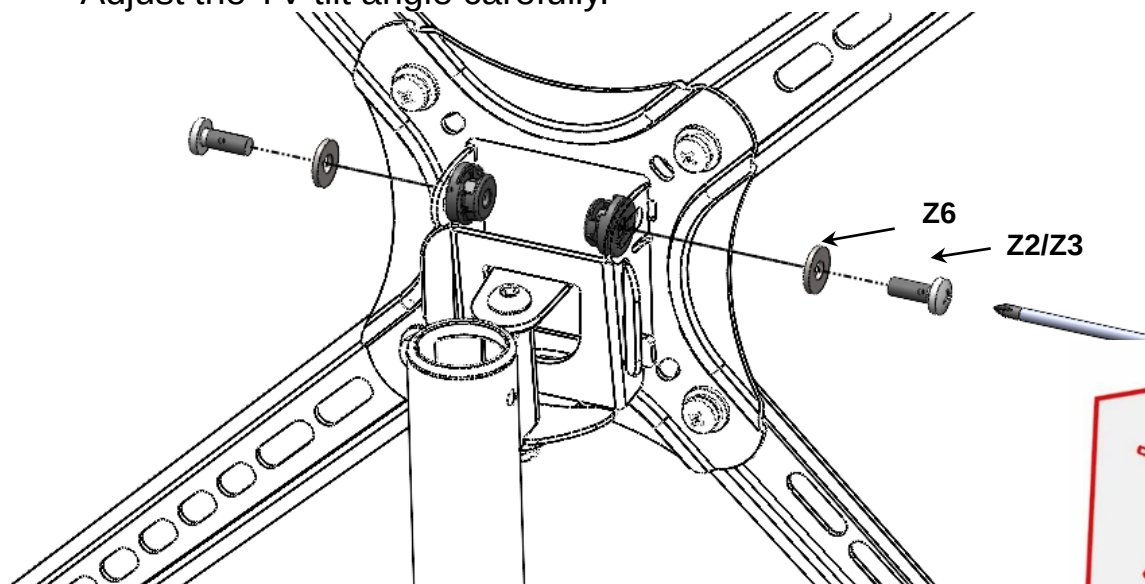


- 10** Mark the holes on the wall according to the desired position

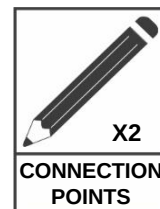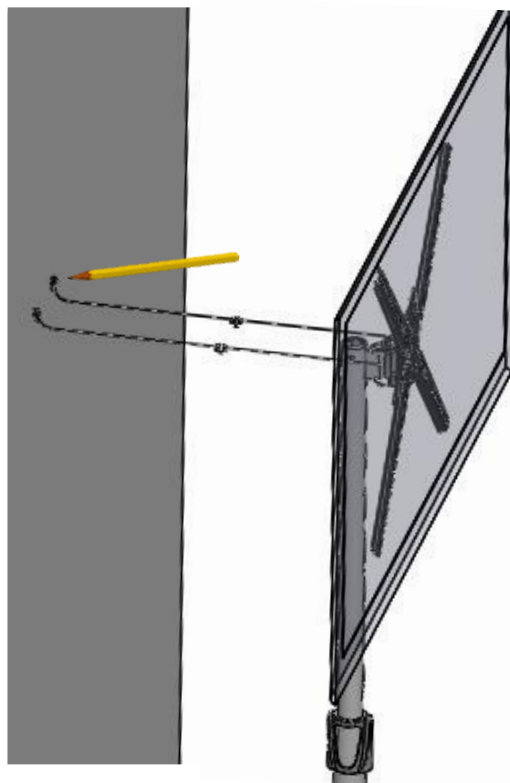


11

Follow the steps according to your wall type


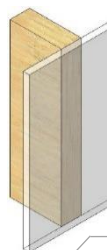


Make sure all holes are drilled inside the studs


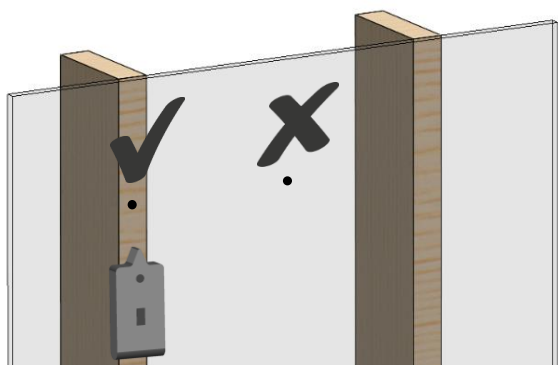


Use a Stud Finder


Drill with $\frac{1}{8}$ " \ 3mm drill bit

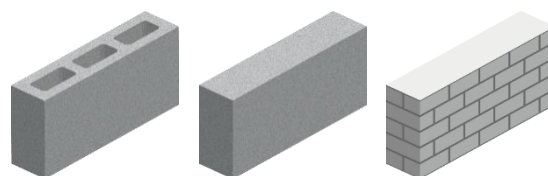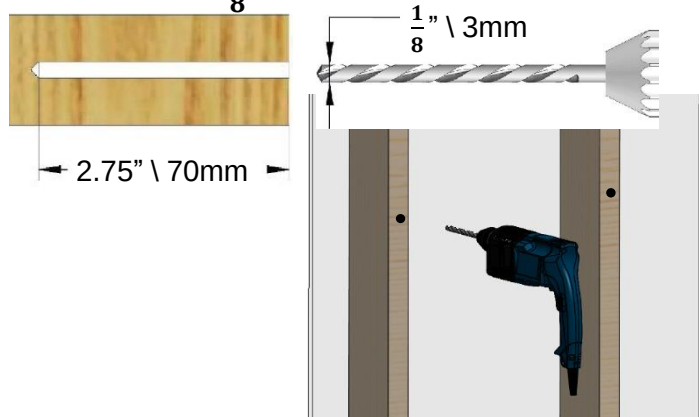


Drill with $\frac{5}{16}$ " \ 8 mm drill bit

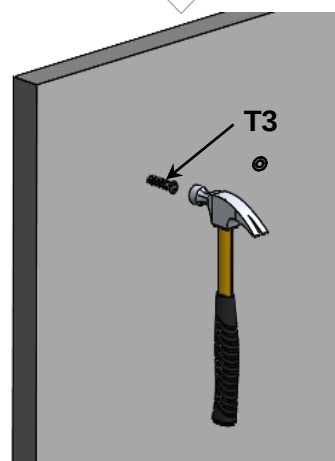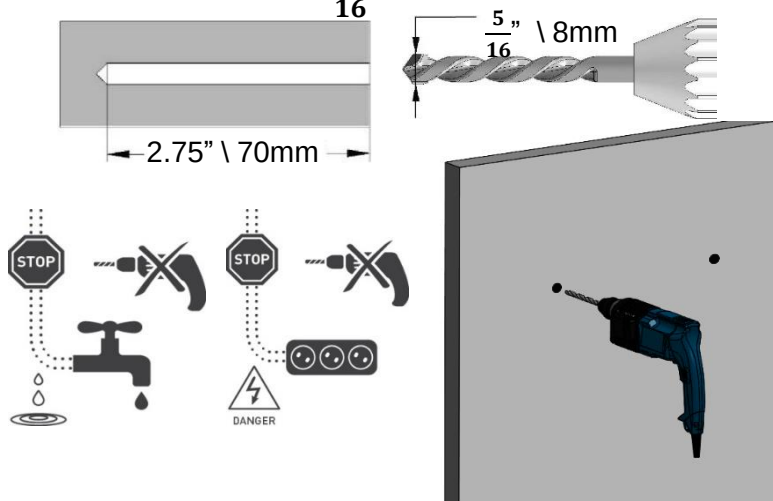



- 12** Connect the cables (T1) to the wall .

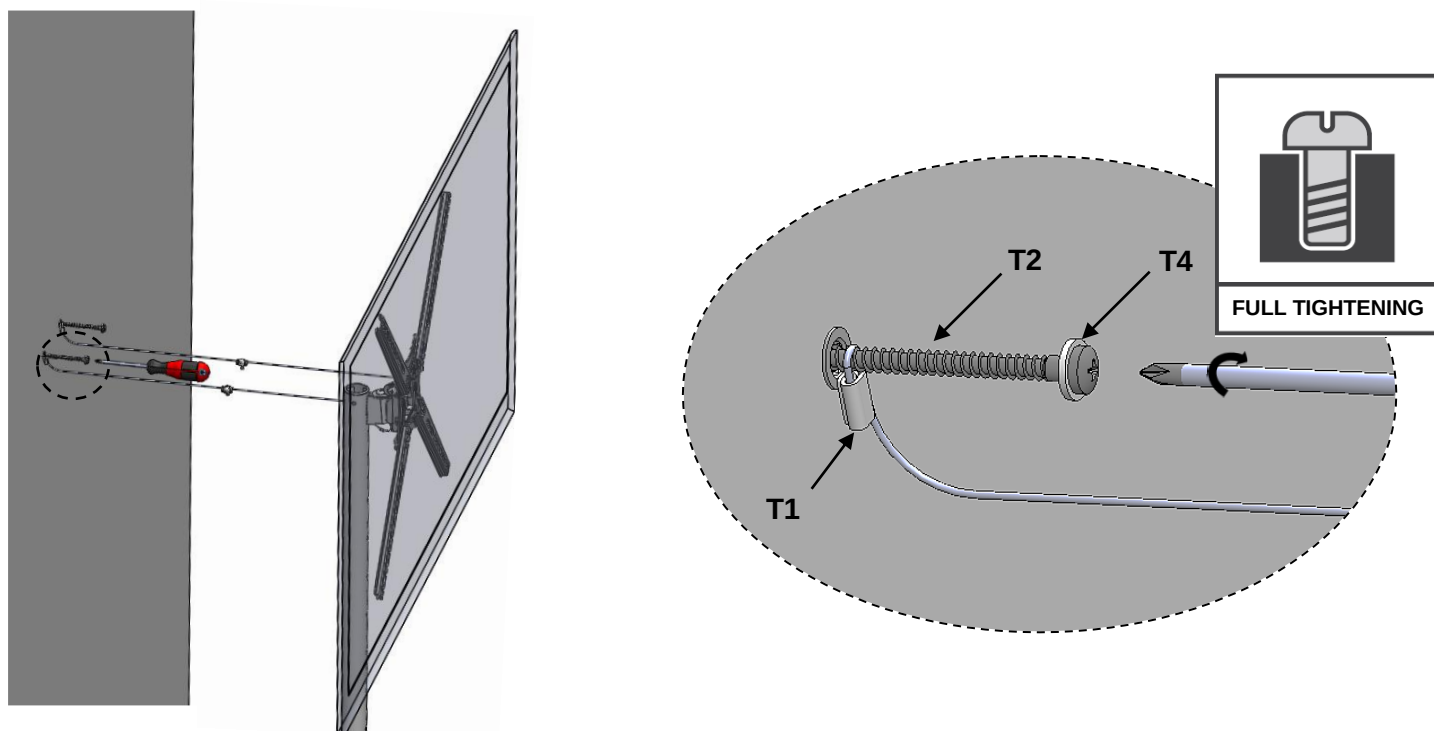

- 13** Make sure the cables are tighten. You can adjust the length using a wrench.

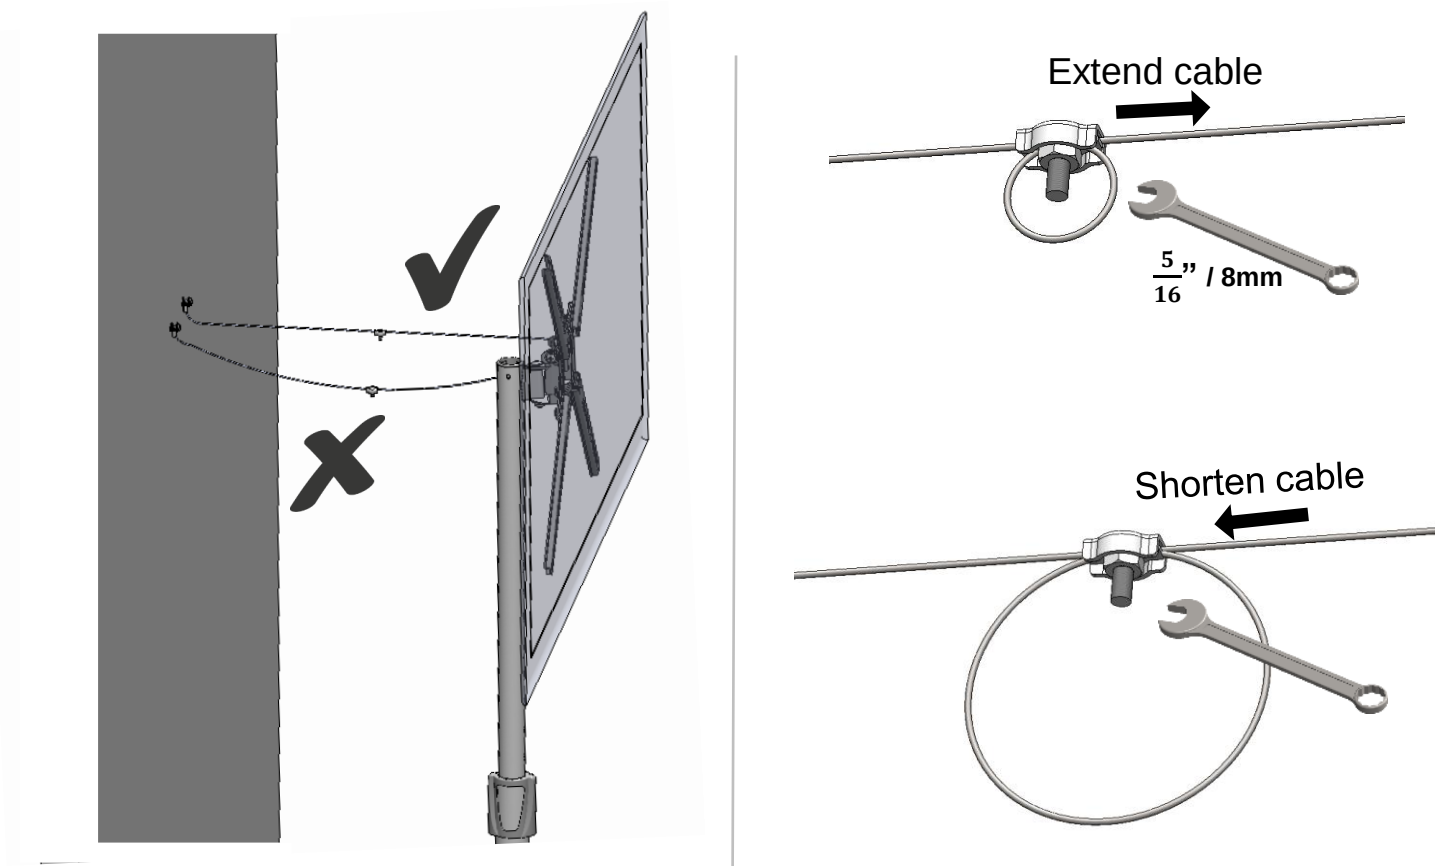


- 14** Level the TV.

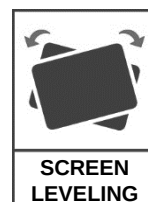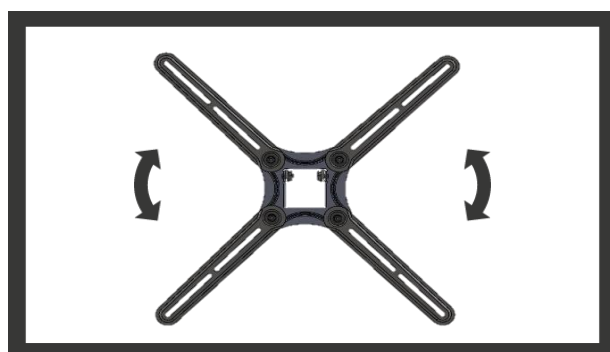

BACKSCREEN CONNECTION POSITIONING OPTIONS


1

75x75, 100x100

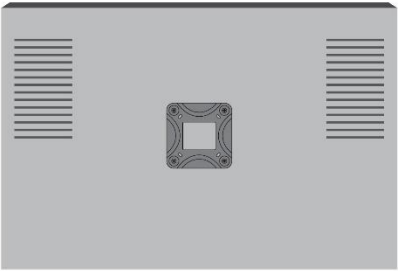


2

 200x100

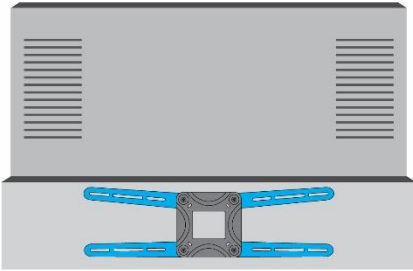


3

 300x200, 400x200, 400x300

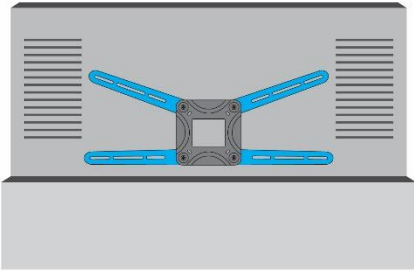


4

 200x200, 300x300

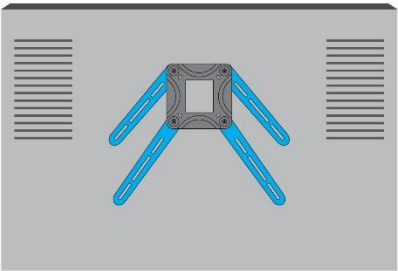


5

 200x200, 300x300

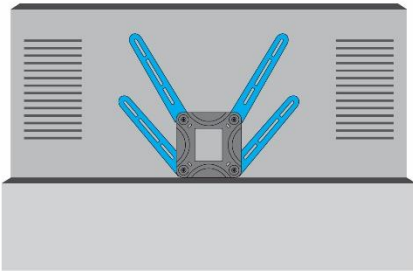


6

 100x200

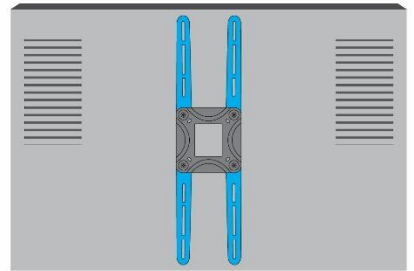


7

 200x200, 300x300, 300x400, 400x400

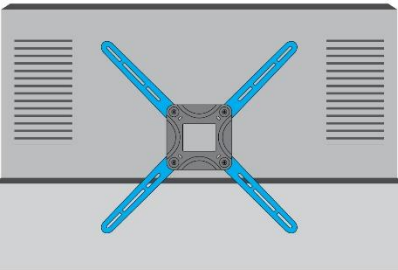

8

 300x200, 400x200, 400x300

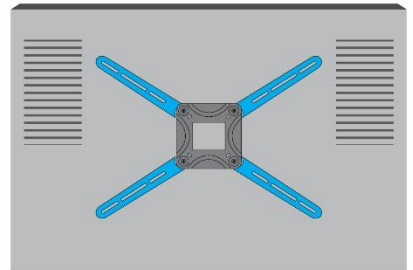



www.barkanmounts.com/FAQ