



‘Franco’ Outdoor Range

Grace your patio with the unending elegance of the ‘Franco’ Outdoor Dining Setting. Delight in the warm tones and robust construction of acacia timber framing and enjoy plush seating thanks to resilient polyester fabric upholstered foam and fibre cushioning. With beautiful seating options surrounding a gorgeous ceramic top dining table with convenient cupboard storage, it’s sure to make your alfresco entertaining shine.

CONSTRUCTION

- **Frame:** Acacia Timber, Ceramic Tabletop
- **Finish:** Light Finish
- **Fabric Material:** Polyester
- **Seat Cushion Filling:** Foam and Fibre
- **Back Cushion Filling:** Foam and Fibre

FEATURES AND BENEFITS

- Acacia timber frame
- Ceramic tabletops
- Storage cupboard feature in high dining table

AVAILABLE OPTIONS



3-Piece Chat Setting
(70180)

Setting consists of two armchairs and a side table.



4-Piece Lounge Setting
(70179)

Setting consists of a 3-seater sofa, two armchairs and a rectangular coffee table.



6-Piece Rectangular High Dining Setting
(79812)

Setting consists of a 150 x 98.5cm rectangular high dining table, four cushioned high dining chairs, and a cushioned high dining bench.

Harvey Norman®

Store:

Staff Member:

Phone Number:

Measurements are in cm and are approximate only. While we aim to ensure that the information on this fact sheet is correct at the time of printing, it is sometimes necessary for changes to be made to product specifications. To avoid disappointment, we suggest that you obtain confirmation of product specifications and availability with your Harvey Norman Salesperson before placing your order. Images are for illustrative purposes only. Actual product colours may vary. *Accessories shown are not included.*

PRODUCT DIMENSIONS



3-Seater Sofa
W198 x D88.1 x H85.6cm



Armchair
W78 x D88.1 x H85.6cm



Coffee Table
W127.5 x D65 x H38.8cm



150cm Rectangular High Dining Table
W150 x D98.5 x H93cm



Side Table
W50 x D50 x H50cm



High Dining Chair
W63.5 x D59 x H104.9cm



Bench
W120 x D40 x H60.3cm

CARE INSTRUCTIONS

- Every 4-6 weeks; wash with a mild detergent and warm water, and then rinse with clean water. Ensure it is dried thoroughly to avoid oxidation.
- Dust your furniture regularly as dust may cause the surface to pit.
- Refer to the manufacturer's warranty card for specific cleaning instructions.

Timber

- Ensure all bolts are tightened periodically, as the harsh Australian climate will cause timber to expand and contract which can loosen bolts.
- Protect furniture from weather exposure as much as possible.
- Keep outdoor furniture covered when not in use.
- Dust your furniture regularly as dust may cause the surface to pit.
- Refer to the User Manual and Warranty for specific cleaning instructions.

Fabric

- Vacuum regularly, clean up spills immediately by blotting; do not rub spillage.
- Store cushions in a dry area when not in use to prolong the fabric's life span.
- Do not machine wash or tumble dry; fabrics may fade when exposed to long periods of sunlight.



Harvey Norman®

harveynorman.com.au or call 1300 464 278 for your local store.

Measurements are in cm and are approximate only. While we aim to ensure that the information on this fact sheet is correct at the time of printing, it is sometimes necessary for changes to be made to product specifications. To avoid disappointment, we suggest that you obtain confirmation of product specifications and availability with your Harvey Norman Salesperson before placing your order. Images are for illustrative purposes only. Actual product colours may vary.