



‘Woodland II’ Outdoor Range

Brighten your entertaining area with the ‘Woodland II’ outdoor range. Durability meets classic feel and modern design without compromising comfort, perfect for entertaining and relaxing.

CONSTRUCTION

- **Frame:** Timber – Eucalyptus
- **Finish:** Woodland Light, Terrazzo Tabletop
- **Fabric Material:** Polyester
- **Seat Cushion Filling:** Foam and Fibre
- **Back Cushion Filling:** Foam and Fibre

FEATURES AND BENEFITS

- Thick back and base cushions
- Contoured arm for added comfort
- Ornate back design
- Terrazzo Tabletop
- Includes cover

AVAILABLE OPTIONS



4-Piece Lounge Setting

(78772)

Setting consists of a 2-seater sofa, two armchairs and a round coffee table. Includes four scatter cushions (as pictured).



3-Piece Chat Setting

(78773)

Setting consists of two armchairs and a round side table. Includes two scatter cushions (as pictured).

Harvey Norman®

Store:

Staff Member:

Phone Number:

Measurements are in cm and are approximate only. While we aim to ensure that the information on this fact sheet is correct at the time of printing, it is sometimes necessary for changes to be made to product specifications. To avoid disappointment, we suggest that you obtain confirmation of product specifications and availability with your Harvey Norman Salesperson before placing your order. Images are for illustrative purposes only. Actual product colours may vary. *Accessories shown are not included.*

PRODUCT DIMENSIONS



2-Seater Sofa
W186.6 x D88.6 x H65cm



Armchair
W92 x D88.6 x H65cm



Round Coffee Table
W100 x D100 x H40.5cm



Round Side Table
W50 x D50 x H53cm

CARE INSTRUCTIONS

- Dust your furniture regularly as dust may cause the surface to pit.
- Every 4-6 weeks; wash with a mild detergent and warm water, and then rinse with clean water. Ensure it is dried thoroughly to avoid oxidisation.
- Refer to the manufacturer's warranty card for specific cleaning instructions.

Fabric

- Vacuum regularly, clean up spills immediately by blotting; do not rub spillage.
- Store cushions in a dry area when not in use to prolong the fabric's life span.
- Do not machine wash or tumble dry; fabrics may fade when exposed to long periods of sunlight.

Timber

- Ensure all bolts are tightened periodically, as the harsh Australian climate will cause timber to expand and contract, loosening the bolts.
- Keep outdoor furniture covered.
- Dust your furniture regularly as dust may cause the surface to pit.
- Refer to the manufacturer's warranty card for specific cleaning instructions.



Harvey Norman®

harveynorman.com.au or call 1300 464 278 for your local store.

Measurements are in cm and are approximate only. While we aim to ensure that the information on this fact sheet is correct at the time of printing, it is sometimes necessary for changes to be made to product specifications. To avoid disappointment, we suggest that you obtain confirmation of product specifications and availability with your Harvey Norman Salesperson before placing your order. Images are for illustrative purposes only. Actual product colours may vary.