 


ELECTRIC MASSAGE CHAIR

MASCHR-E-BRISA-GY

U S E R M A N U A L

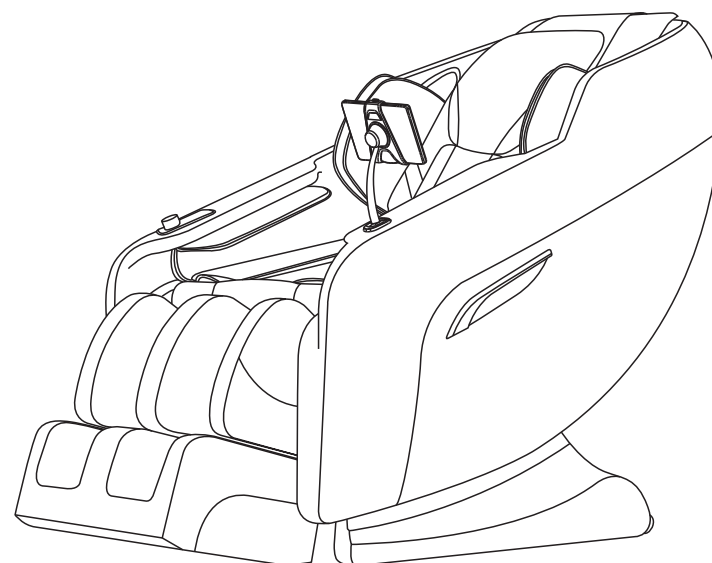

Thank you for choosing our product and your support. In order to understand the directions fully, please read user's manual carefully. And after reading, please keep it for next browsing. We reserve the right of final explanation to the design of product. Dimensions and specifications are subject to change without notice for further improvement.

Contents

Safety -----	1-6
Preparation Before Use-----	7-9
Move the Chair -----	7
Place the Chair -----	7
Installation -----	8-9
Bluetooth pairing-----	9
Components -----	10-16
Outer Structure -----	10
Controller -----	11
Function of Controller-----	12
Shortcut Key-----	14
Control Display -----	15
Voice Control -----	17
Cleaning and Maintenance -----	18
Troubleshoot-----	19
Specifications -----	20

Safety

IMPORTANT SAFETY INSTRUCTIONS

This massage chair is intended for household only. When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using this massage chair.

DANGER-To reduce the risk of electric shock:

- 1) Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- 2) Never use pins or other metallic fasteners with this appliance.
- 3) Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.
- 4) Keep Dry - Do not operate in a wet or moist condition.

WARNING-To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1) An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- 2) Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- 3) Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons. Keep children away from extended foot support.
- 4) Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 5) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
Return the appliance to a service center for examination and repair.
- 6) Do not carry this appliance by supply cord or use cord as a handle.
- 7) Keep the cord away from heated surfaces.
- 8) Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- 9) Never drop or insert any object into any opening.

- 10) Do not use outdoors.
- 11) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 12) To disconnect, turn all controls to the off position, then remove plug from outlet.
- 13) Temperatures sufficiently high to cause burns may occur regardless of the control setting. Do not use on an infant or invalid or on a sleeping or unconscious person. Do not use on insensitive skin or on a person with poor blood circulation. Check the skin in contact with the heated area of the appliance frequently to reduce the risk of blistering.
- 14) Do Not Crush - Avoid sharp folds.
- 15) Do not use massager in close proximity to loose clothing or jewelry.
- 16) Keep long hair away from massager while in use.
- 17) Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 19) An apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection
- 20) The appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- 21) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 22) If it is not in use for a long time or after use, please turn off the power and pull out the power plug.
- 23) Do not damage, break, over-bend, compress, tighten, wind, rotate or knot the power cord.
- 24) This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

SAVE THESE INSTRUCTIONS

This massage chair is intended for household use only.

● Usage Environment

- Do not use the massage chair in an excessively humid or dusty environment as this may result in malfunction or electric shock.
- Do not use the massage chair in a room with a temperature of 104°F or higher.
- Do not expose the massage chair to heaters, stoves or direct sunlight.
- Place and use the massage chair on an even, non-slip floor.
- The massage chair is designed for home use and not for commercial purposes.

Caution

- The massage chair is to be used indoors only.
- If you use the massage chair in a cold room, do not increase the room temperature abruptly. It is recommended that you increase the temperature gradually to a normal level.
- If the massage chair is stored in a cold place and is being brought into a warm environment, it is advisable to wait one hour before use. This is because its performance may not be at optimum level, as there may be water droplets on the mechanical parts due to condensation. Using the massage chair under such conditions may result in malfunction.

IMPORTANT SAFETY INSTRUCTIONS

● Safety Precautions

- To ensure safe and correct use of the massage chair, do not operate it without reading this operation manual carefully.
- Do not use the massage chair when the upholstery or seat is removed. This may cause injury or malfunction.
- Do not use the massage chair in combination with other therapeutic equipment or electric blanket, etc., as this may result in ineffectiveness or injury.
- Do not use the massage chair an hour before or after eating as this may have adverse effects on the user.
- Do not allow children or pets to play around the massage chair, e.g., behind the backrest, under the seat or leg rest of the massage chair. This may result in injury.

- Do not rest or place heavy objects on the armrests, leg rest or backrest as this may result in malfunction or injury.
- Do not use the massage chair when your body is wet.
- Do not operate the massage chair with wet hands.
- It is not recommended to use the massage for more than 15 minutes.
- Do not perform continuous massage on the same spot of your body for more than 5 minutes at a time as this may result in excessive stimulation and may have adverse effects.
- Do not insert your hand or foot along the paths of the massage rollers during use as this may cause injury.
- Stop operation immediately if you experience any discomfort.
- This product is not intended for self-treatment of conditions that should be managed by a qualified health care provider.
- People on medication or with medical conditions, please consult your doctor before use.
- Please do not use the product if you are not feeling well.
- Remove all scarves, neckties, necklaces and jewelry before using the massager.

● People with Medical Conditions

Consult your doctor before use if you:

- are under medical rest as ordered by a doctor.
- have spinal disorders, an abnormal spinal condition or have suffered a spinal injury.
- have back problems.
- have diabetes, osteoporosis or sensory impairment.
- have joint dysfunction.
- have a pacemaker or other electronic medical devices.
- may be pregnant.
- have phlebitis or thrombosis.
- have an increased risk for blood clots.
- had recent surgery.
- have surgical pins, screws, or anything mechanical implanted in your body.

● Instances When the massage chair Should Not Be Used

In the following events, please switch off the main power switch immediately and disconnect the power cord from the electrical outlet:

- If water is accidentally spilled onto the massage chair. This may result in electric shock or malfunction.
- If the fabric of the backrest is torn and the internal components are exposed.
- If pain or discomfort is felt during massage, stop operation immediately and consult your doctor.
- If you detect any malfunction or any other abnormal condition during operation.
- If there is a power failure. Injury may occur when power is restored unexpectedly.
- If there is lightning.

● Assembly and Repair of the massage chair

- Do not disassemble the backrest cover of the massage chair. Touching the internal components may result in malfunction or electric shock.
- The massage chair must only be professionally serviced or repaired. Do not attempt to disassemble or repair the massage chair yourself.

● Things to Note About the Power Plug and Cord

 
- Check that the Alternating Current (AC) voltage corresponds with the specifications indicated for the massage chair.
- Do not connect or disconnect the power plug from the electrical outlet with wet hands. This may result in malfunction or electric shock.
- When disconnecting the power plug, pull it by holding the plug, not the cord.
- Although operation will be stopped automatically by the Auto-Timer function, always remember to switch off the main power switch after use.
- Do not place the power cord under the massage chair or any other heavy objects.
- Do not wind the power cord around the massage chair as this may damage the cord and result in a fire or electric shock.
- Do not operate the massage chair with a damaged cord or extension cord.
- Do not use the massage chair if the electrical outlet is loose.
- If the power cord is damaged, it should be replaced by a qualified technician.

● Grounding Instructions

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.


This product is for use on a nominal 220-240V~ circuit and has a grounding plug that looks like the plug illustrated in sketch A as following illustration. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

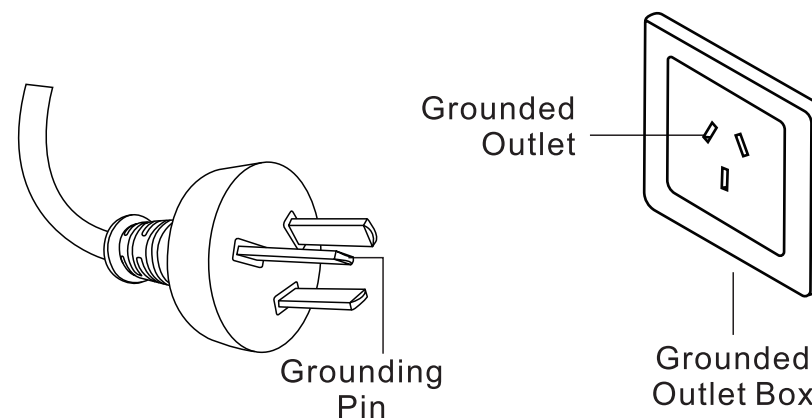

Preparation Before Use


Move the Chair

 - Please turn off the main power and unplug the power from the electrical outlet.
- Tilt the chair backward as shown in the picture below and wheel it to the desired location.
- Please cover the floor with mat when move the massage chair in case of any damage of floor will be made.

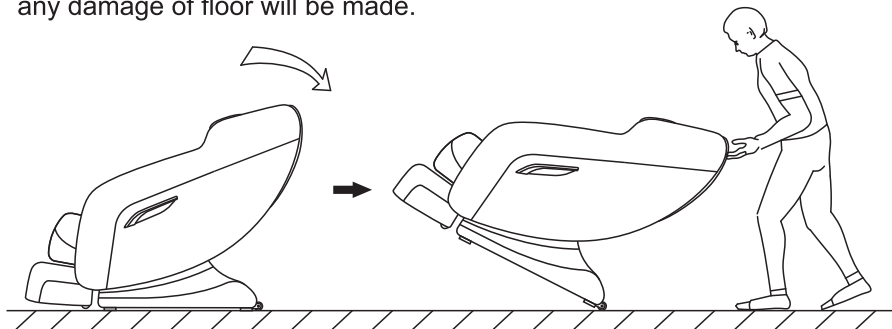

Place the Chair

 Please make sure that there is an allowance of more than 50cm behind the massage chair, and more than 50cm in front of the massage chair to allow the backrest to recline without obstruction during operation.

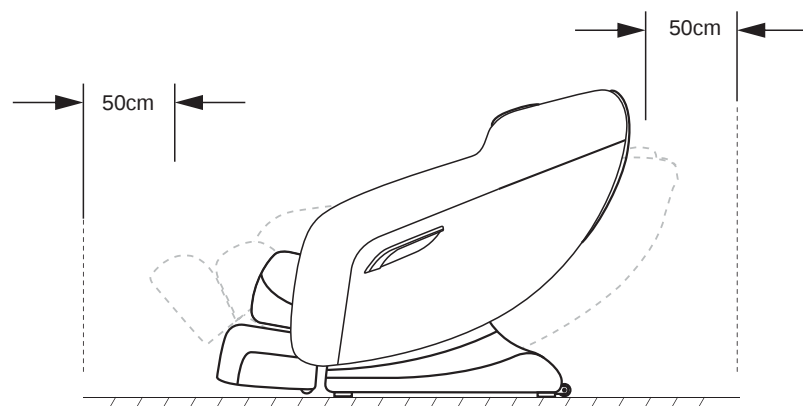


Install Backrest Pad and Pillow Pad

- Attach the upper backrest pad to backrest with zipper.
- Attach the pillow pad to backrest with velcro.



 - Attach the left side of backrest pad to backrest with zipper, same as the other side.

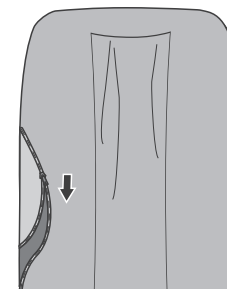

Installation of manual bracket

 
- Aligned holes, lock screw.
- Press down to align the snap.

Note: The arrow direction is towards the front of the handrail.




Remote Controller Connection

- Connect the cable of remote controller with the cable under seat.

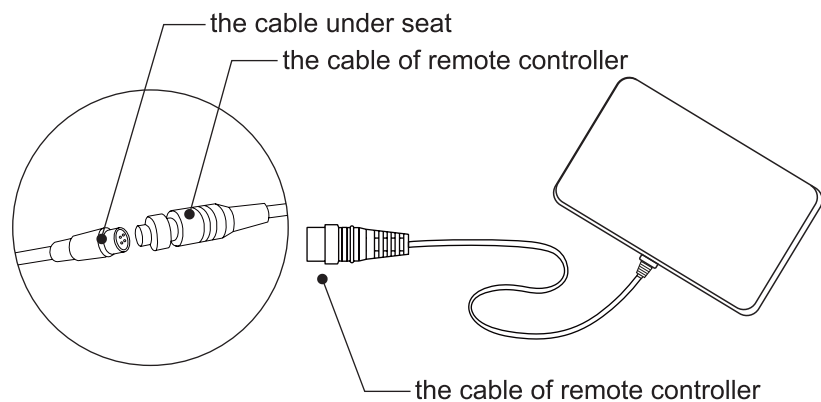


Connect power

 - Plug the power cord into power inlet, turn on the power switch.

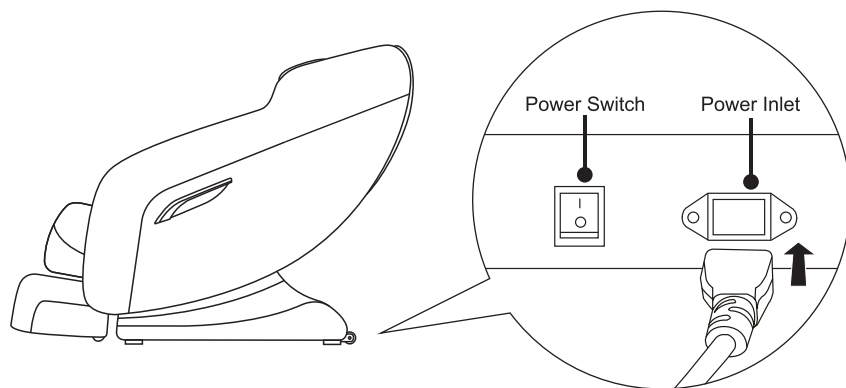



Bluetooth pairing

 On your phone Bluetooth list, choose the model R3B02 to do the pairing, when a sound 'du' is heard, the connection is completed.

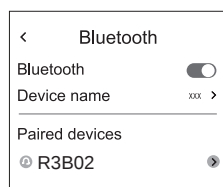


Components

  Outer Structure

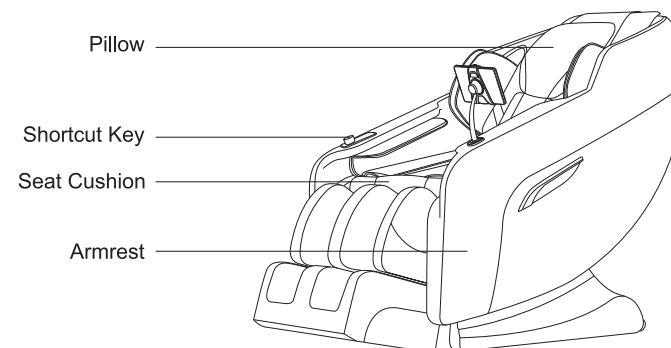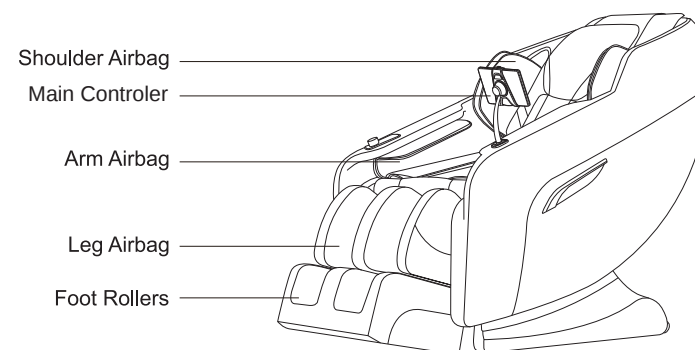

Controller

 (The specific display is subject to the actual product.)

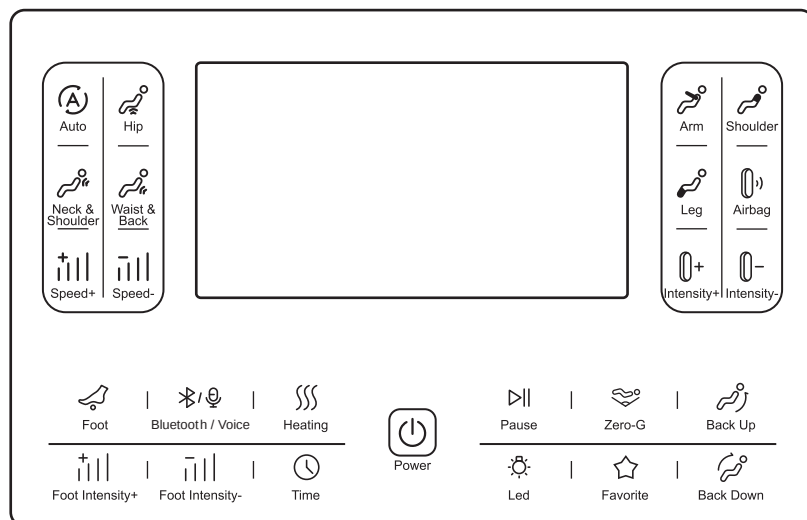

⚠ Caution

- Do not sit, step or place heavy objects on the controller.
- Do not drop the controller. It is recommended that the controller unit be placed in the controller side pocket when not in use.
- Do not exert excessive force on the controller.
- Do not handle the controller with wet hands.
- Do not operate the controller by using sharp-edged or hard objects. It may result in damage.

Function of controller

FUNCTION	ICON	DESCRIPTION
Power		Once your massage chair is connected to an AC wall outlet, you can turn on the chair by power on/off key to start the massage.
Auto		Press this button to switch between multiple automatic modes. Choose the automatic mode you prefer.
Hip		Press this button to turn on/off massage rollers on the hip.
Neck & Shoulder		Press this button to turn on/off massage rollers on the shoulder and neck.
Waist & Back		Press this button to turn on/off massage rollers on the waist and back.
Speed+		Press this button (+) to increase the massage speed.
Speed-		Press this button (-) to decrease the massage speed.
Arm		Press this button to turn on/off the arm airbags massage.
Shoulder		Press this button to turn on/off the shoulder airbags massage.
Leg		Press this button to turn on/off the leg airbags massage.
Airbag		Press this button to turn on or off the airbag massage function.
Intensity		Press this button (+) to increase the massage airbag.
Intensity		Press this button (-) to decrease the massage airbag.
Foot		Press this button to turn on/off the roller massage function.
Foot Intensity+		Press this button to increase the massage speed of the roller massage function.
Foot Intensity-		Press this button to decrease the massage speed of the roller massage function.
Bluetooth /Voice		Bluetooth is enable by default, long press the button to turn off/on the Bluetooth, Voice broadcasting is enable by default, press to turn off/on it and adjust the volume of the voice.
Heating		Press this button to turn on/off the heating function.


FUNCTION	ICON	DESCRIPTION
Time		Press this button repeatedly to set the massage time (15/20/25/30min).
Pause		Press this button to pause all massage functions. Press again to resume the massage.
Led		Press this button to turn on/off the LED light.
Zero-G		Press this button repeatedly to activate one of the three zero gravity positions and to deactivate it.
Favorite		While a massage program is being performed, hold this button for 3 seconds to record this program to your favorite program, then you can short press this button to start this program. (Notes: only one program can be saved to Favorite Program. The previous recorded program will be cleared when a new one is added.
Back Up		Long press this button to raise the backrest and lower the leg rest. Release it to lock the current angle.
Back Down		Long press this button to lower the backrest and raise the leg rest. Release it to lock the current angle.

Armrest shortcut controls

There are six different automatic massage modes. Select the one you prefer.

FUNCTION	DESCRIPTION
Refresh	Full body massage, the intensity of the roller and airbags is strong.
Relax	Full body massage, the massage intensity of the roller and airbags is medium.
Yoga	Full body massage, this massage simulates a Yoga exercise.
Neck & Shoulder	Partial massage: the focus is on improving neck pain and shoulder muscle strain. The massage is more focused on the neck and shoulder.
Waist & Back	Partial massage: the focus is on the waist and back to improve back pain.
Dream	Full body massage, the intensity of the rollers is light.

 
Shortcut Key

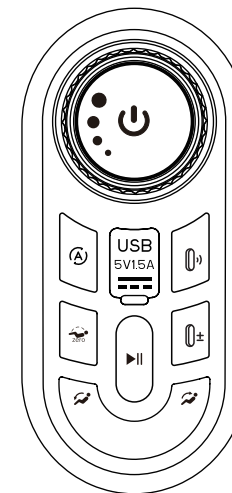

Armrest shortcut controls

FUNCTION	ICON	DESCRIPTION
Power		Press this button to activate or deactivate the massage chair.
Rotation		Rotate clockwise to change the massage chair angle to a more horizontal position. Rotate counterclockwise to change the massage chair angle to a more vertical position.
Auto		Press this button repeatedly to activate one of the automatic program functions. There are 6. The display on the remote will show the program you have chosen.
Pause		Press this button to pause all massage functions. Press again to resume the massage.
Airbag		Press this button to activate or deactivate the massage airbags.
Intensity		Press this button to adjust the airbag intensity from levels 1 to 3.
Zero-G		Press repeatedly this button to activate one of the three zerogravity modes.
Back Up		Long press this button to raise the backrest and lower the leg rest. Release it to lock the current angle.
Back Down		Long press this button to lower the backrest and raise the leg rest. Release it to lock the current angle.
USB	USB	You can remove the protective cover (tab) to recharge your phone using a USB cable (not provided).

 Control Display

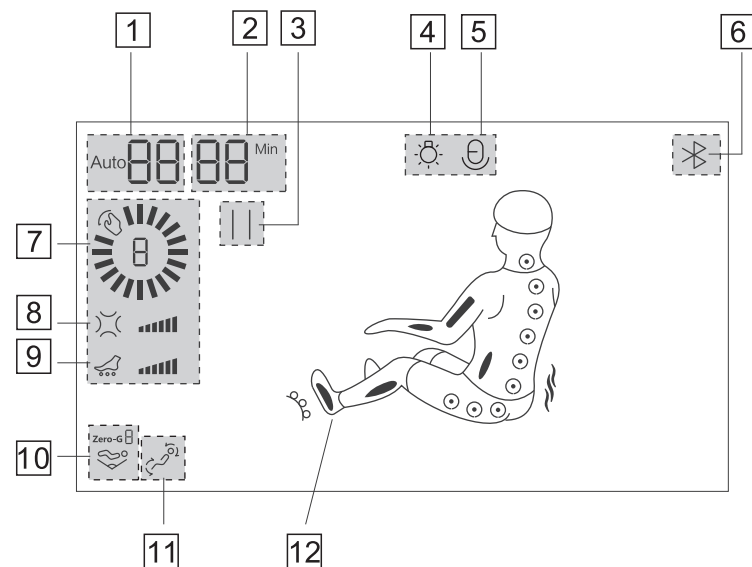

- 1

Auto/Manual Program Display Area.
- 2

Time.
- 3

Pause.
- 4

Leb.
- 5

Voice.
- 6

Bluetooth speaker.
- 7

Back roller speed.
- 8

Airbag intensity.
- 9

Foot roller speed.
- 10

Zero gravity display area:

Zero-G 1

Zero-G 2

Zero-G 3
- 11

Backrest up/down:

↗

↘
- 12

Heating: Light up when in use

⚡

Airbag massage: The corresponding area flashes

⚡

Foot Roller: Light up when in use

⚡

Back Roller: The corresponding area flashes

⚡
- 15
- Voice Control
- ▶ When the massage chair is turned on or in standby mode, say "Hello massage chair" to enable the voice control function.
 - ▶ Use the following commands to use the AI voice Control feature:
- | COMMAND WORDS | RESPONSE BY CHAIR |
|------------------------------------|---|
| Hello massage chair | Hello Master |
| Turn on massage chair / Power On | Please select your favorite program to start your massage. |
| Turn off massage chair / Power off | During shutdown, please leave or restart the massage chair after the chair is completely reset. Thank you and hope you enjoy the massage. |
| Pause massage | Massage paused |
| Continue to massage | Massage resumed |
| Turn on Bluetooth | OK, Bluetooth on |
| Turn off Bluetooth | OK, Bluetooth off |
| Turn off foot roller | OK, Foot roller off |
| Turn on foot roller | OK, Foot roller on |
| Turn on Heating | OK, Heating on |
| Turn off Heating | OK, Heating off |
| Foot roller off | OK, Foot roller off |
| Foot roller on | OK, Foot roller on |
| Increase foot roller intensity | OK, foot roller intensity up |
| Decrease foot roller intensity | OK, foot roller intensity down |
| Back heating on | OK, Back heating on |
| Back heating off | OK, Back heating off |
| Zero gravity | OK, Zero gravity |
| Back up | OK, Backrest up |
| Back down | OK, Backrest down |
- 16

COMMAND WORDS	RESPONSE BY CHAIR
Start airbag massage	OK, Start airbag massage
Stop airbag massage	OK, Stop airbag massage
Massage for five minutes	OK, Massage for five minutes
Massage for ten minutes	OK, Massage for ten minutes
Massage for fifteen minutes	OK, Massage for fifteen minutes
Massage for twenty minutes	OK, Massage for twenty minutes
Massage for twenty five minutes	OK, Massage for twenty five minutes
Massage for thirty minutes	OK, Massage for thirty minutes
Relaxing massage	Start Relaxing massage
Yoga massage	Start Yoga massage
Dream massage	Start Dream massage
Refreshing massage	Start Refreshing massage
Waist&Back massage	Start Waist & Back massage
Neck&Shoulder massage	Start Neck & Shoulder massage
Lower body massage	Start lower body massage
Upper body massage	Start upper body massage
Buttocks massage	Start Buttocks massage
Volume up	Volume up
Volume down	Volume down
Maximum volume	Maximum volume
Minimum volume	Minimum volume
Increase strength	Increase back roller intensity
Decrease strength	Decrease back roller intensity
Increase air intensity	Air intensity up
Decrease air intensity	Air intensity down

Cleaning and Maintenance

Maintenance advice

Please follow the below steps to clean leather and plastic parts

- Please ensure the main switch is turn off and the power plug is unplugged from the electrical outlet.
- Dip a soft, dry cloth in water or warm water containing 3% to 5% neutral detergent and wring it thoroughly.
- Clean the leather and plastic parts.
- Then wipe with dry soft cloth.
- Let it dry naturally.

Warning

 
- Do not use alcohol, thinner, gasoline and other chemicals for cleaning.
- Do not dry the surface with a blower.
- Do not iron the fabric.
- During maintenance, always unplug the power plug. Do not unplug it by wet hands.
- Please use a dust cover to avoid dust if you won't use the chair for a long time.
- As fabric's color may be dyed on the leather, be careful when using denim and colored cloth to wipe the product.
- Wipe the product with the melamine foam dipped in mild detergent, if the dirt is hard to remove.
- Do not let the leather touch plastic in case of the color fading.
- Water temperature should not exceed 40 degrees.



Please do not use



Water temperature
should not exceed
40 degrees

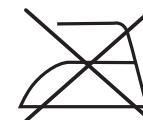

Do not iron

Troubleshoot

If there is still an abnormality after the following checks, to prevent any accident, please stop using the massage chair immediately. Please unplug the power cord from the outlet and contact with the dealer or the nearby customer service center.

Situations	Solutions
The Massage Chair cannot operate even though it has been connected to the power supply.	• Check whether the plug is well connected and working well • Check whether the switch on the Massage Chair is turned to position “ I ”.
During operation, the controller is working but not the Massage Chair.	• The Massage Chair could be overheated after prolonged use. It will automatically cool down to resume its normal condition. Please turn OFF the power and allow the chair to cool down for 30 to 50minutes.
During operation, both the controller and the Massage Chair are not working.	• If the set-time in the Timer is complete, please press the timer function again to resume operation. • Switch OFF power, and switch ON again to activate the Chair.

Specifications

Model	MASCHR-E-BRISA-GY
Rated Voltage	100-240V~
Rated Frequency	50-60Hz
Rated Power	100W
Upright position-Approximately	1380 (L)× 735(W)× 1030 (H)mm
Reclined position-Approximately	1590 (L)× 735(W)× 820 (H)mm