


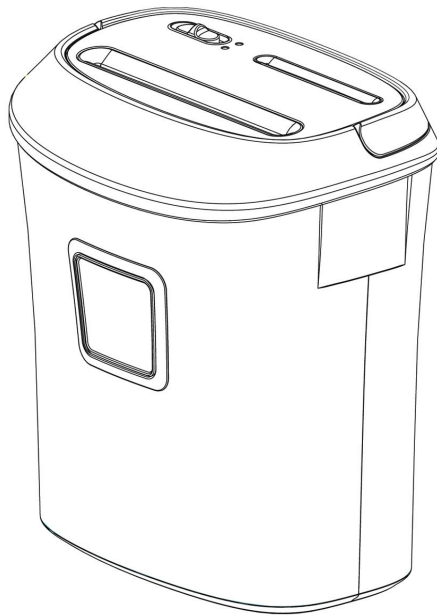

PAPER SHREDDER OS1201D



Please read this manual in its entirety prior to using the product and retain for future reference.

Images are used for illustration purposes.

Actual product may vary due to design upgrades.

For domestic use only.

USER MANUAL

SPECIFICATIONS

Model no: OS1201D

Cutting Style: cross cut

Entry Width: 220mm

Shred Capacity: 12sheets (A4 paper)


1pc CD

1pc credit card

Waste bin for CD, credit card: 25 litres

Input: 220-240V, 50Hz,

COMPONENTS & FEATURES

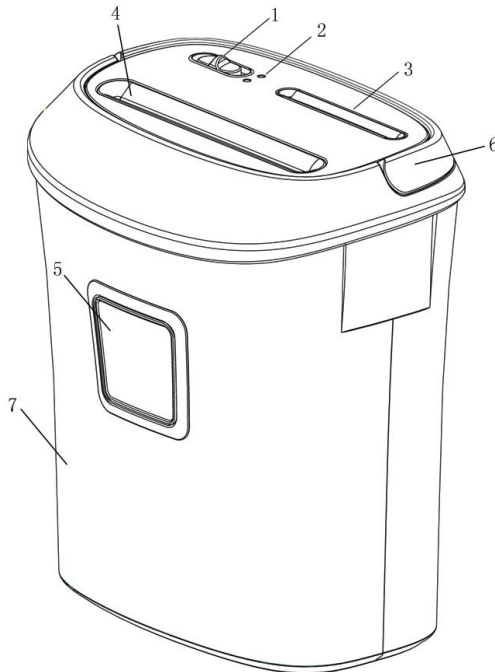

1. 3-Position slide switch for

AUTO, OFF and REVERSE

4. Paper intake

6. Handle

2. Power indicator

3. Credit card intake/ CD intake

5. Transparent viewing window

7. Removable waste bin

- **OPERATING FUNCTIONS:** Position Slide Switch (AUTO/OFF/REV CD Card) on the machine has the following functions.
 - **AUTO:** Unit is ready for operation, shredding starts as soon as paper is inserted in the paper slot.
 - **OFF:** Unit is switched off.
 - **REV(CD/Card):** Unit can strip cut CD/credit card when the switch is in this position, and it can reverse sheets of paper.

SAFETY SYMBOLS



Warning: Familiarize yourself with safety instructions, prior to using the unit, failing which user may sustain injury and/or damage to property may occur.

The mark “O” Printed on the machine means, the machine is off when the button is in this location



Product is not intended for use by children (product is not a toy)



Avoid hair touching the document feed opening.



Avoid touching the document feed opening with hands.



Do not insert paper clips or staples into the infeed slot.



Avoid clothing and long necklaces or bracelets touching the document feed opening



Keep aerosol products away



WARNING: PROLONGED CONTINUOUS USE AND OVERLOADING OF THE UNIT WILL DAMAGE THE SHREDDER AND VOID WARRANTY

WARNING: DISCONNECT FROM POWER WHEN YOU INTEND TO CLEAN THE UNIT. SERIOUS INJURY CAN BE SUSTAINED IF THIS IS NOT DONE.

WARNING: REMOVE ALL CLIPS, STAPLES, ADHESIVE PAPER, TAPE. FAILING TO DO SO WILL DAMAGE THE UNIT AND VOID WARRANTY.

PREPARING THE UNIT FOR USE

1. Place the shredder on a flat surface.
2. Connect the power plug into the corresponding power socket and ensure that operating voltage of the unit is suitable and compliant with your local voltage.

OPERATIONAL GUIDE

1. Set the slide switch to “AUTO” position, which will put the unit in standby mode.
2. Insert the pages to be shredded vertically into the entry slot. Once unit senses that paper has been inserted it will automatically start shredding.

3. Unit will return to standby mode once shredding has finished.
4. If shredders jams up or you want to remove the paper after shredding has commenced, please set the slide switch to "REV", and the shredder will start a reverse rotation and return the paper that has not been shredded. Slide the switch to "OFF" if you want to stop the reverse cycle.
5. To use the CD or Credit Card shredding function, slide the switch to "REV" position, then insert the CD or credit card, vertically into the entry slot. Once shredding has completed slide switch to "OFF" position.
6. To extend the life of the product, strictly follow the guidance, for maximum number of pages to be shredded (12 page) and shred only one CD or credit card at a time. Overloading the unit with pages to be shredded or inserting multiple CDs or credit cards will damage the unit and void warranty.
4. Continuous working cycles should not exceed 2 minutes and need to be followed by 60 minutes of rest. Unit cannot work for more than 3 continues cycles.
5. Unit will shut down to cool down as a safety measure if the working cycle is too long.
6. After the unit has cooled down it will be ready to be used again. Unit will not be functioning until it has sufficiently cooled.
7. If you want to clean the wastebasket or the machine, or the machine is not used for a long time, please disconnect from power.

SAFETY OPERATION GUIDE

1. Position the shredder close to a power outlet to avoid tripping hazards.
2. Do not place the machine near the heat sources or in the humid environment for a long time;
3. Machine must be far away from children and pets;
4. If the machine is not to use for a long time, please cut off the electric power and unplug.

Working Condition

Temperature: 25°C

TROUBLESHOOTING

Index	Abnormities	Cause	Countermeasure
1	Paper feed or positive rotation is normal, but there is still some scrapped paper at the exit after finishing.	The slots of the blades clamp the scrapped paper.	Set the slide switch to "REV" (if needed, please clean the scrapped paper at the exit)
2	Some paper in the entry, but shredder does not work.	The edges of the paper are not making contact with the auto-feed sensor.	Reposition the paper to ensure it's touching the sensor to trigger the automatic feed.
3	The paper is jammed, and the machine stops working.	<ol style="list-style-type: none"> 1. The number of the inserted paper is larger than the limit. 2. Locked rotor causes the unit to overheat and trigger the cooling down safety measure. 	<ol style="list-style-type: none"> 1. Set the slide switch to "REV" and withdraw the shredding paper. 2. Unplug the plug and allow the machine to cool down.
4	Shredder doesn't work after paper has been inserted or stops working sporadically.	Paper is too thin, too soft, humid, or too scrunched up to activate the auto-feed trigger.	<ol style="list-style-type: none"> 1. Fold the paper and then insert it. 2. Set the slide switch to "REV".

Disposal instructions

Recycling logo confirms that the product should not be disposed of in general rubbish. Please dispose of the unit in appropriate recycling venue at your location.



Warranty and Contact Details

Kmate Pty Ltd provides a 12 month warranty for this product when used for domestic purposes. Commercial use of the product will void all warranty.

The benefits of this warranty are provided in addition to other rights and remedies you may have under a law in relation to the goods and services to which this warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Before making a claim under warranty, please refer to your user/installation manual to ensure that you have followed correct operating procedures of your product, and refer to the trouble shooting section (if such exists) to assist solving any problems.

The warranty period begins from the day of purchase.

Your proof of purchase must be produced before assistance will be provided.

Where the Product is replaced pursuant to this Warranty, the replacement Product will be subject to the warranty terms and warranty commencement date of the original product.

This warranty is only valid if the product is operated and maintained in accordance with the manufacturer's instructions.

Damage to property including but not limited to furniture, carpets, walls, ceilings or any other event either directly or indirectly are excluded from warranty as well as any losses or expenses incurred by you in relation to the product or making a claim under this warranty including without limitation any costs associated with installation, reinstallation or transporting the product.


A claim may be refused if the defective claim has arisen for reasons other than a manufacturers fault or defective parts or workmanship. Circumstances in which a warranty claim may be declined include, but are not limited to the following:

- Normal wear and tear;
- Misuse or abuse, including failure to properly maintain or service;
- Damages caused by improper or incorrect installation, force-majeure, electrical surges, lightning, power grid fluctuations, water or by connection to alternative power supply sources (such as solar inverters etc), are not eligible for warranty repair;
- Failure to clean or improper cleaning and/or operation of the product;
- Damage caused by overloading the unit with too many pages and not allowing it cool down
- If the product is modified without authorisation from Kmate Pty Ltd in writing;

Warranty Contact: Kmate Pty Ltd

PO Box 133, Braeside VIC 3195

warranty@kmate.com.au 03 9790 0055

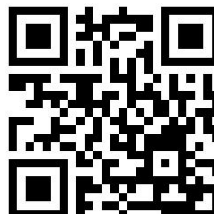

Download the latest version of this manual at: <https://kmate.com.au/PS3>