 


Mobile TV Cart

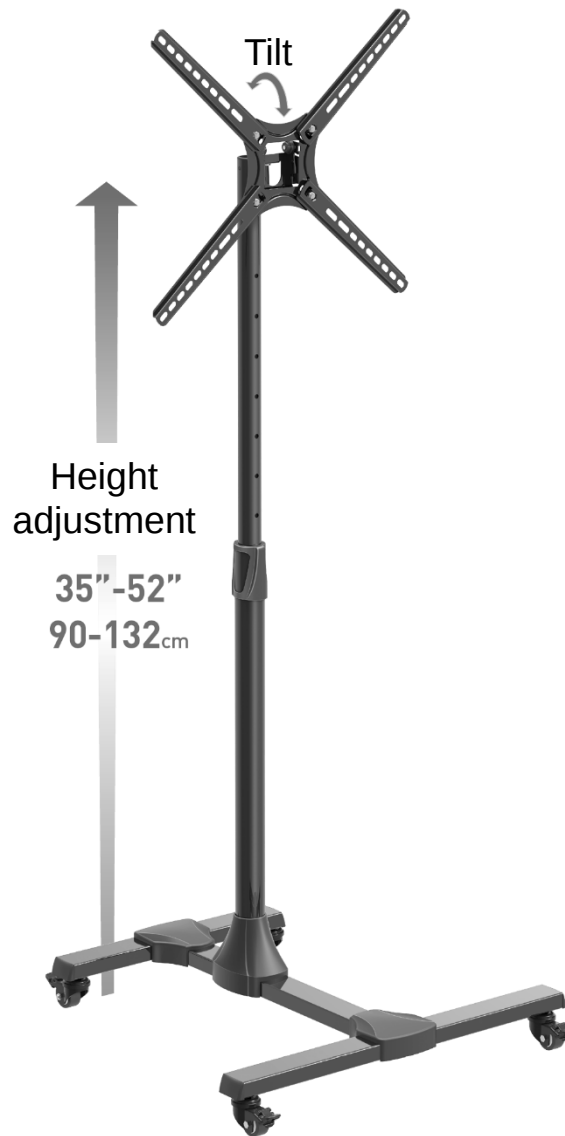


Warning! Ignoring the safety and assembly instructions may result in **SERIOUS OR FATAL INJURIES** from tip over or the falling of the product and the electrical appliances. Opening the package represents your undertaking to closely read and follow the instructions. This product is not intended for use in public places. **For Safety Instructions, warranty and further information, go to: www.barkanmounts.com › Support › Safety Instructions & Warranty**

For more information: barkanmounts.com

If you are satisfied with the product, please give us a 5 stars ★★★★★ rating on the website you bought it from. If you are not satisfied please contact us at <https://www.barkanmounts.com/support> and we will solve the problem for you.

 SW310H-MAN-ONL-2304

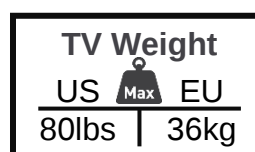

**Safety instructions and installation warnings (provided separately)
must be read in full, prior to assembly.**

 


Warnings!

Tip Over Hazard!




Anchor the product to the wall –
using 2 strong cables

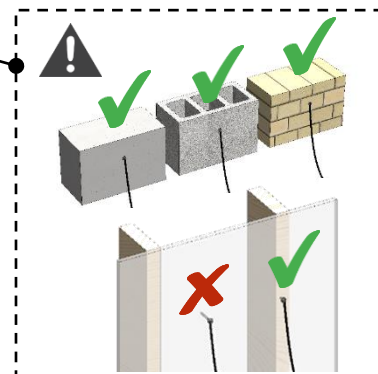

Collision Hazard – place the product in a position that will prevent people from colliding with it



 Do not place the product on inclined surfaces, at the edge of a surface or near stairs

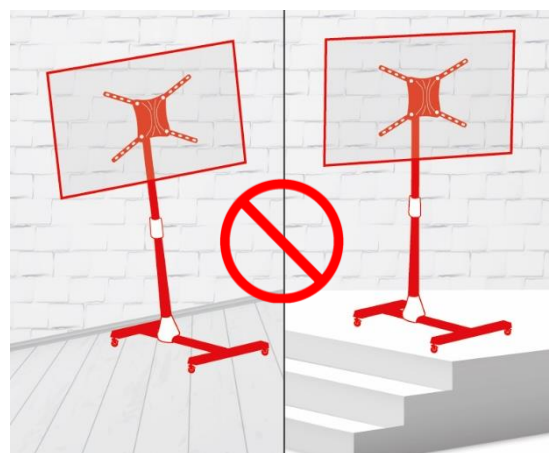

Release Wheel Brakes – do not lock more than 1 wheel

UNLOCK

 


LOCK



Max. = 1


Move Carefully – Release the wheel brakes, grasp the vertical bar with **BOTH** hands and move the product slowly. Do not move the product by gripping the TV itself

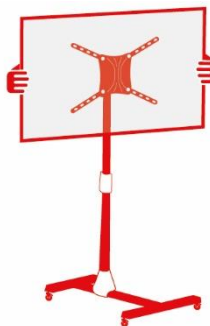


Keep children under the age of 15 away from the product



 Adjust the TV tilt angle carefully. Using excessive force might break the screen or tip over the product.

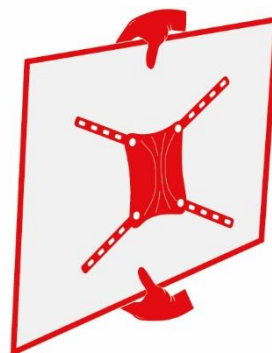

Main Parts

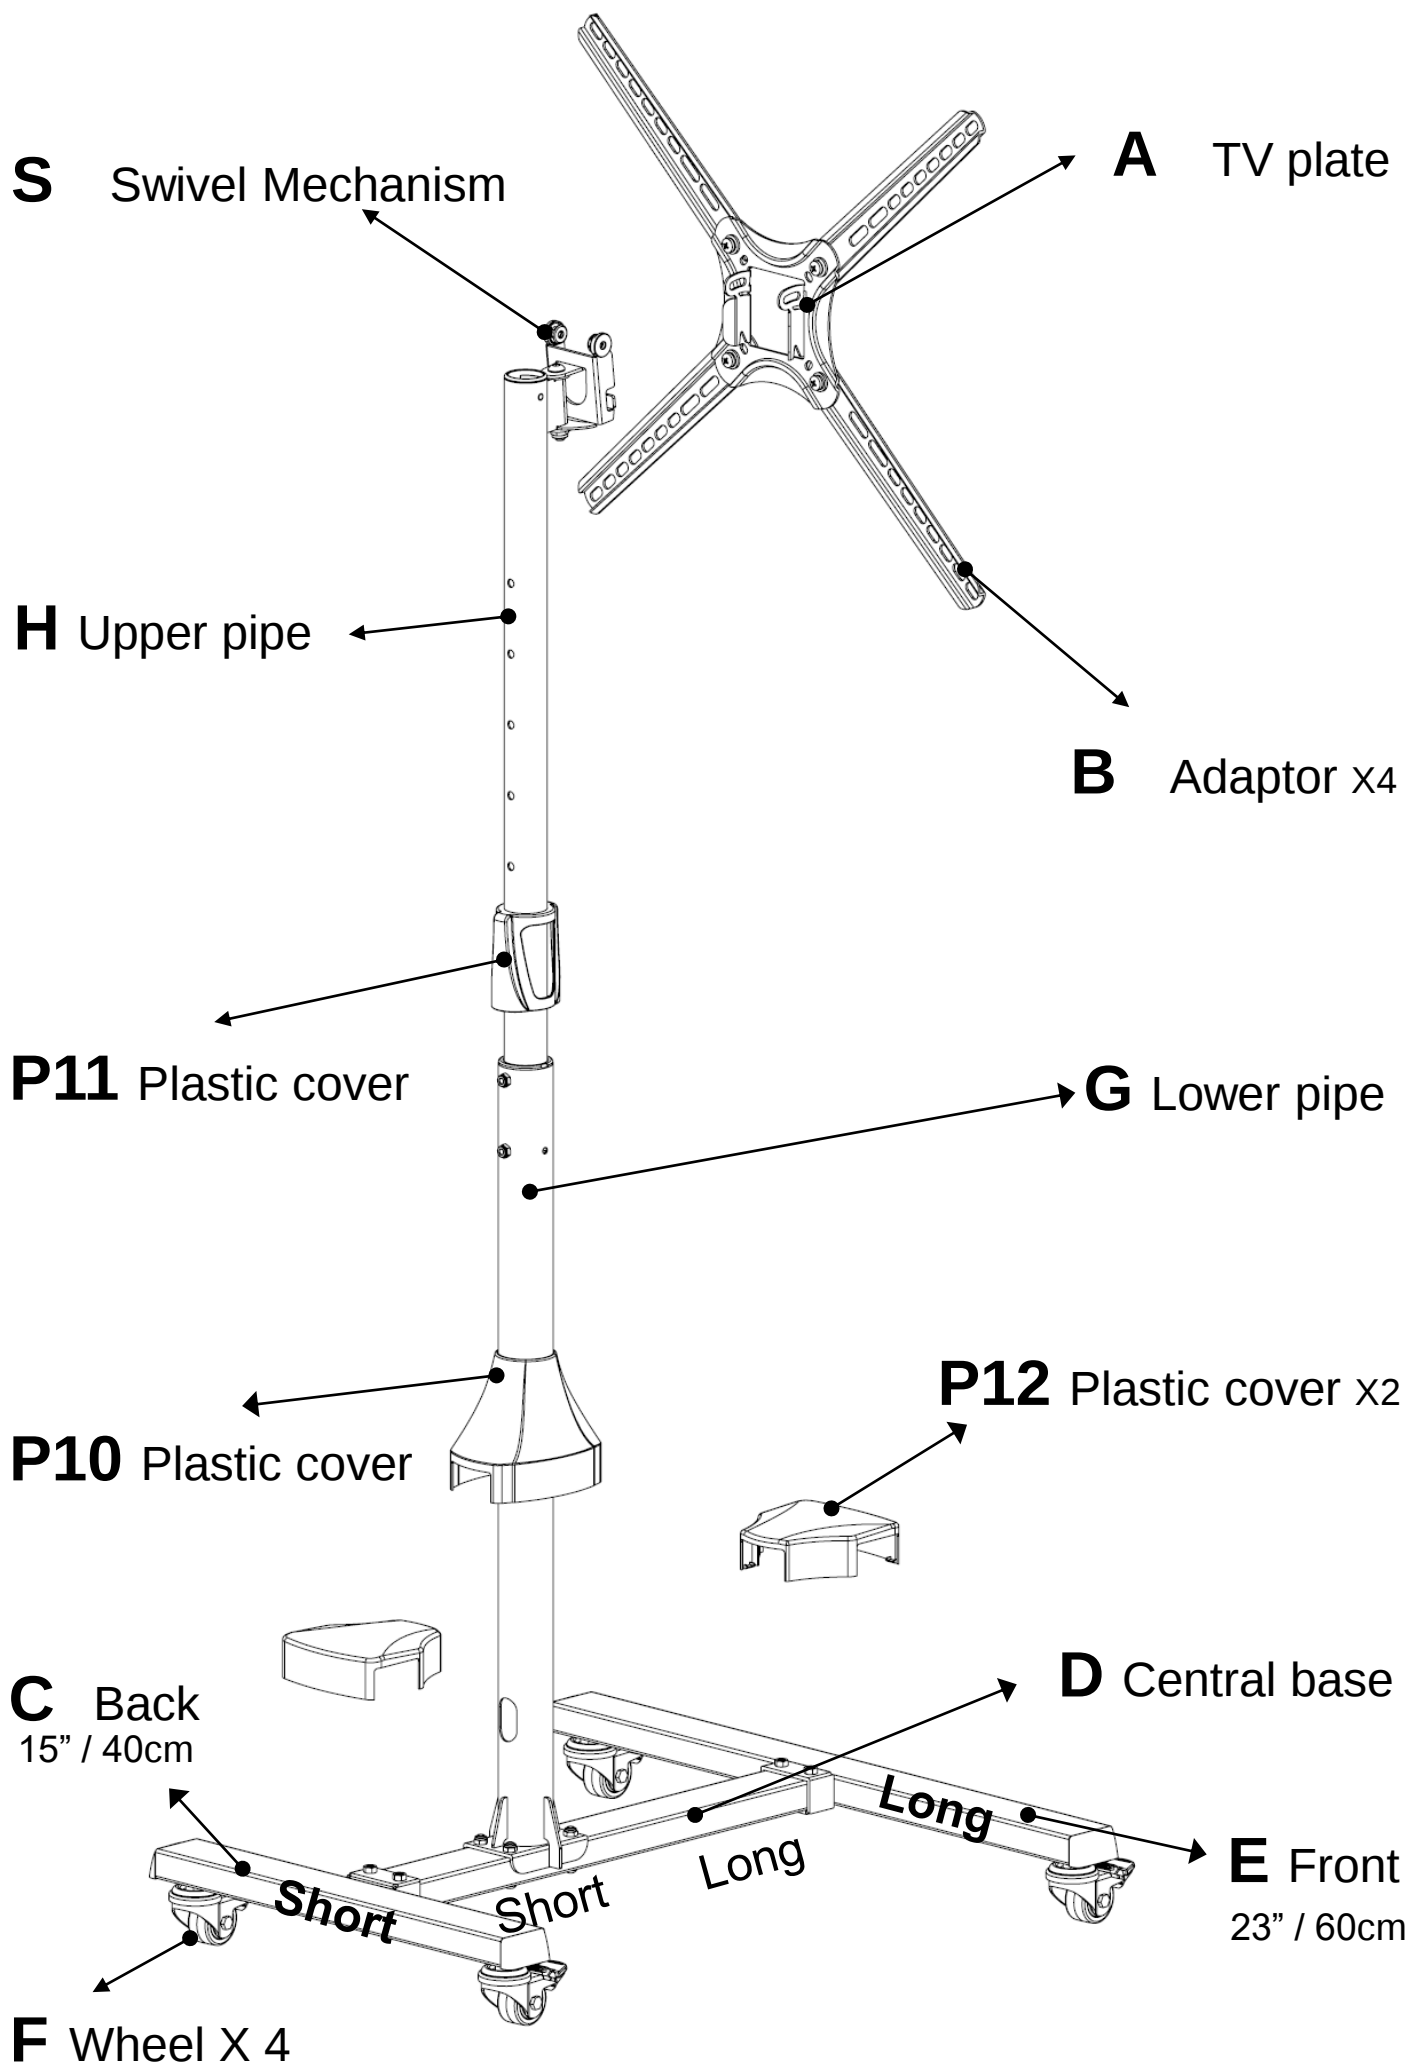 

Z6



x6

Z7



x4

Z8



M6
x2



#	M	L mm	L inch	pcs
Z1	4	20	$\frac{3}{4}$	4
Z2	6	16	$\frac{5}{8}$	4
Z3	6	25	1	4
Z4	8	25	1	4
Z5	8	45	$1\frac{3}{4}$	4

Z9



 
 
x2

Z10




x4

Required Tools:

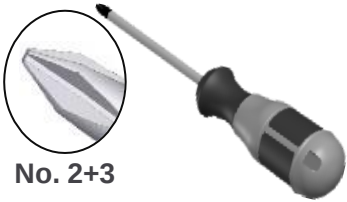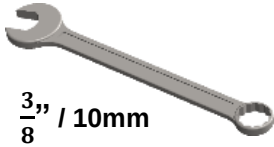


Y1

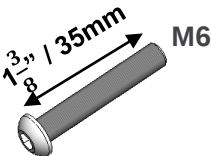 

x8

 Y2

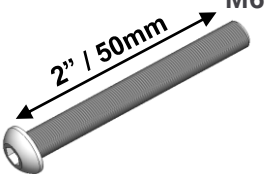


x2

Y3



M6
x4

 Y4




M6
x6

Y5





 x1


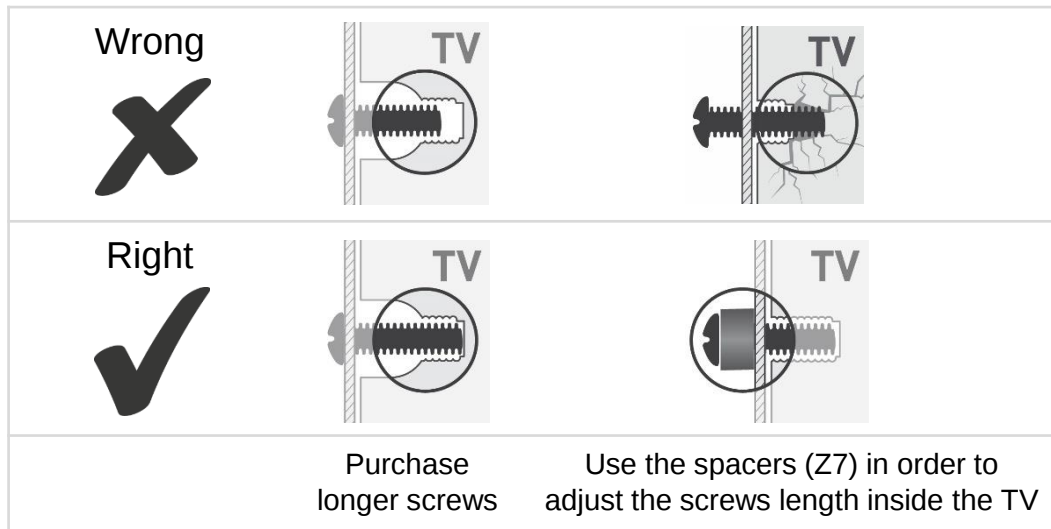


1

  Continue according to your TV mounting hole pattern

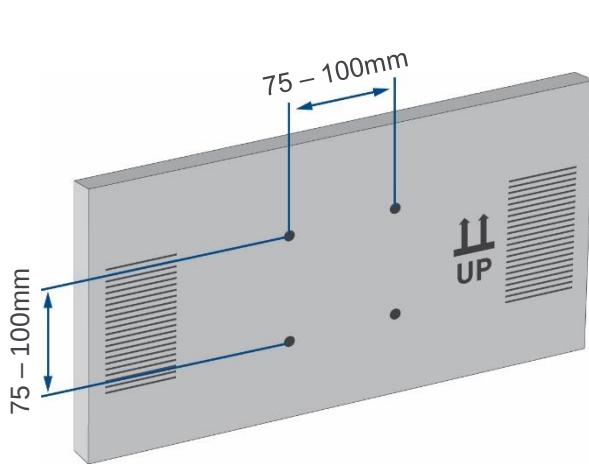



1a

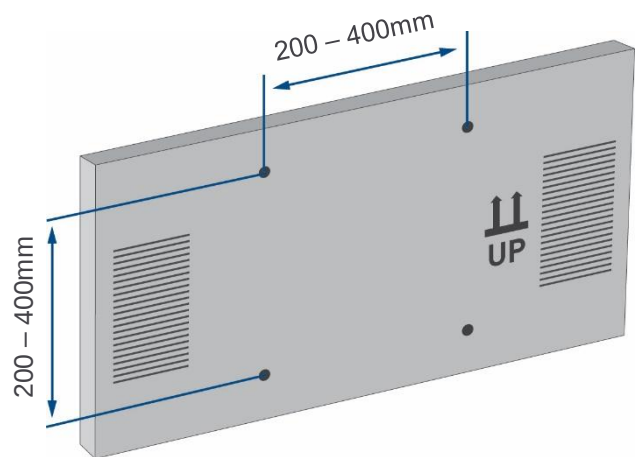  

1b

Page 6

  1a 75x75 mm up to 100x100 mm hole pattern

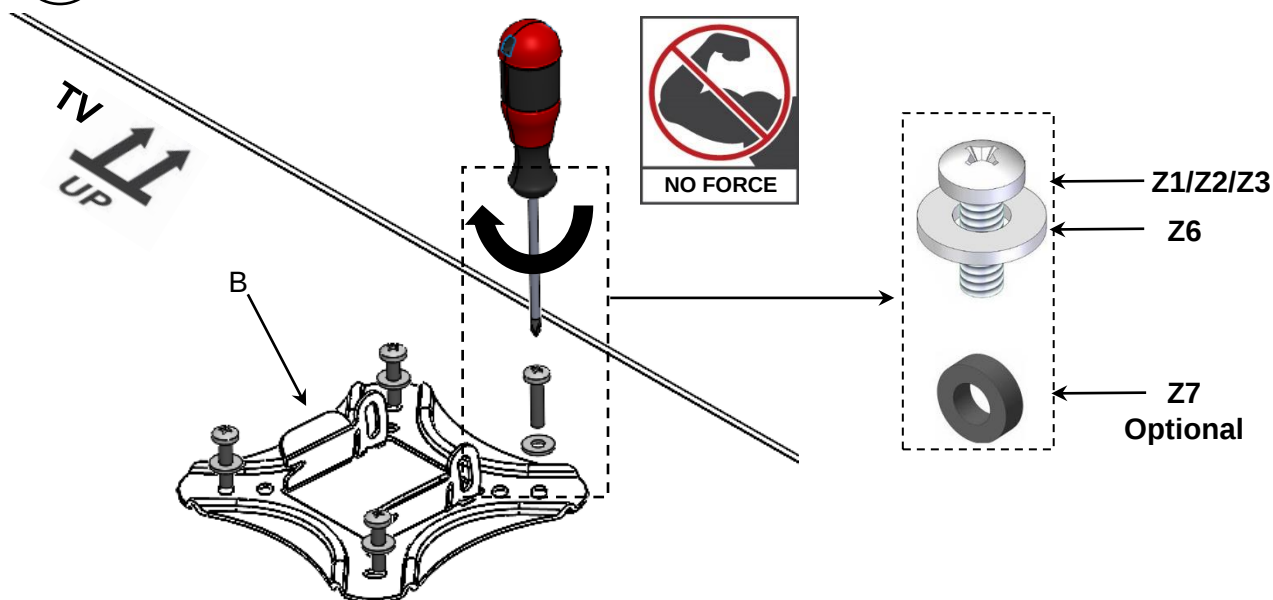


2

Page 7


- 1b** **Hole pattern 100x200 mm up to 400x400 mm:**
Disassemble the screws, connect the 4 Adaptors to the TV Plate and reassemble the screws.

 (1)

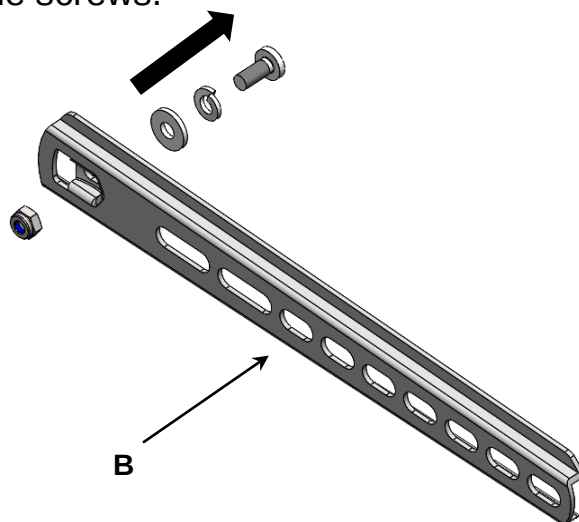

(2)


 
Flat TV

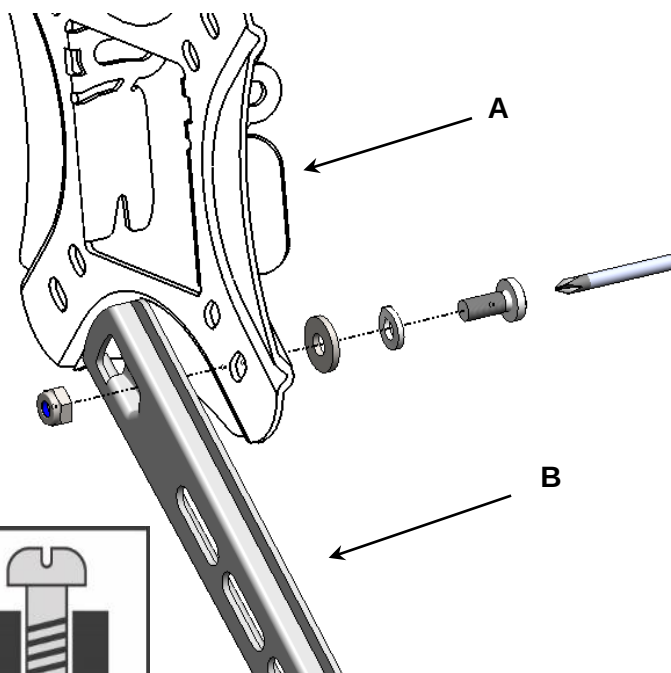

Z10




  PARTIAL
TIGHTENING

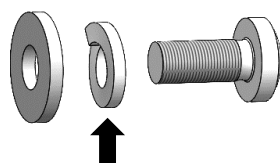

(2)

 Curved TV

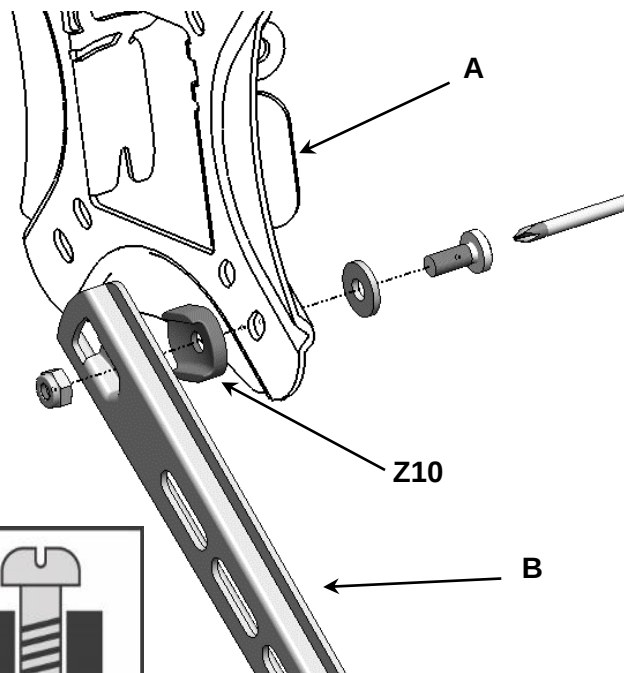


Z10




B



 PARTIAL
TIGHTENING

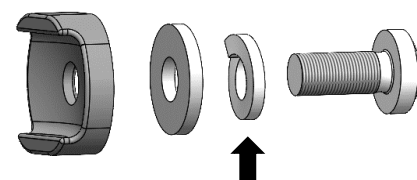


   Position the Adaptors according to your TV's hole pattern

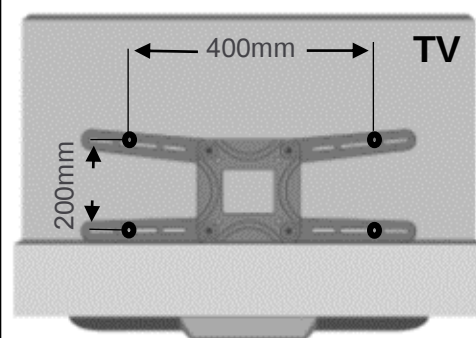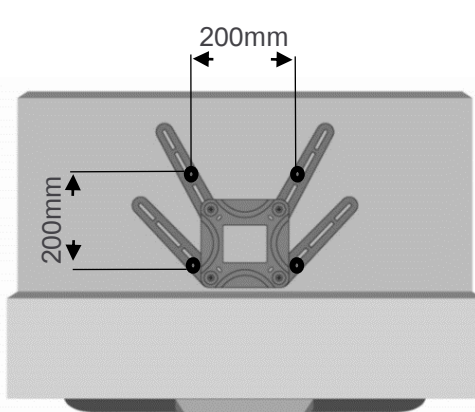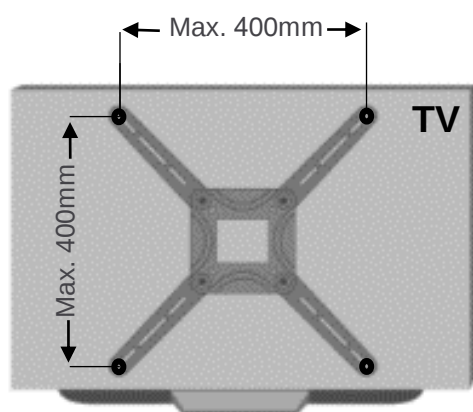


For more positioning options turn to page 12

 Connect the TV Plate with the Adaptors to the TV in all 4 connection holes

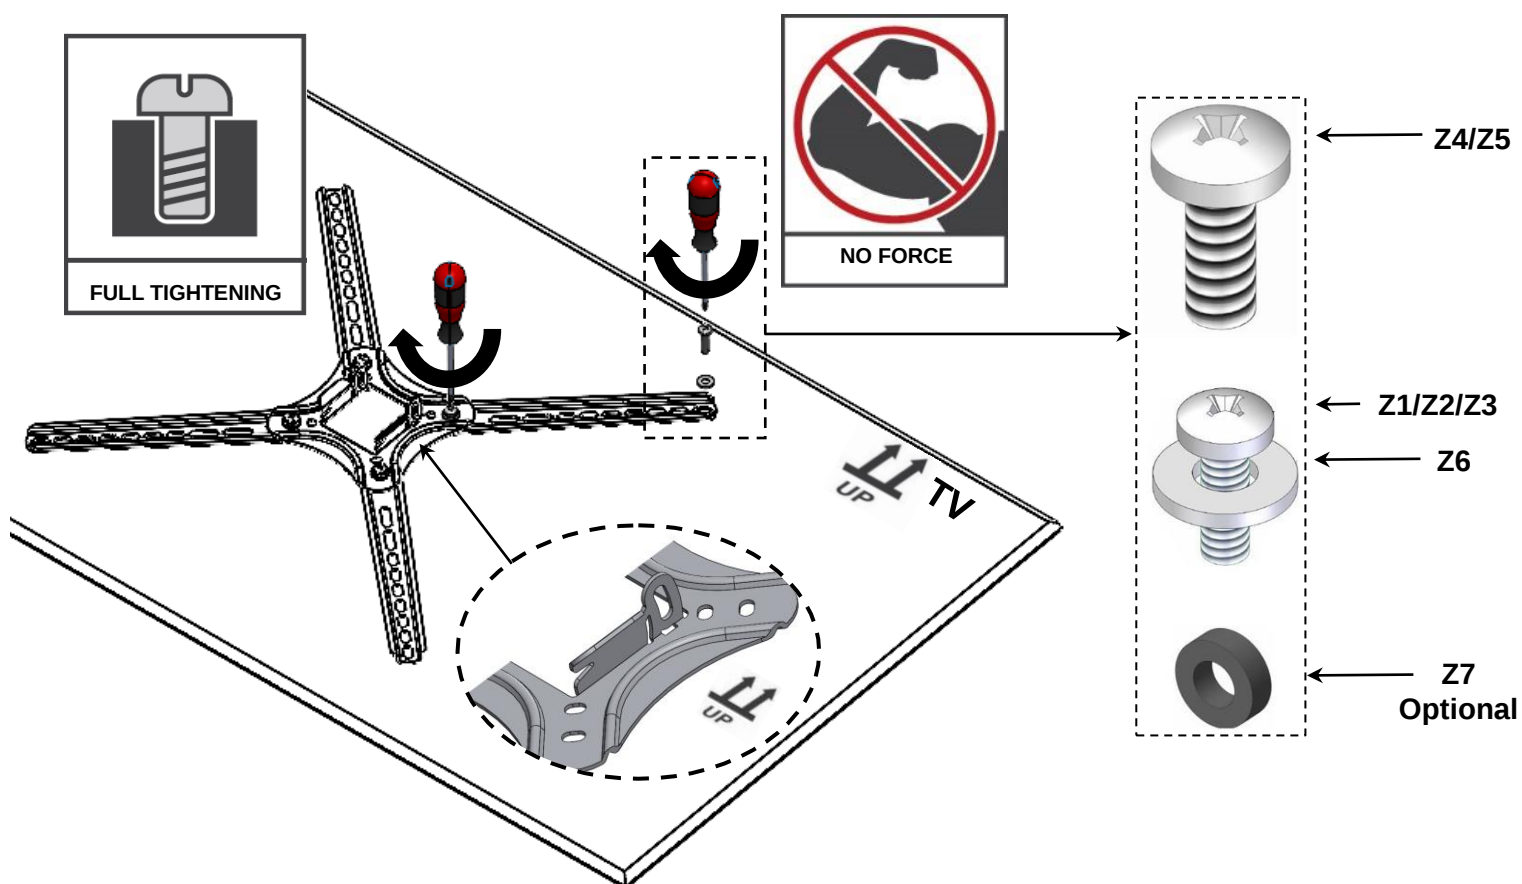


2


Connect the base beams. Long beam (Front) – long distance, short beam (Rear) – short distance

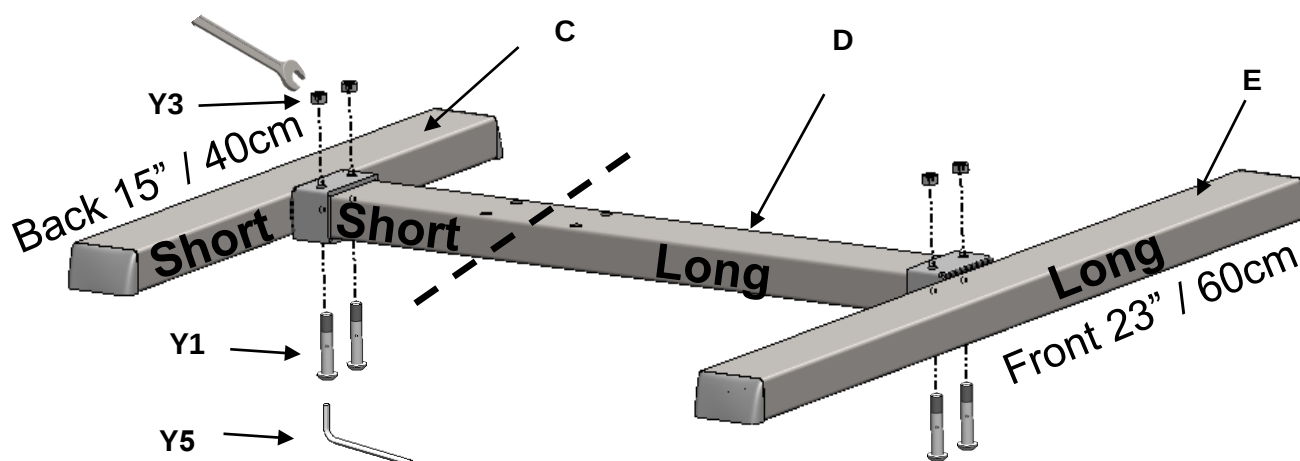


3 Connect the wheels. Make sure they are locked.

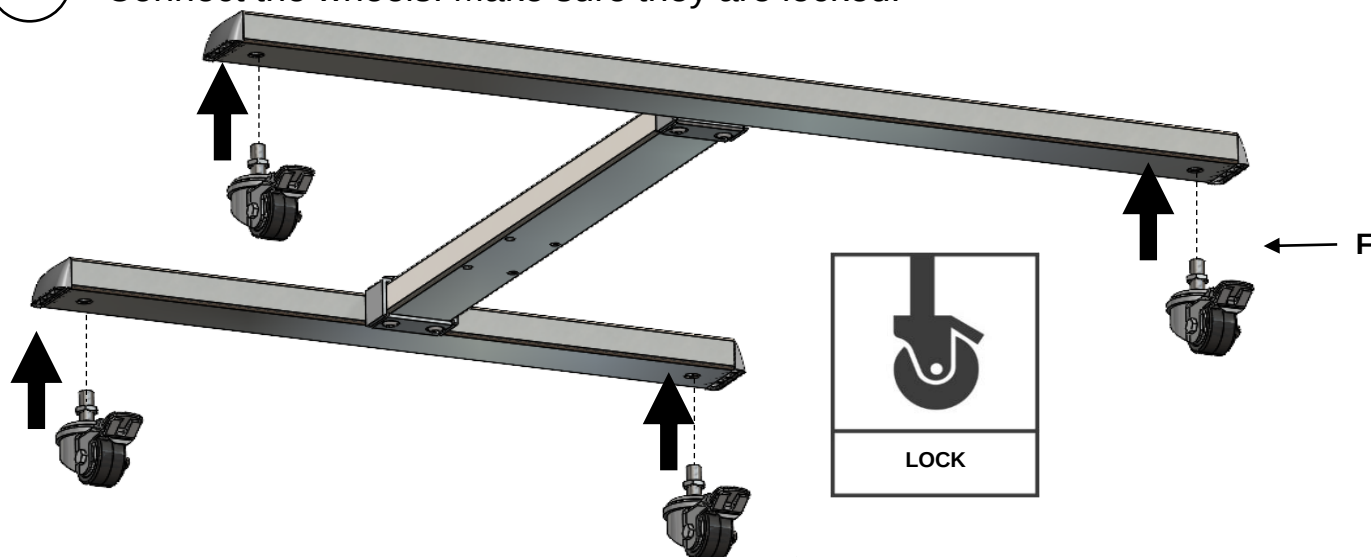


A Tightening

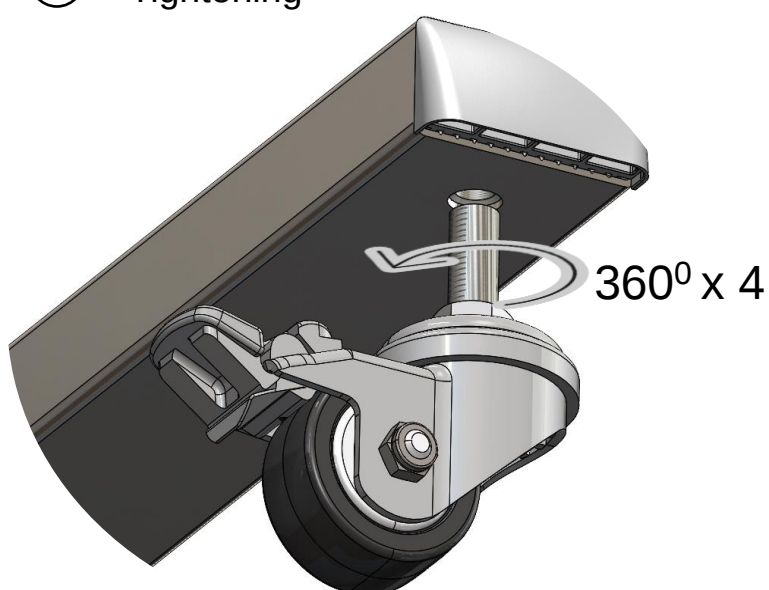

B Leveling

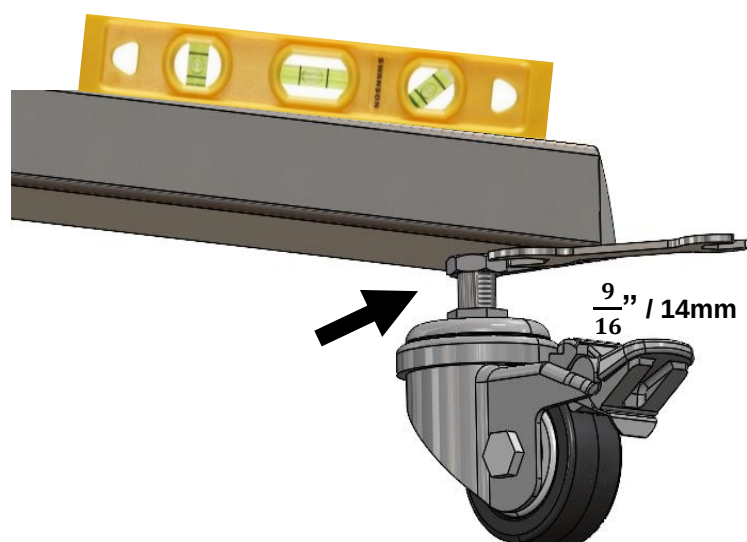


4 Connect the lower pipe (G) to the central base (D). Make sure that the cable hole is in the back.

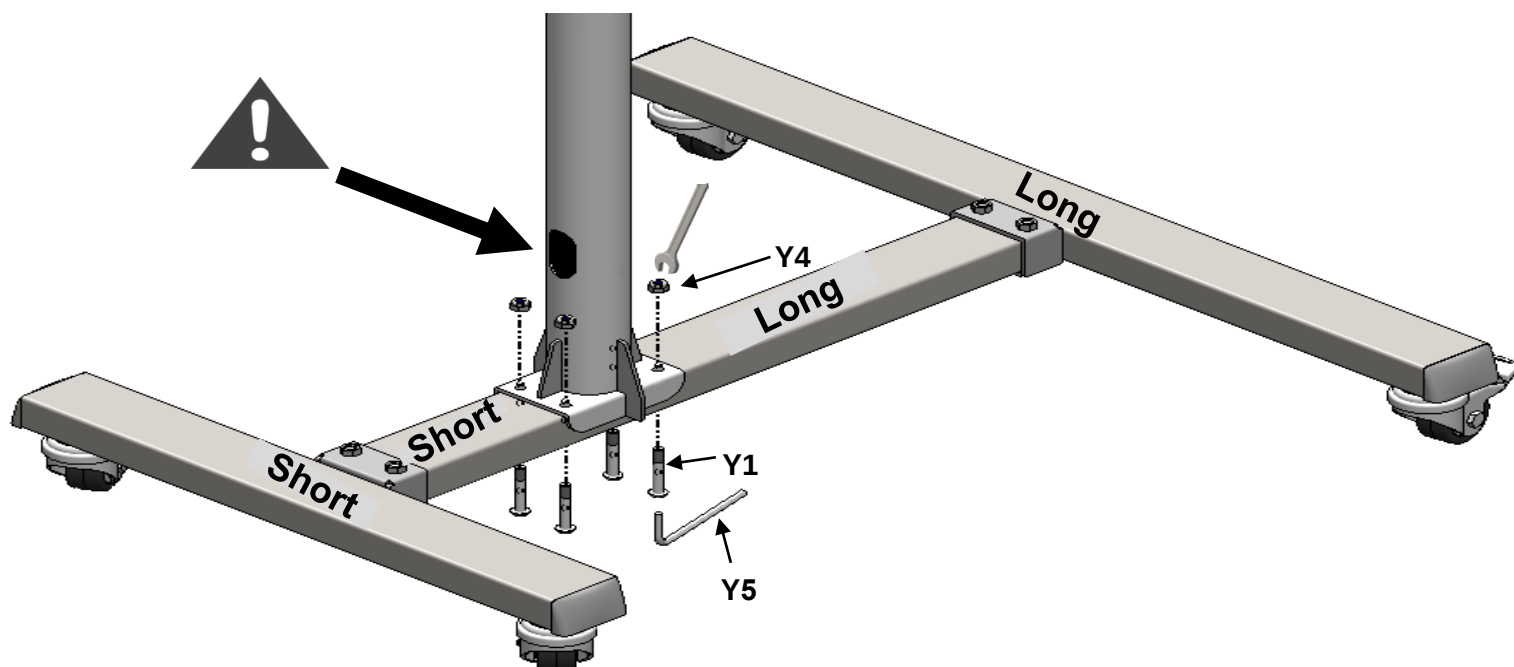


5

1. Slide P10 to the bottom of the lower pipe.
2. Place P11 on the top of the lower pipe.
3. Place P12 (X2) on the connections between the beams.
4. Slide the upper pipe into the lower pipe.

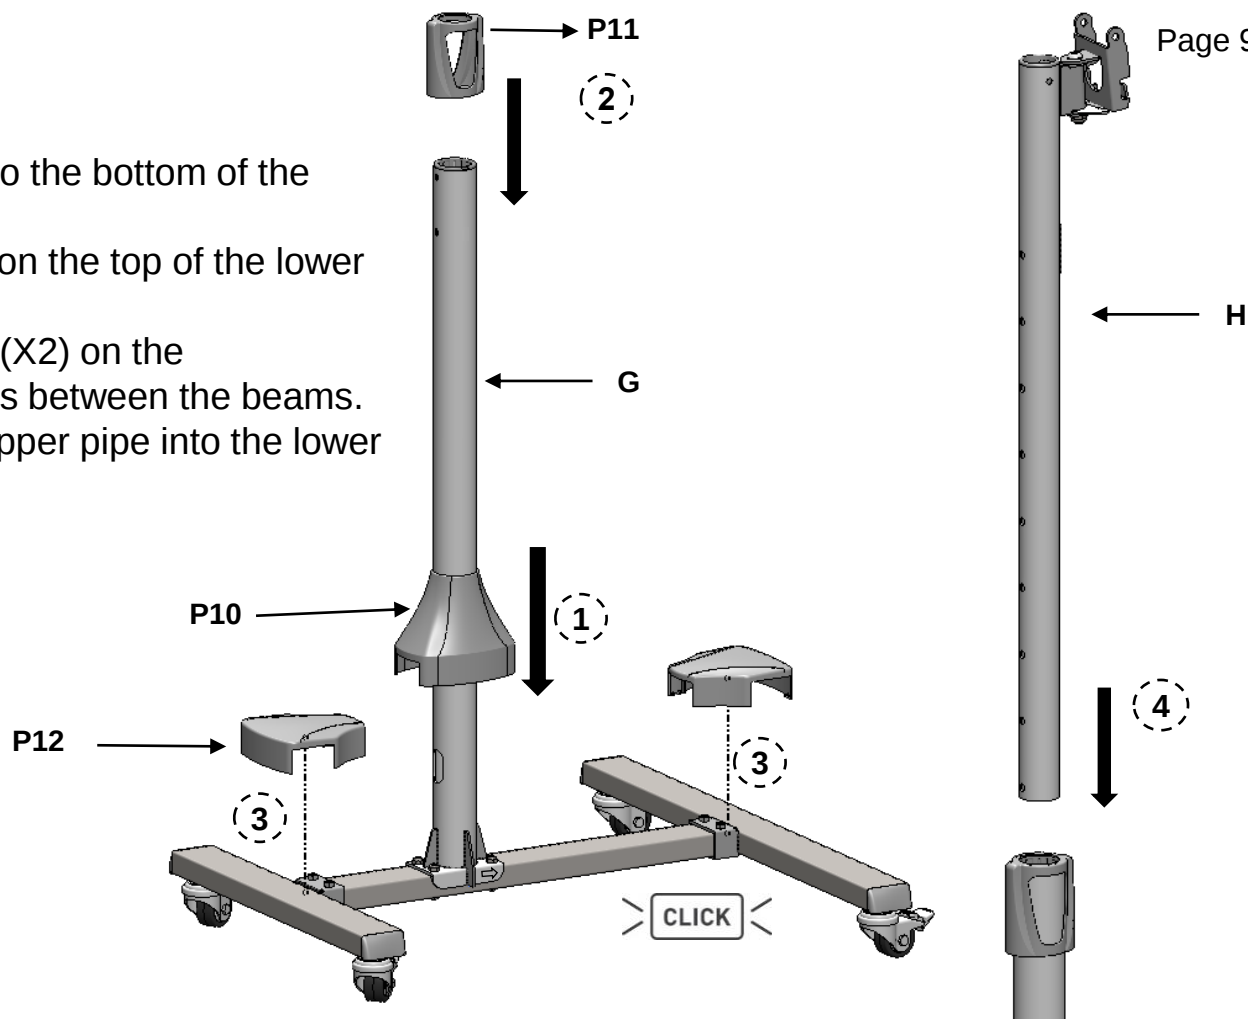


6

1. Pass the cables through the pipes.

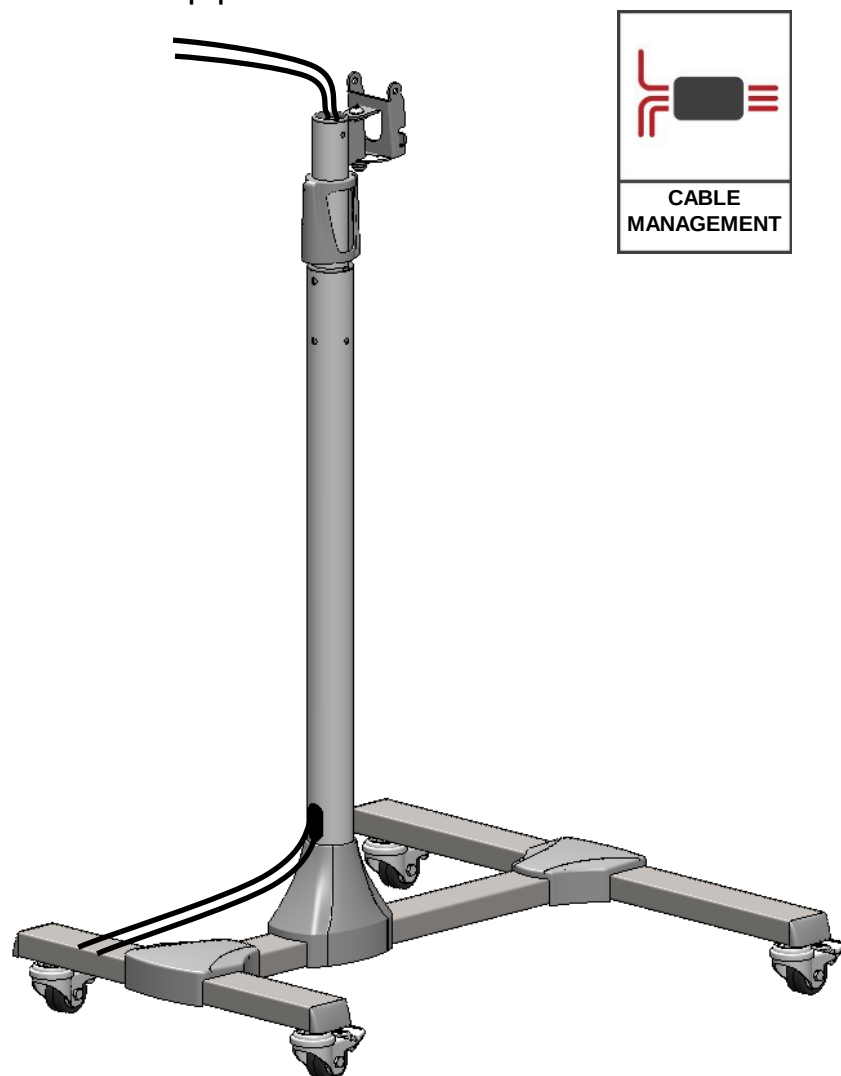


2. Adjust the stand to the desired height and connect the screws

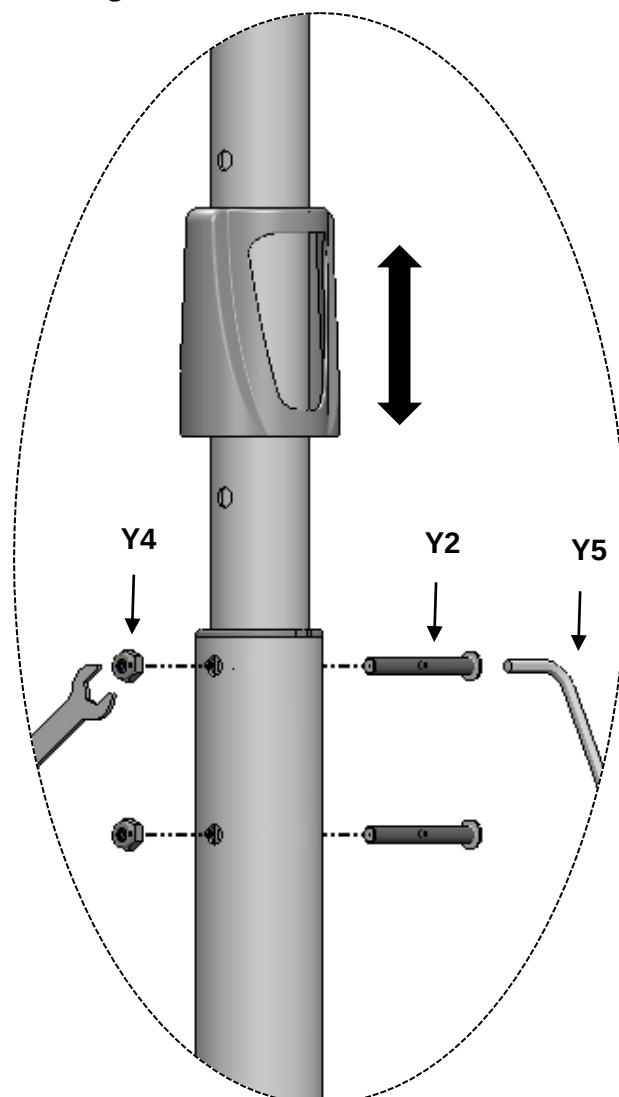

7


Place the plastic nut-housings (Z9), and then insert the nut (Z8).

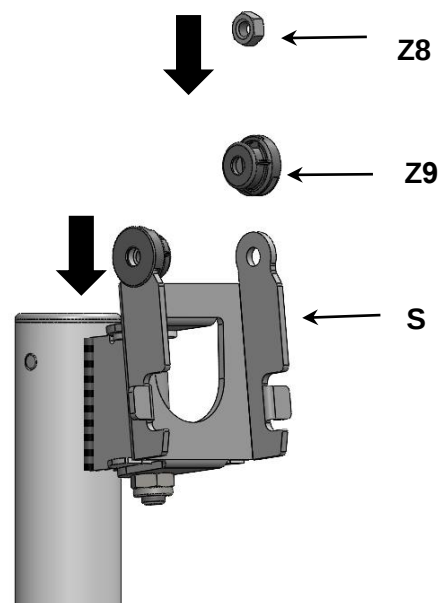




8

Weight test

Apply force on the upper part of the product and make sure it is assembled properly.


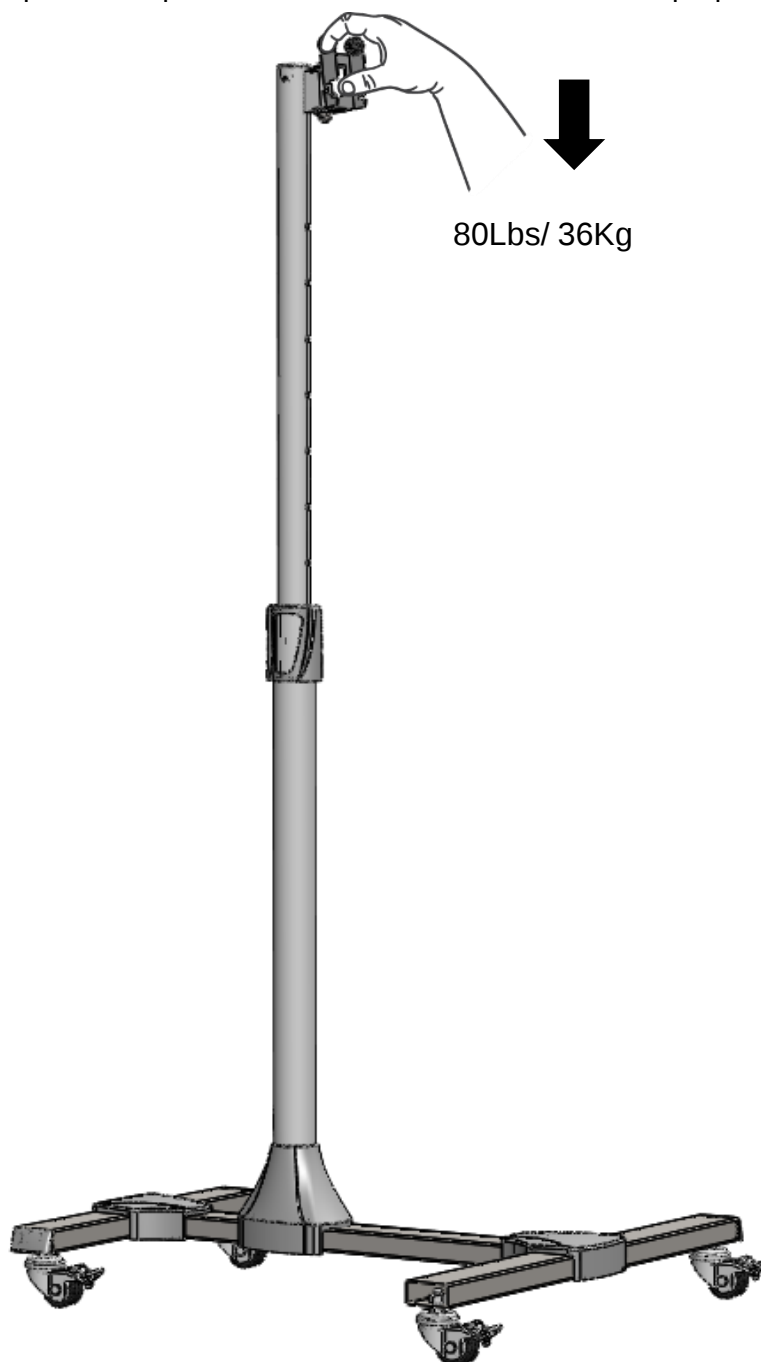


9 Connect the TV with the TV Plate to the Bracket

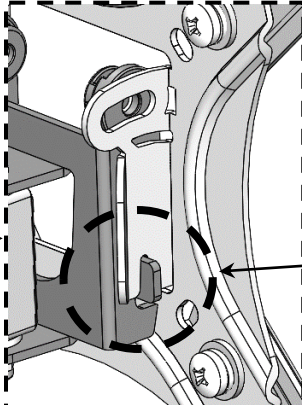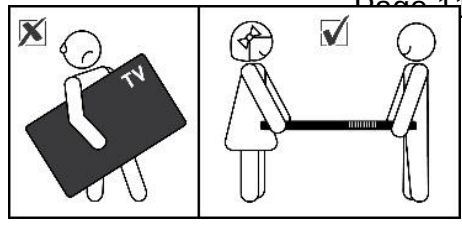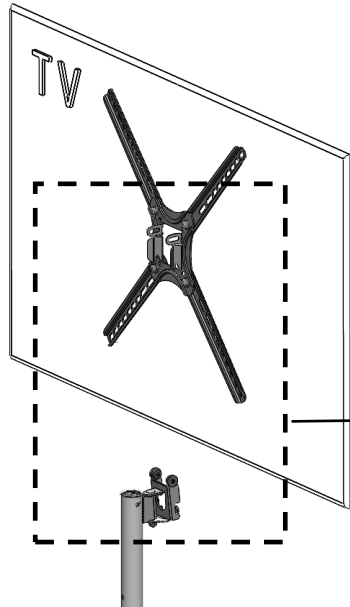


Make sure that the TV Plate slots are positioned properly

10 Insert and tighten the screws from both sides to create friction for the tilt mechanism. Adjust the TV tilt angle carefully.

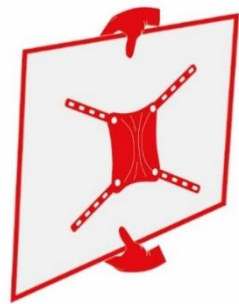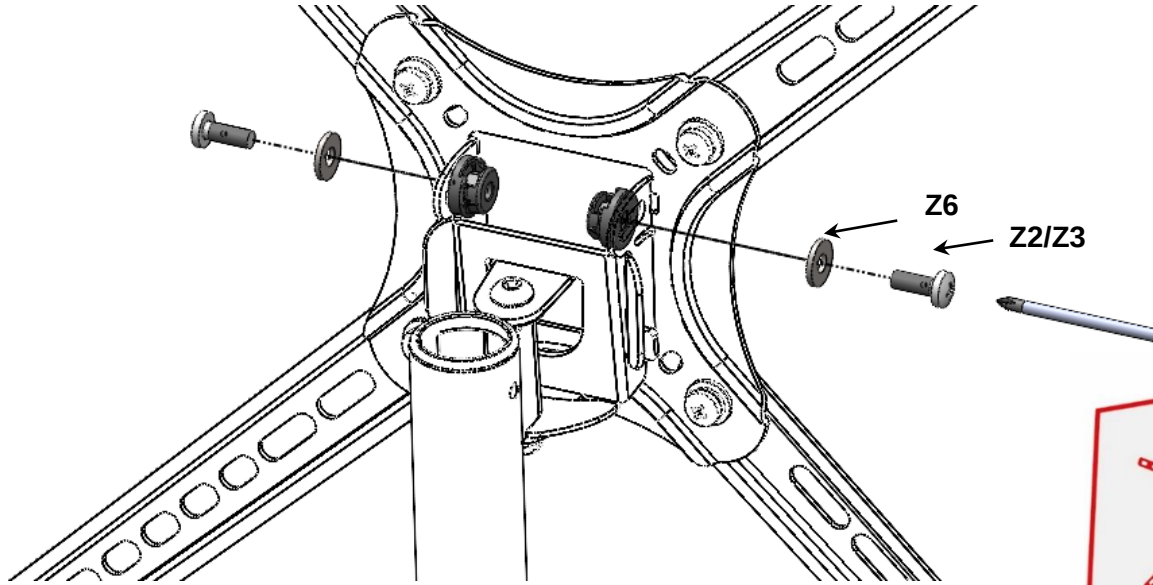

11 Level the TV

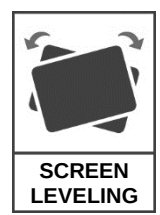

BACKSCREEN CONNECTION POSITIONING OPTIONS

