

 
Mobile TV Mount Cart with Metal Shelf



Warning! Ignoring the safety and assembly instructions may result in **SERIOUS OR FATAL INJURIES** from tip over or the falling of the product and the electrical appliances. Opening the package represents your undertaking to closely read and follow the instructions. This product is not intended for use in public places. **For Safety Instructions, warranty and further information, go to: www.barkanmounts.com › Support › Safety Instructions & Warranty**

For more information: barkanmounts.com

If you are satisfied with the product, please give us a 5 stars ☆☆☆☆☆ rating on the website you bought it from. If you are not satisfied please contact us at <https://www.barkanmounts.com/support> and we will solve the problem for you.

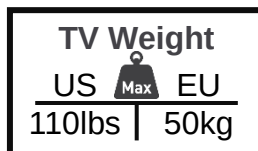

**Safety instructions and installation warnings (provided separately)
must be read in full, prior to assembly.**

 


Warnings!

Tip Over Hazard!




Anchor the product to the wall –
using 2 strong cables

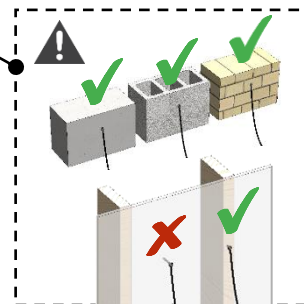

Collision Hazard – place the product in a position
that will prevent people from colliding with it



Do not place the product on inclined surfaces,
at the edge of a surface or near stairs

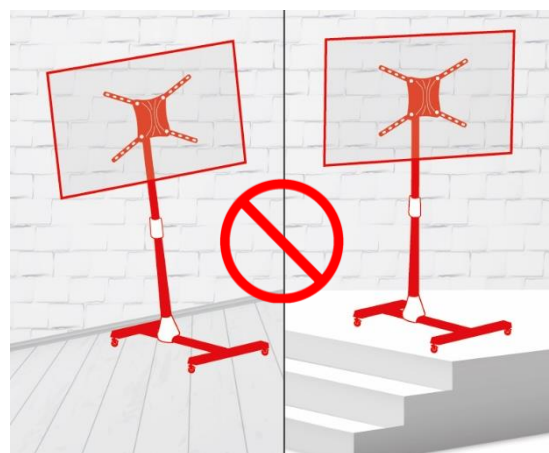

Release Wheel Brakes – do not lock
more than 1 wheel

UNLOCK




LOCK



Max. = 1

Move Carefully – Release the wheel brakes, grasp
the vertical bar with **BOTH** hands and move the
product slowly. Do not move the product by gripping
the TV itself

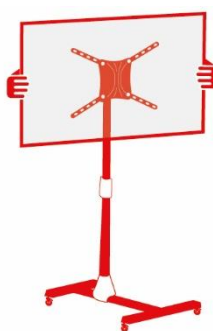


Keep children under the age of 15
away from the product



Adjust the TV tilt angle carefully. Using excessive
force might break the screen or tip over the
product.



Main Parts

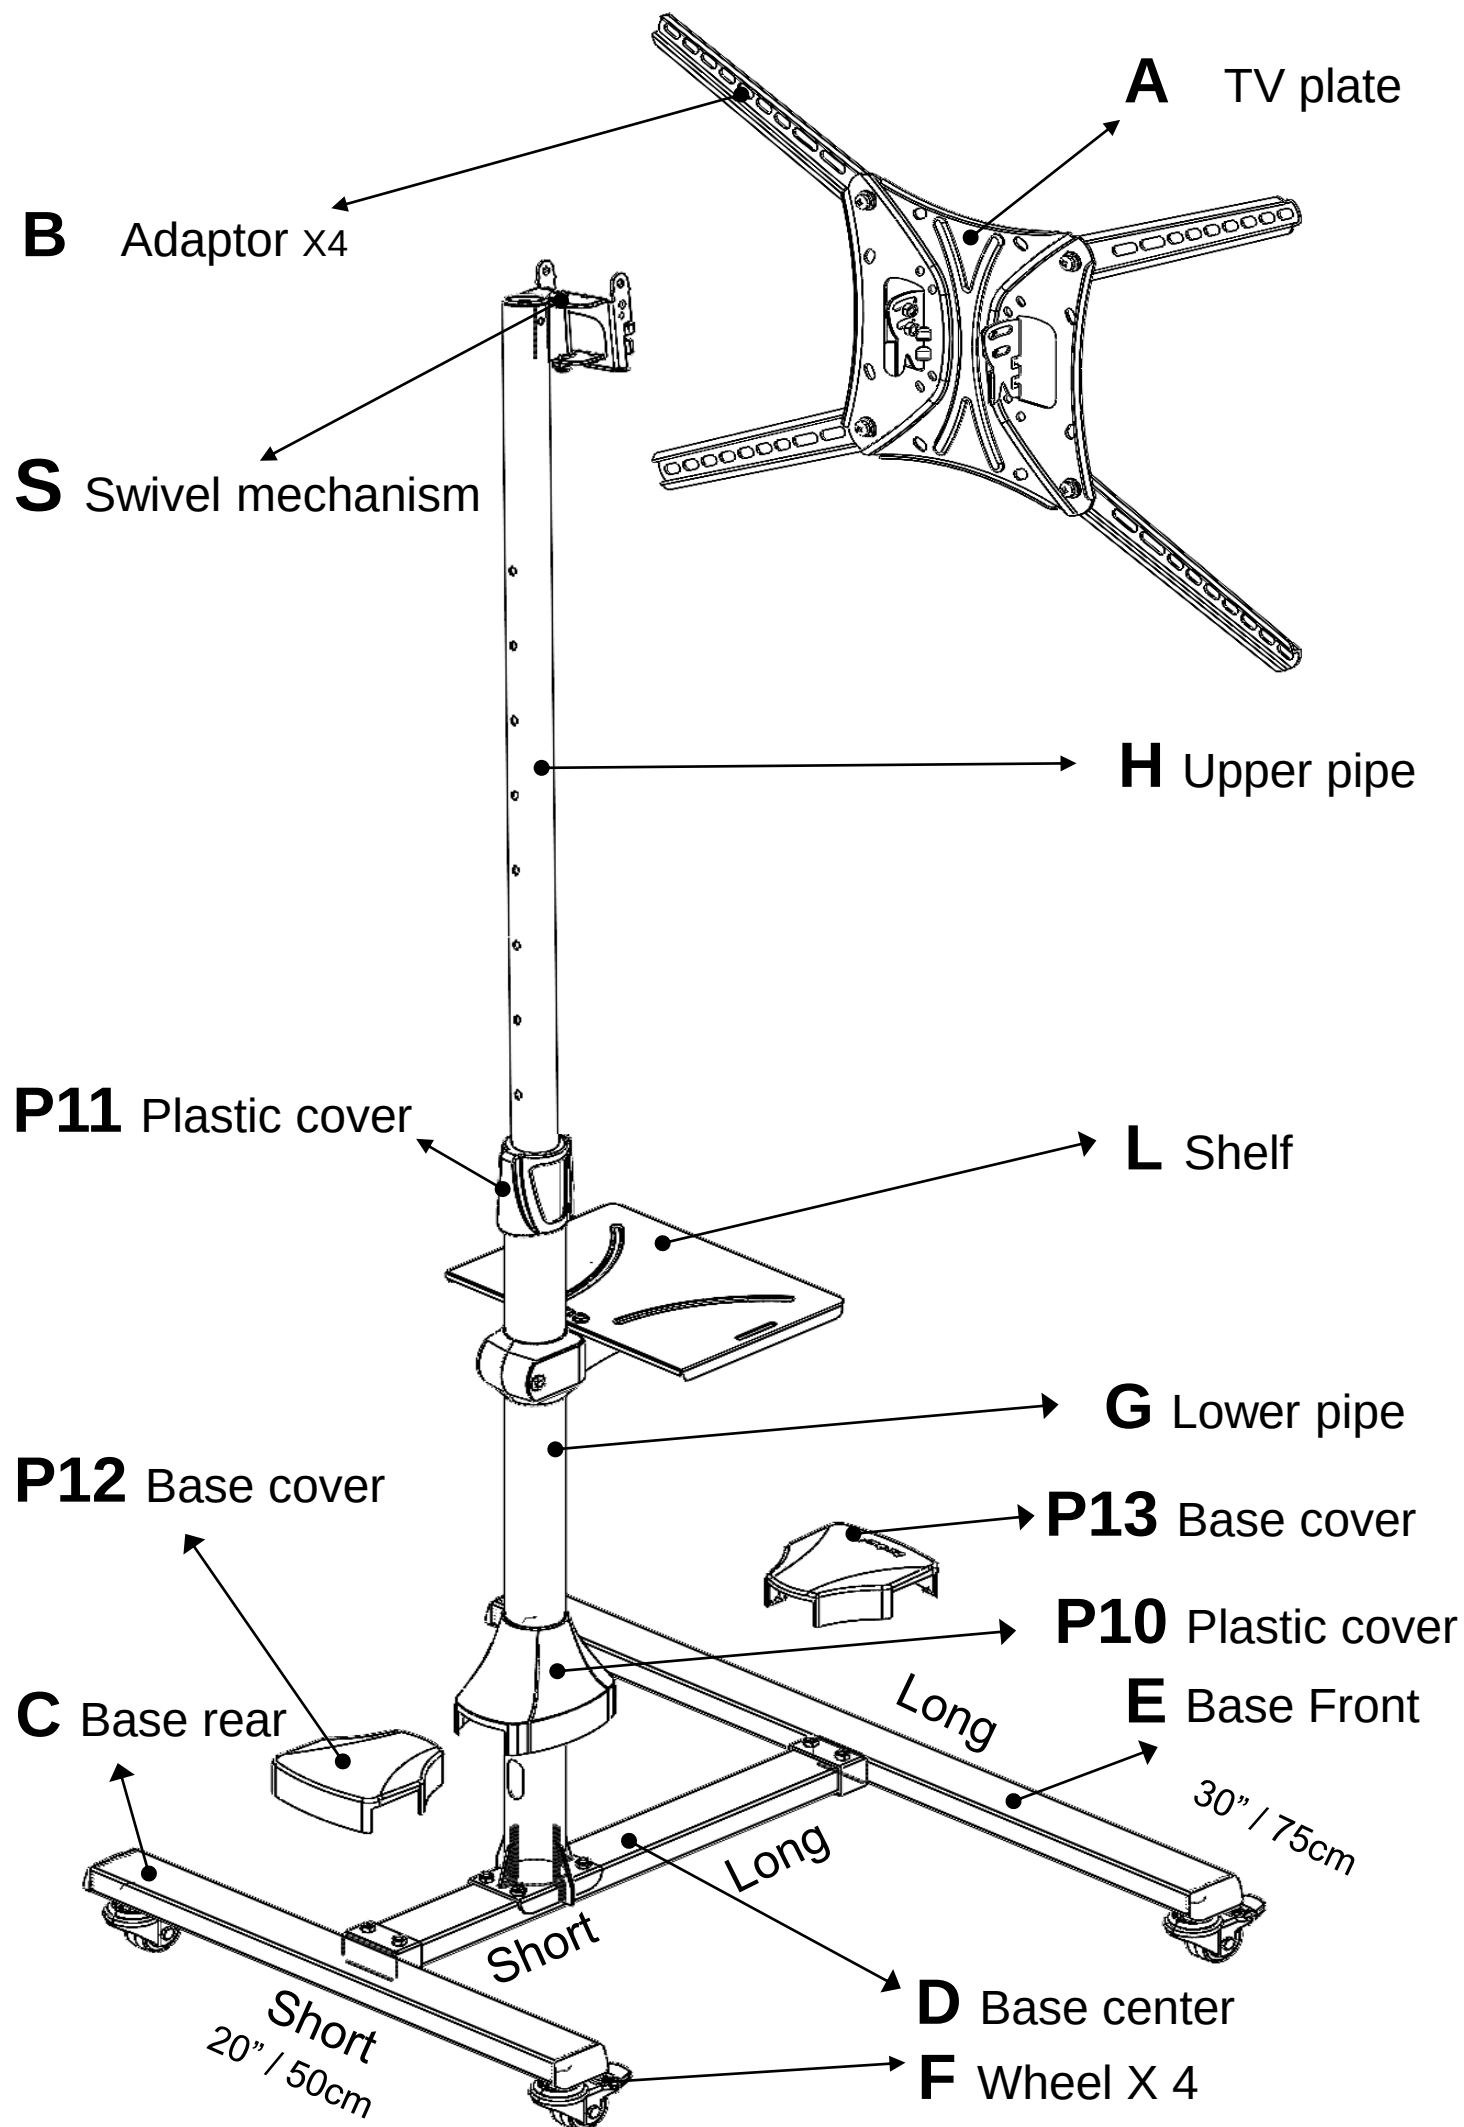

Z6



 
x8

Z7



x4

Z8


M6

x4



#	M	L mm	L inch	pcs
Z1	4	20	$\frac{3}{4}$	4
Z2	6	16	$\frac{5}{8}$	4
Z3	6	25	1	4
Z4	8	25	1	4
Z5	8	45	$1\frac{3}{4}$	4

P1



x4

P2



 
x2

P3




x2

Y1

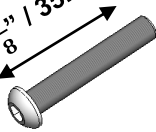
 $1\frac{3}{8}$ / 35mm
M6


x8

 Y2

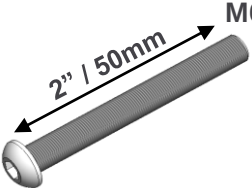
2" / 50mm
M6


x2

 Y3


M6

x4

 Y4


M6

x6

Y5



x1

Y7


M4

x5

Y8


M4

x5

Y9



x5

Y10


M6

x1

Y11


M6

 
x1

I




x1

J

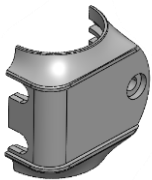

x2

 K

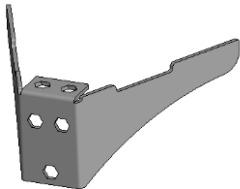


x1


Required Tools:



 
No. 2+3

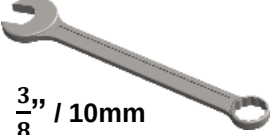

$\frac{3}{8}$ " / 10mm

 


$\frac{9}{16}$ " / 14mm

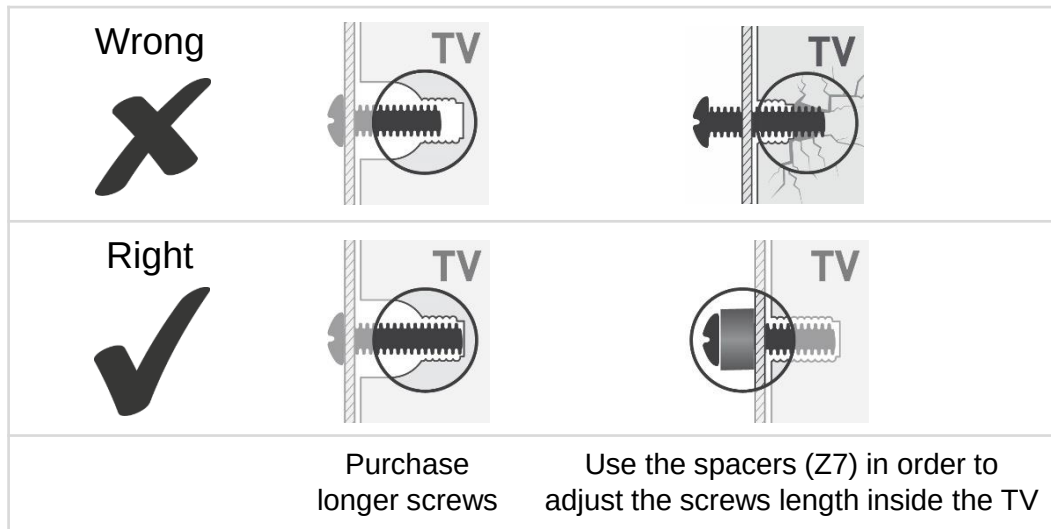 


1

 Continue according to your TV mounting hole pattern.

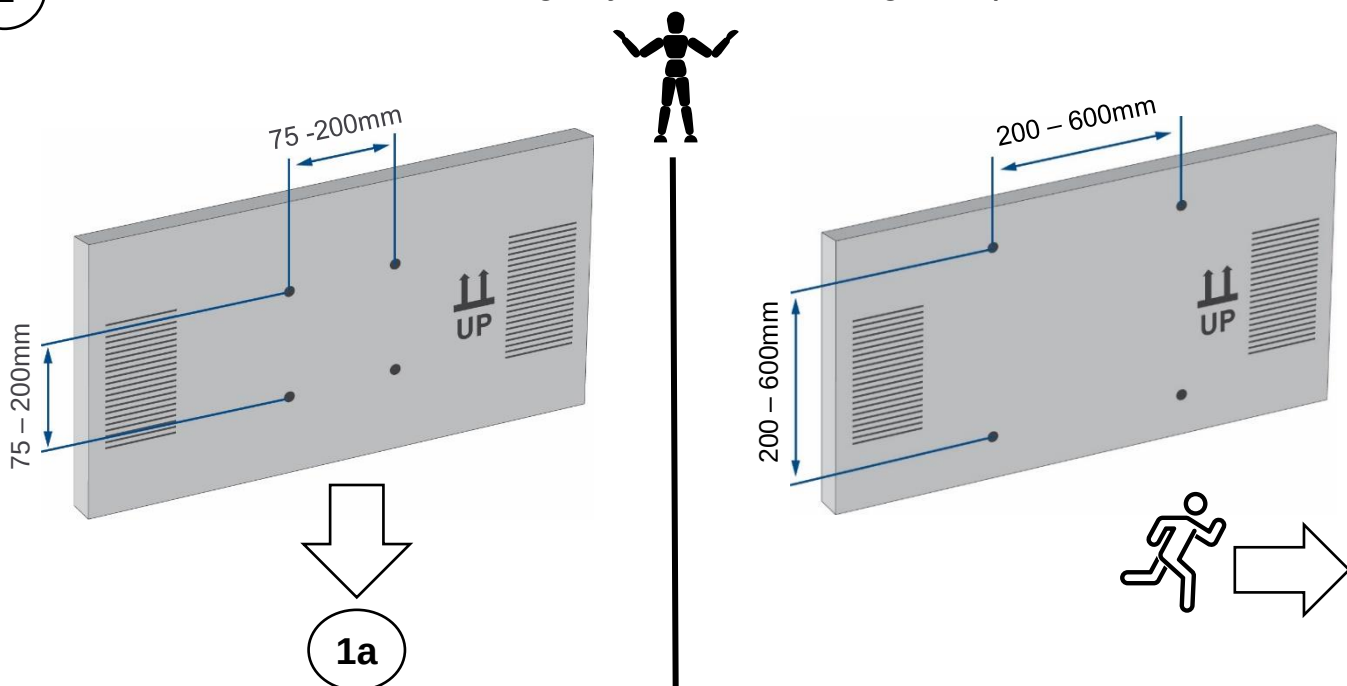


 1a 75x75 mm up to 200X200 mm (inclusive) hole pattern:

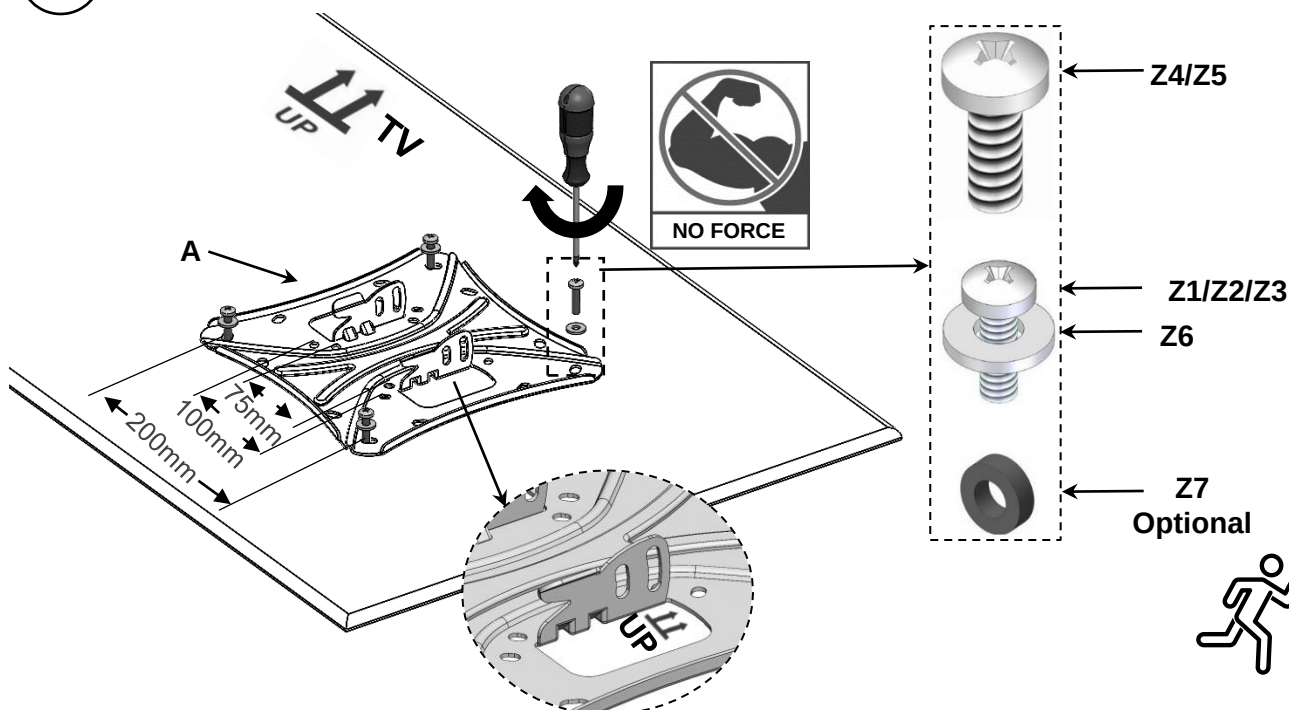

1b Hole pattern above 300x200 mm and up to 600x400 mm:

 
① Disassemble the screws.

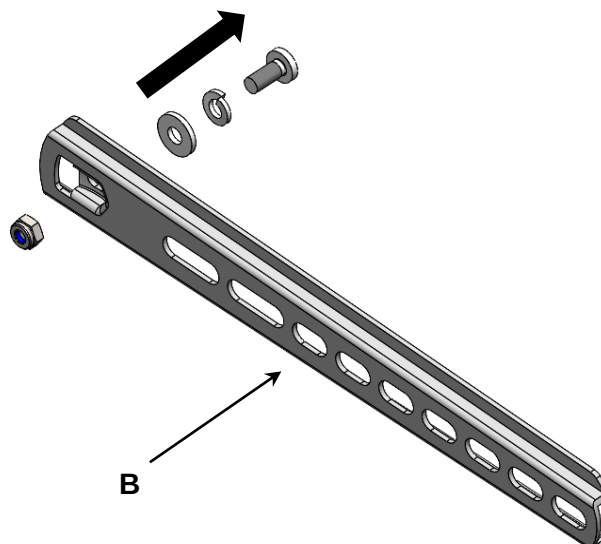

② Connect the 4 adaptors to the TV plate and reassemble the screws.

Flat screen

 
Flat TV

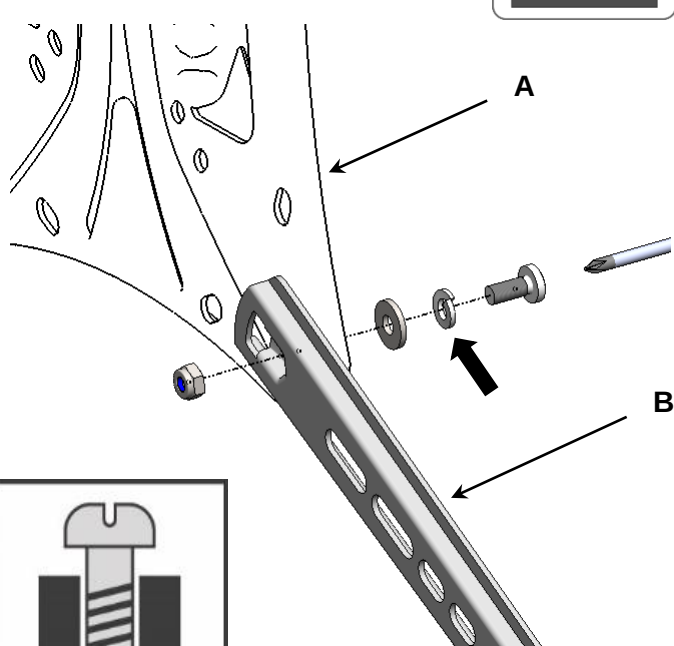


P1



 Right

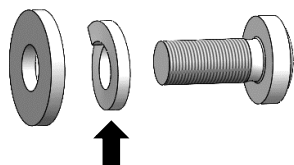


Wrong

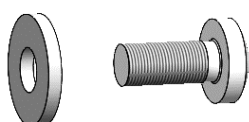 

Curved screen

 
Curved TV

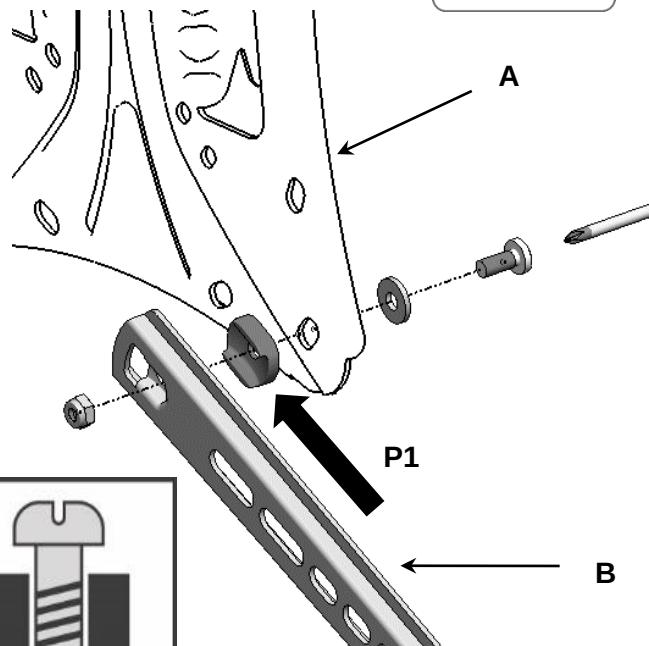


P1




 Right

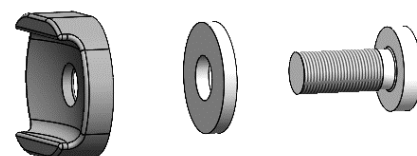


Wrong

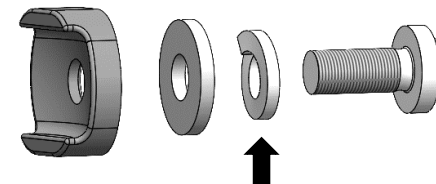 

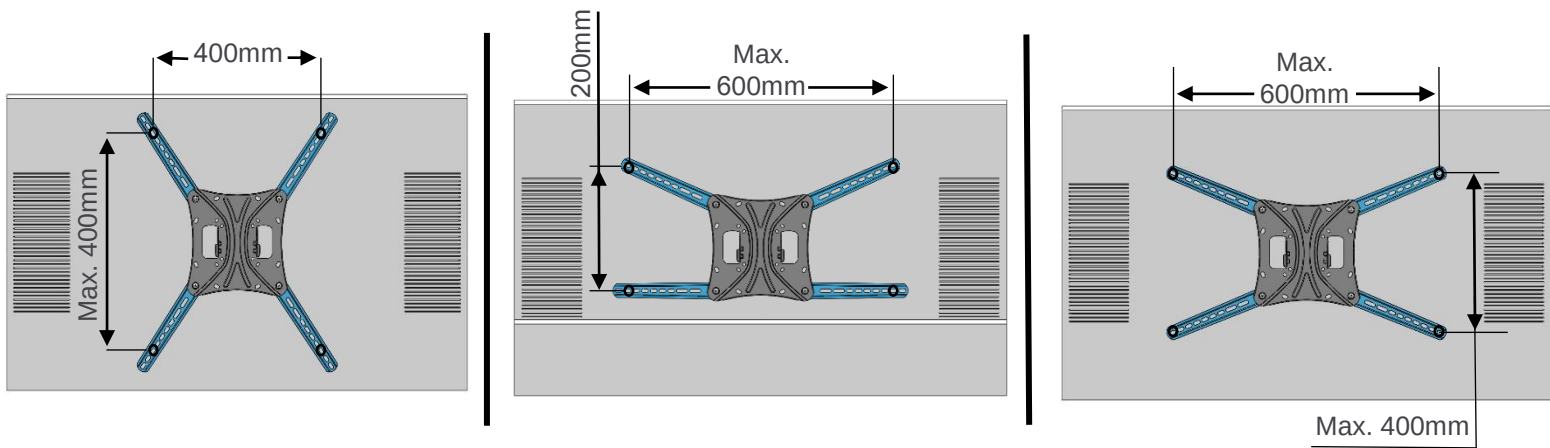 

For more positioning options go to last page

 
Connect the TV plate with the adaptors to the TV in all 4 connection holes.

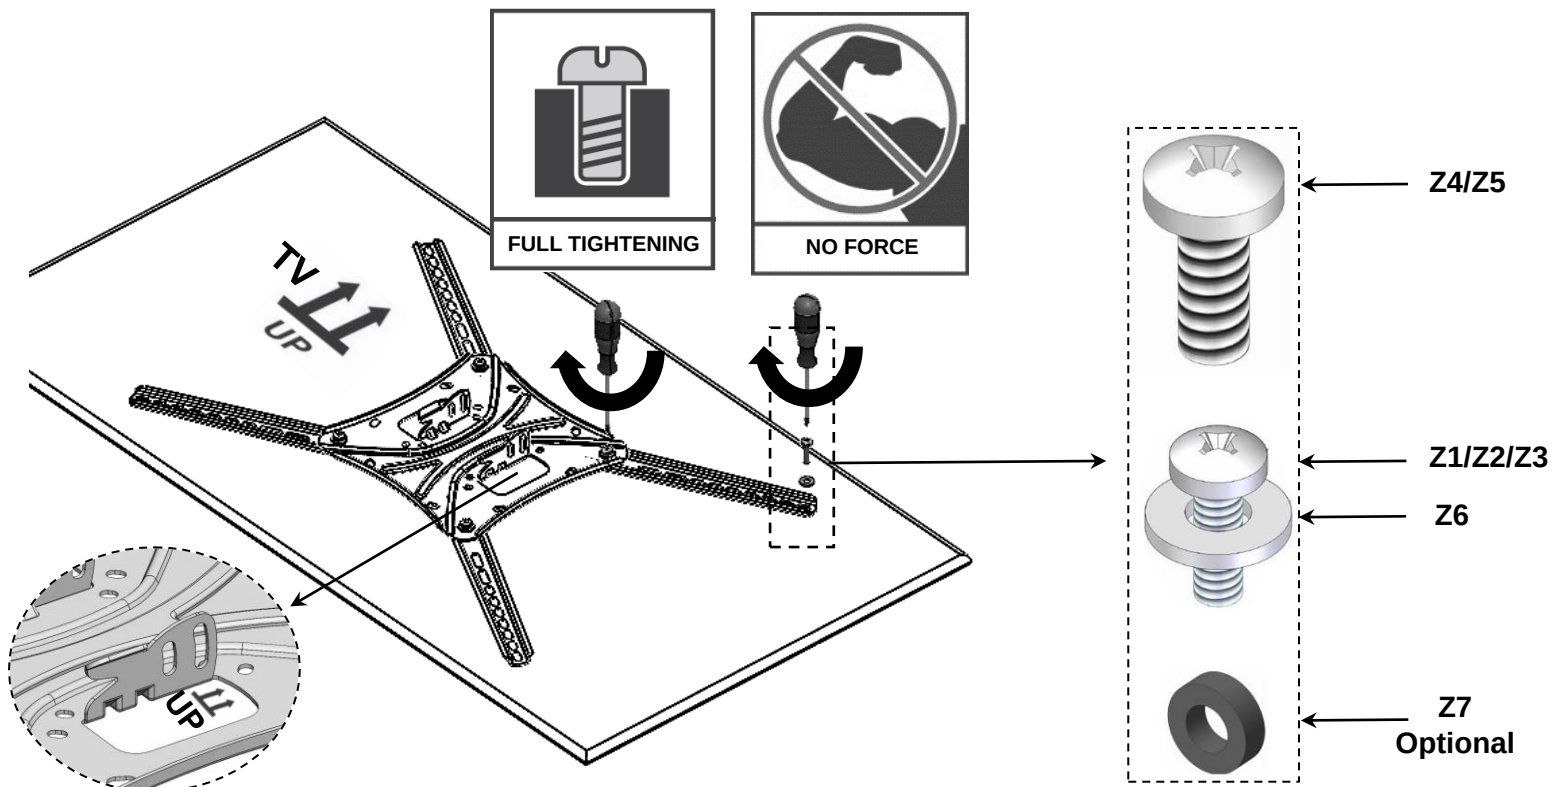


2

Long – Long: Connect the Base front (E) to the longer end of the Base center (D).

Short – Short: Connect the Base rear (C) to the shorter end of the Base center (D).

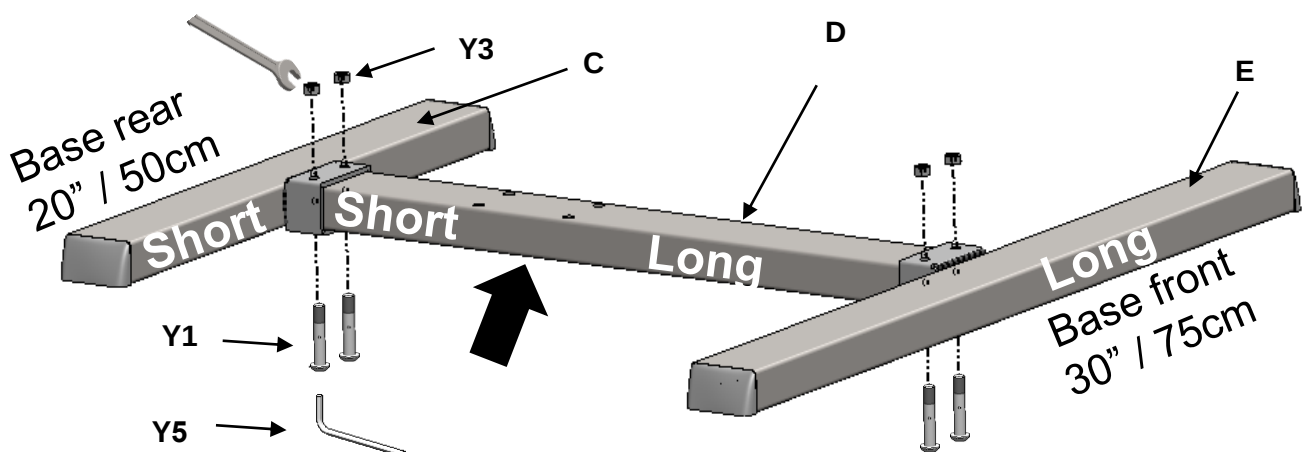


3 Connect the wheels. Make sure they are locked .

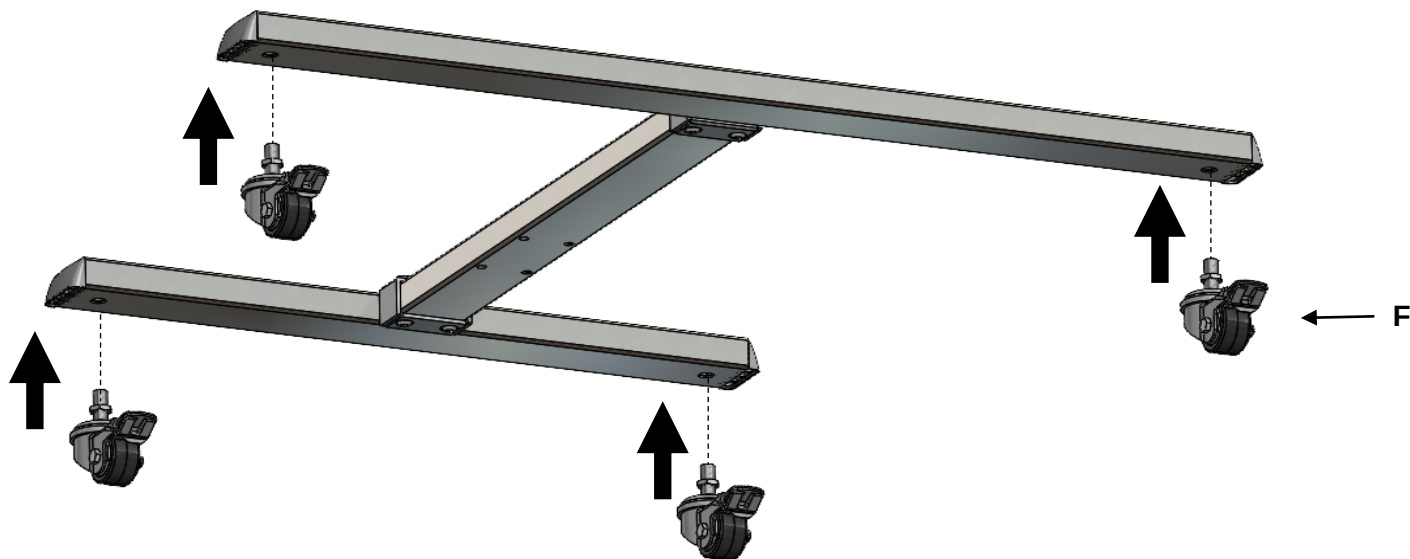


Tighten each screw as needed until the base is balanced.


A Tightening

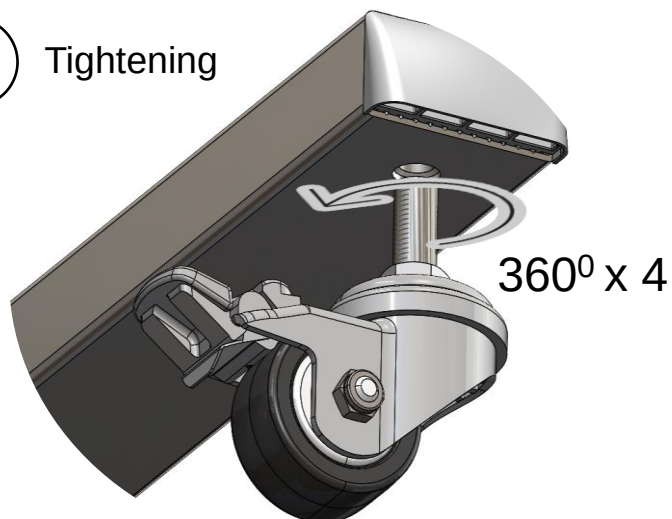

B Leveling

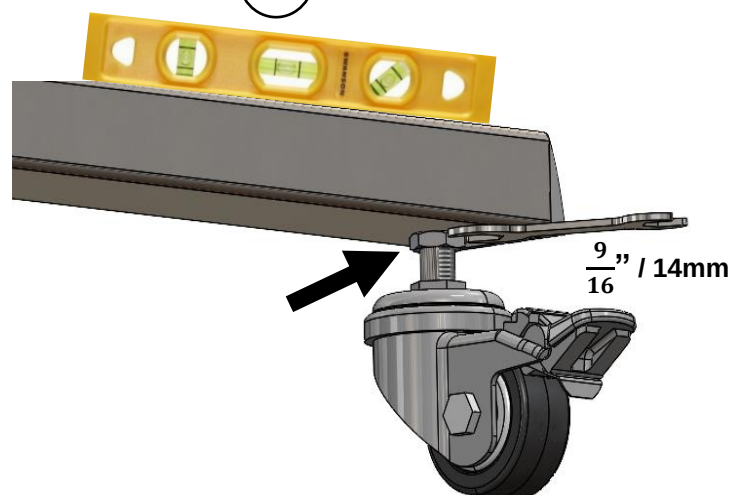


4 Connect the lower pipe (G) to the base center (D). Make sure that the hole for cables is facing to the base rear.

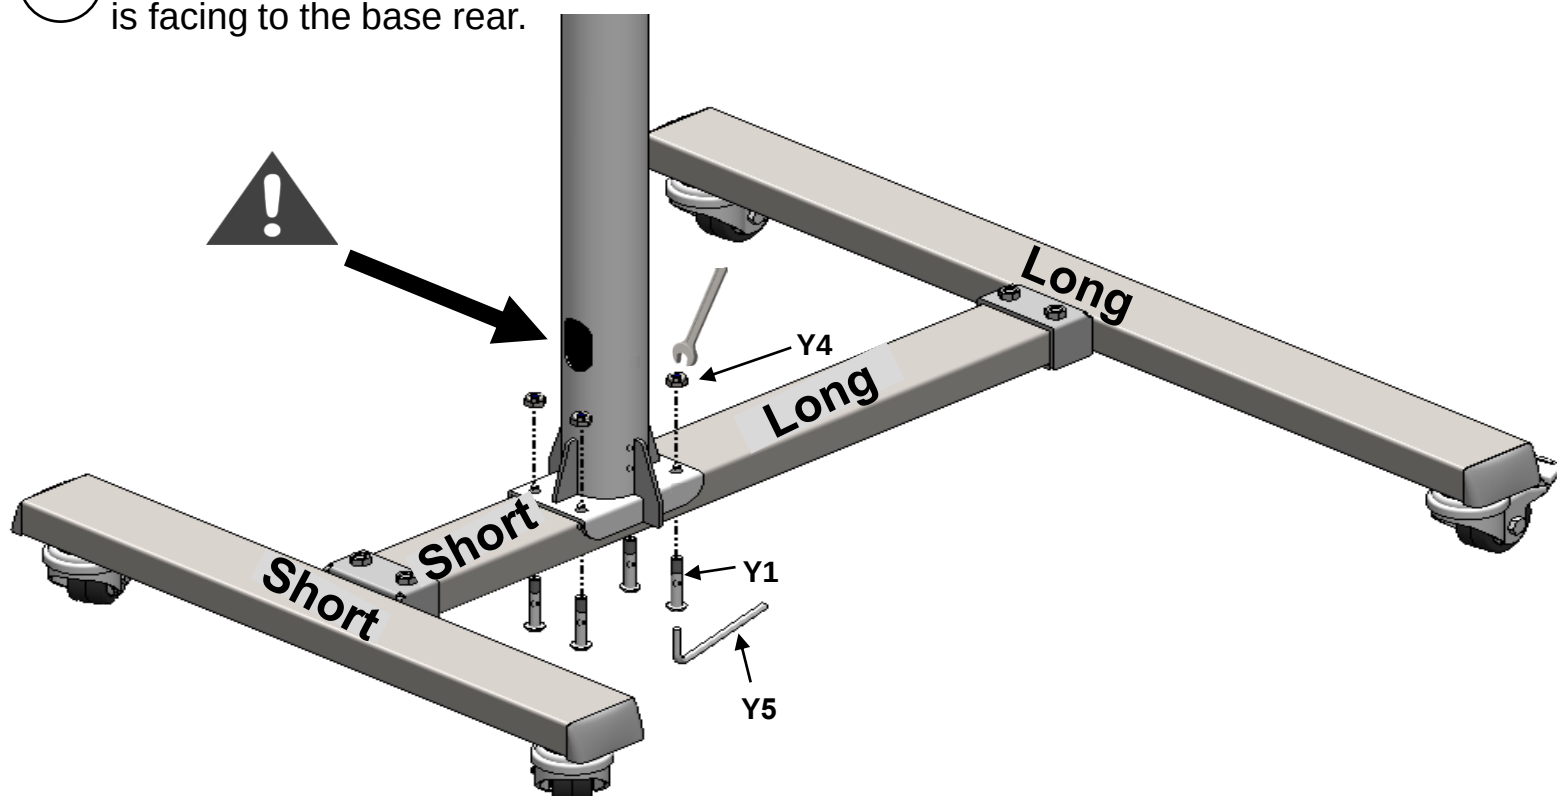


5

1. Slide P10 to the bottom of the lower pipe.
2. Place P11 on the top of the lower pipe.
3. Attach P12 and P13 to the connections points between base front/ rear and base center.
4. Slide the upper pipe into the lower pipe.

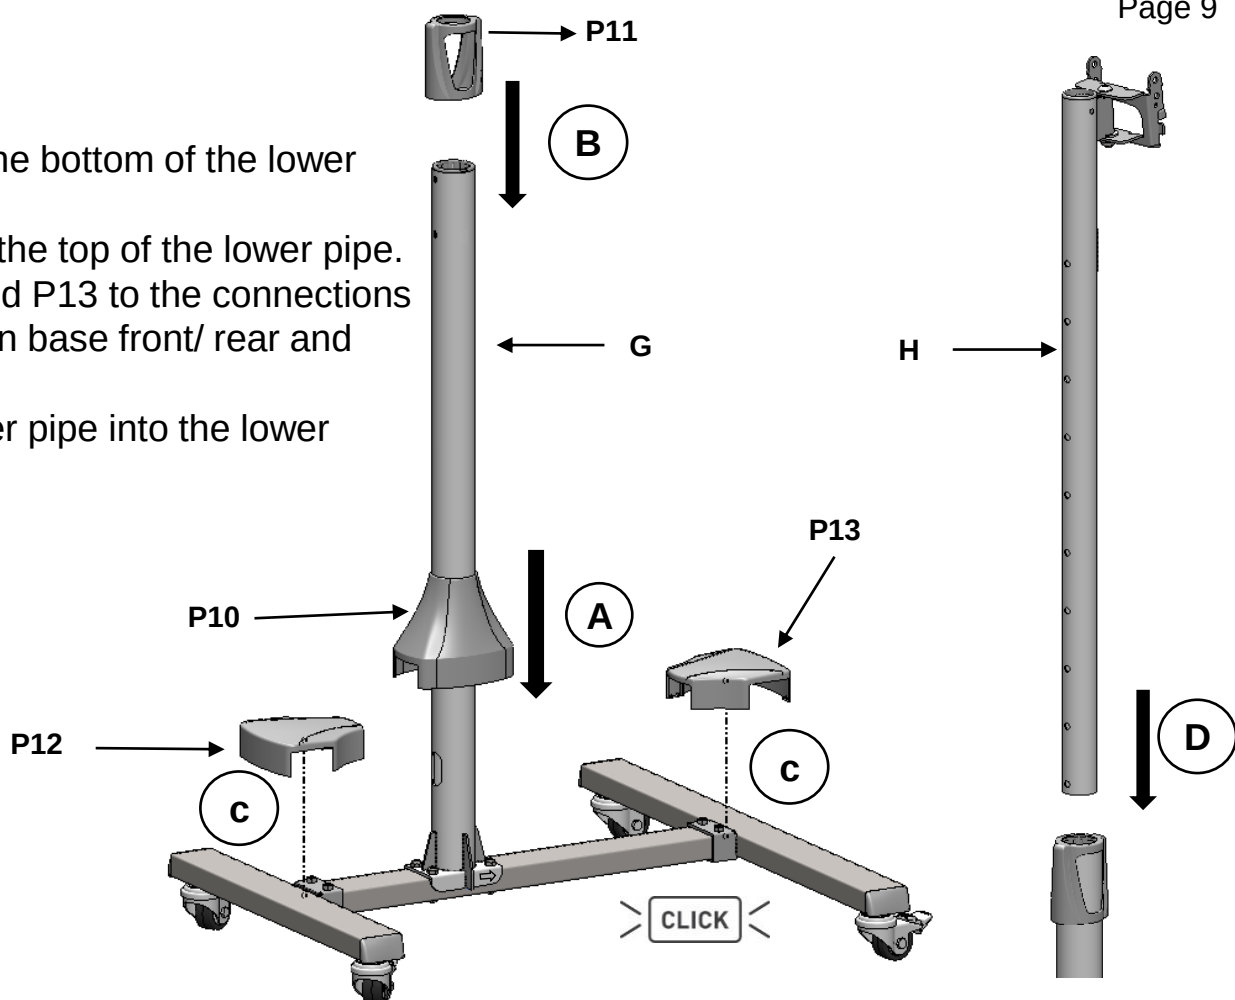


6

A Pass the cables through the pipes.

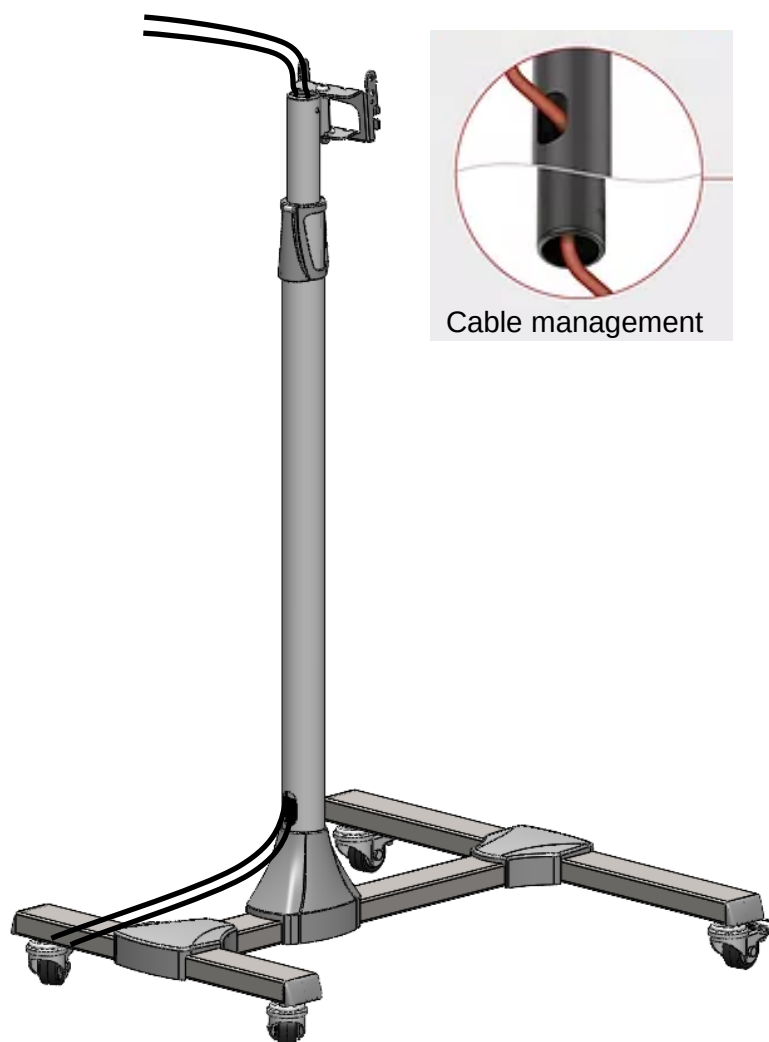


B


Adjust the stand to the desired height and screw in the screws.

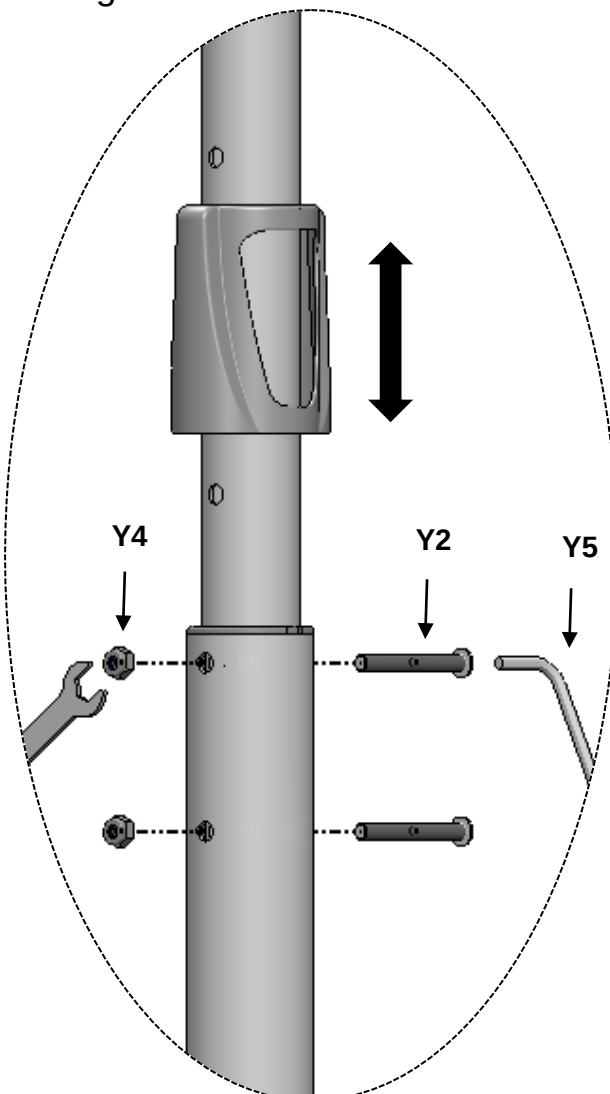



Full Tightening — Whenever the full tightening icon is displayed, make sure to place a nut inside the hexagonal slot and that the endpoint of the screw crosses the edge of the nut.

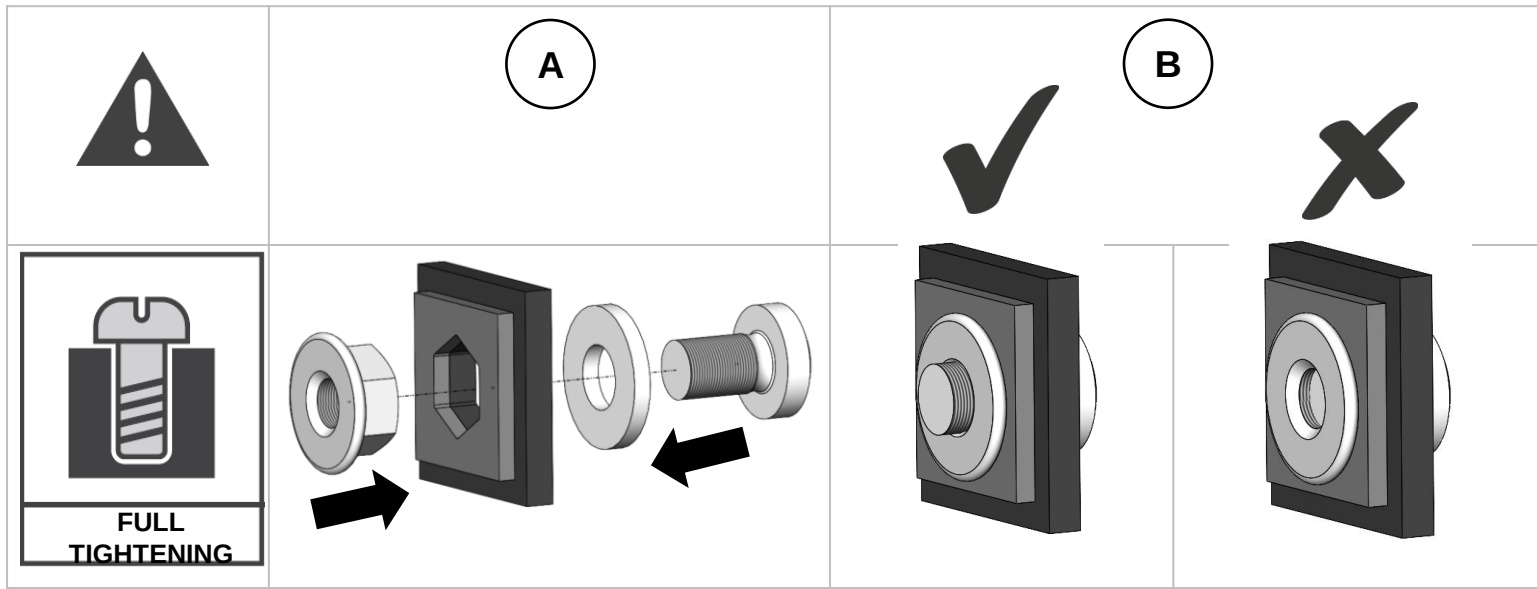


- 7** Remove plastic parts (J) from the U-shaped part (I).

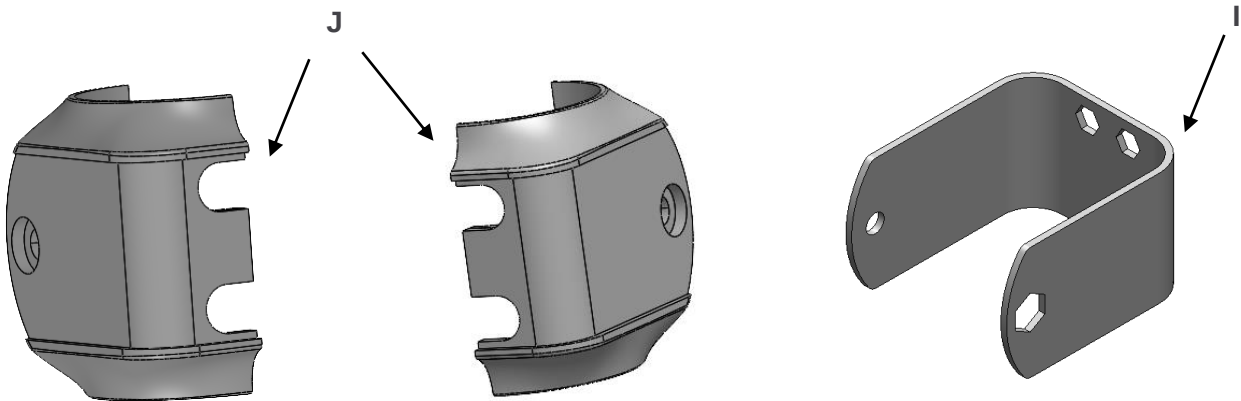


- 8** Connect the base (K) to the U-shaped part (I)

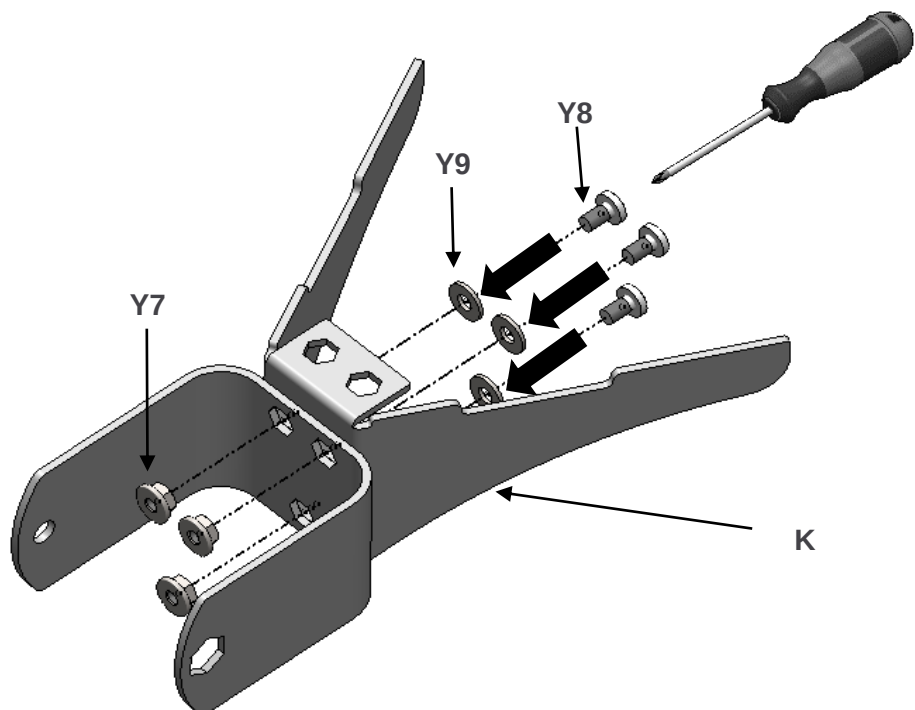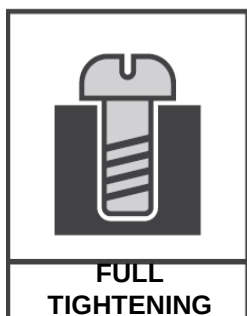


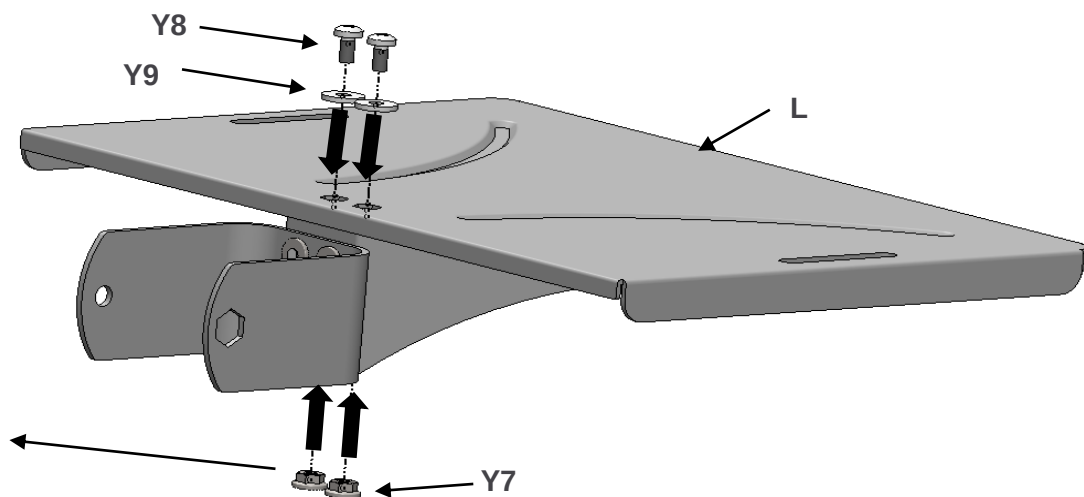


- 10
1. Assemble the plastic parts (J) on the lower pipe (G).
 2. Attach the U-shaped part on it.

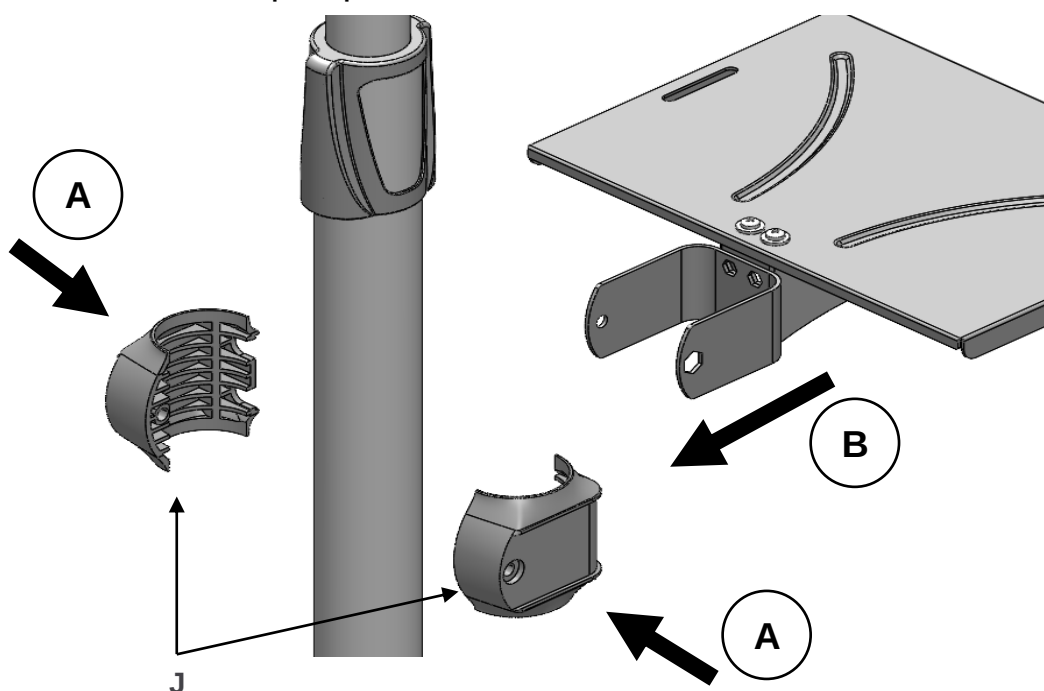





Set the shelf height.

Place the nut inside the hexagonal slot and screw in the screw.

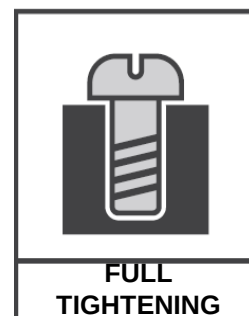
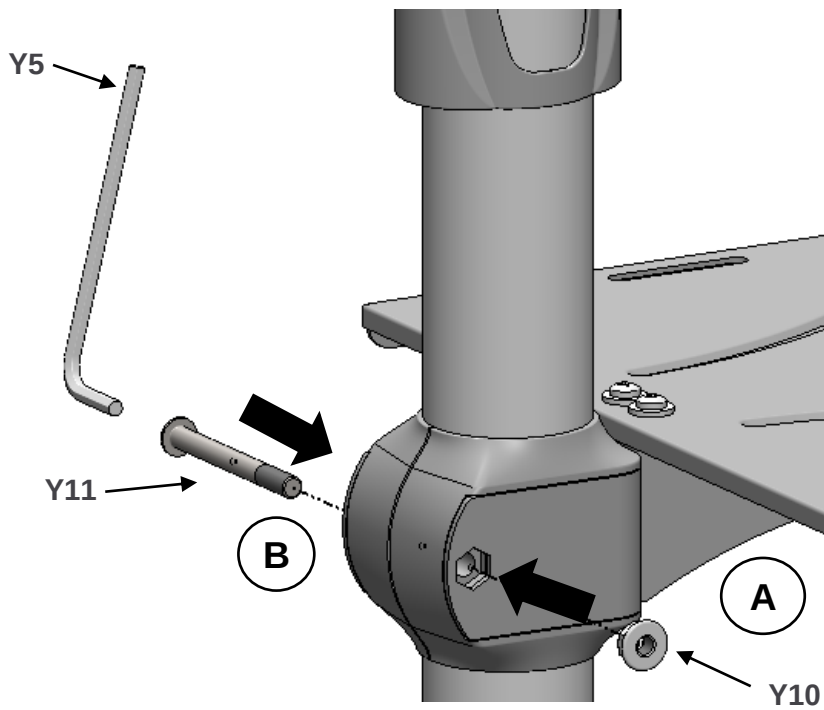


12 Weight test


Apply force on the on the product and make sure it is assembled properly.

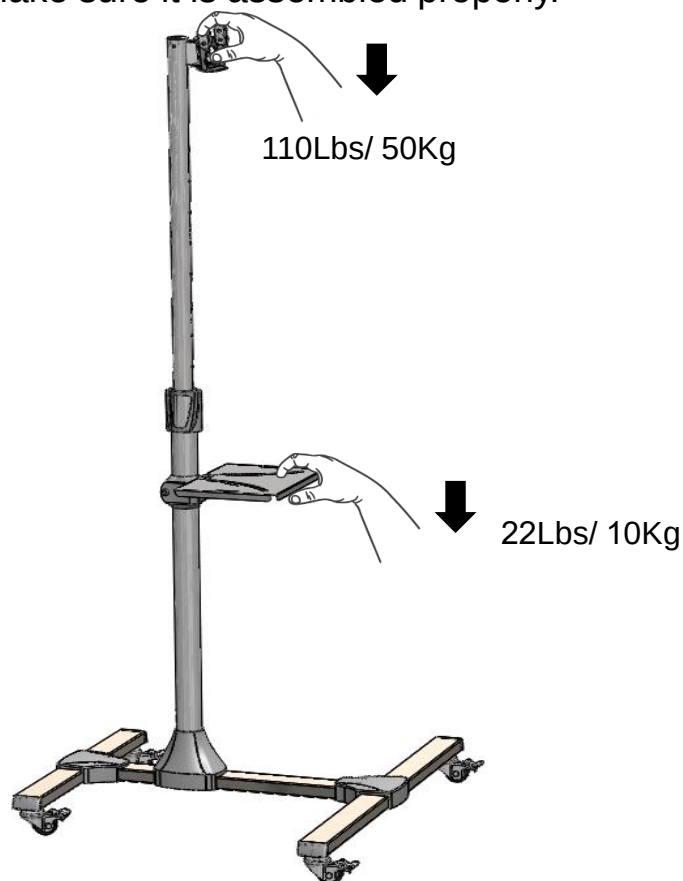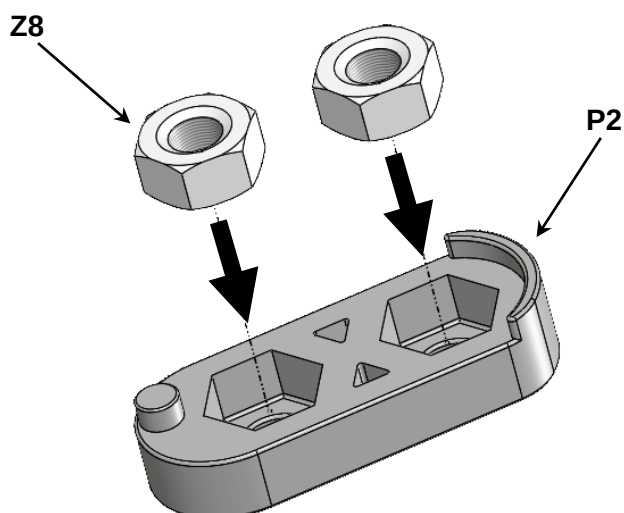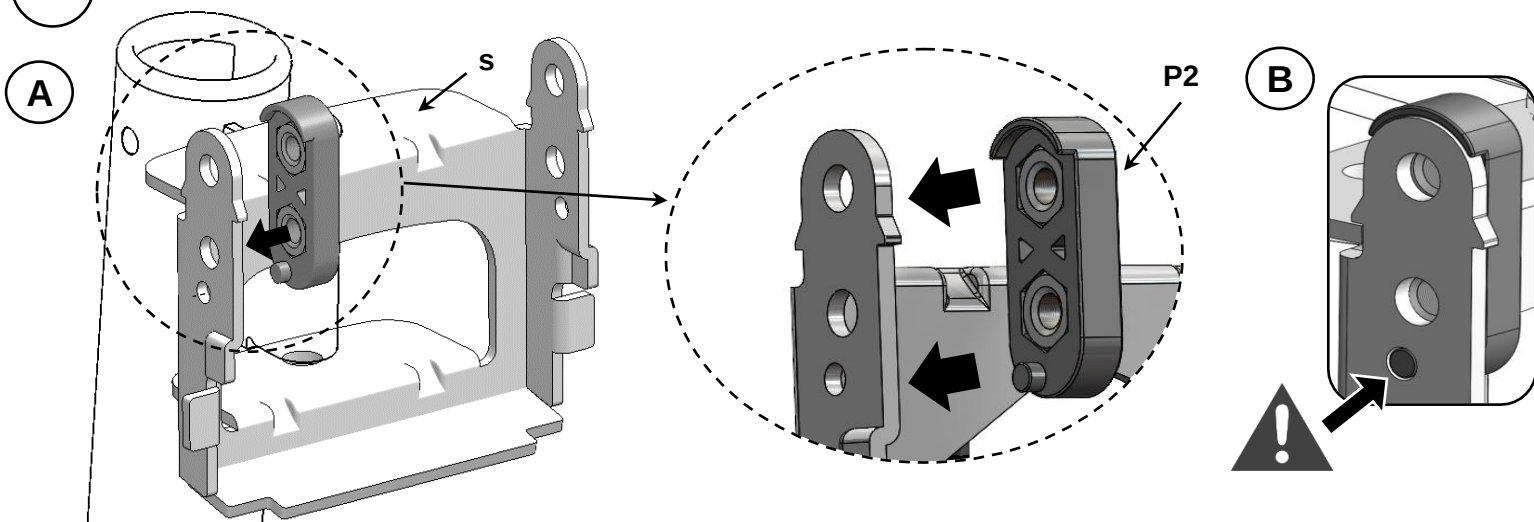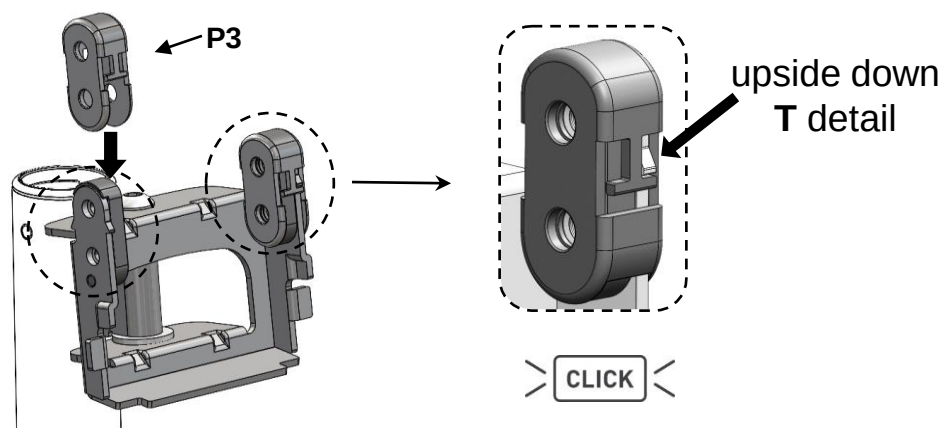**13** Place two nuts (Z8) in each of the two nut-housings (P2).**14** Attach the nut-housings (P2) on to part S. Make sure that the tab is inserted into the slot.**15** Push parts P3 down on the nut-housings (P2). The upside down "T" must pass the protruding tooth (shown below).



16 Connect the TV plate with the TV to the upper pipe (H).

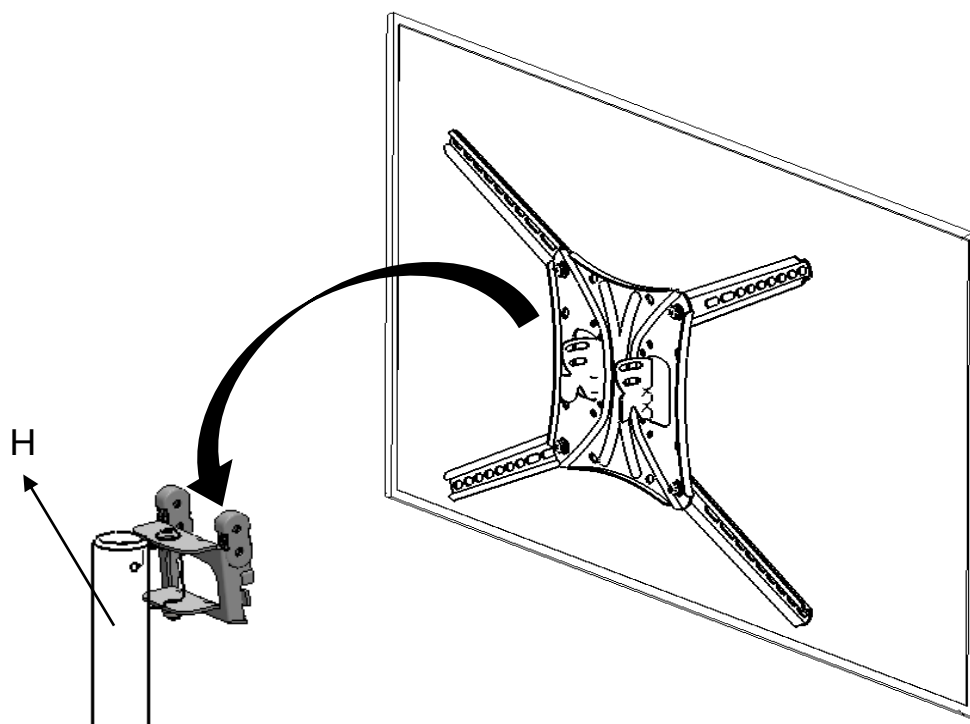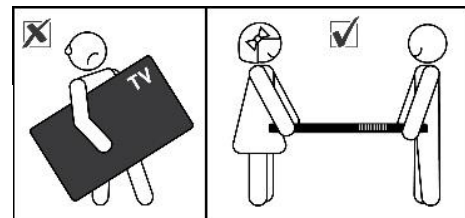



17 Insert and tighten the screws on both sides to create friction for the tilt mechanism. Adjust the tilt angle of the TV carefully

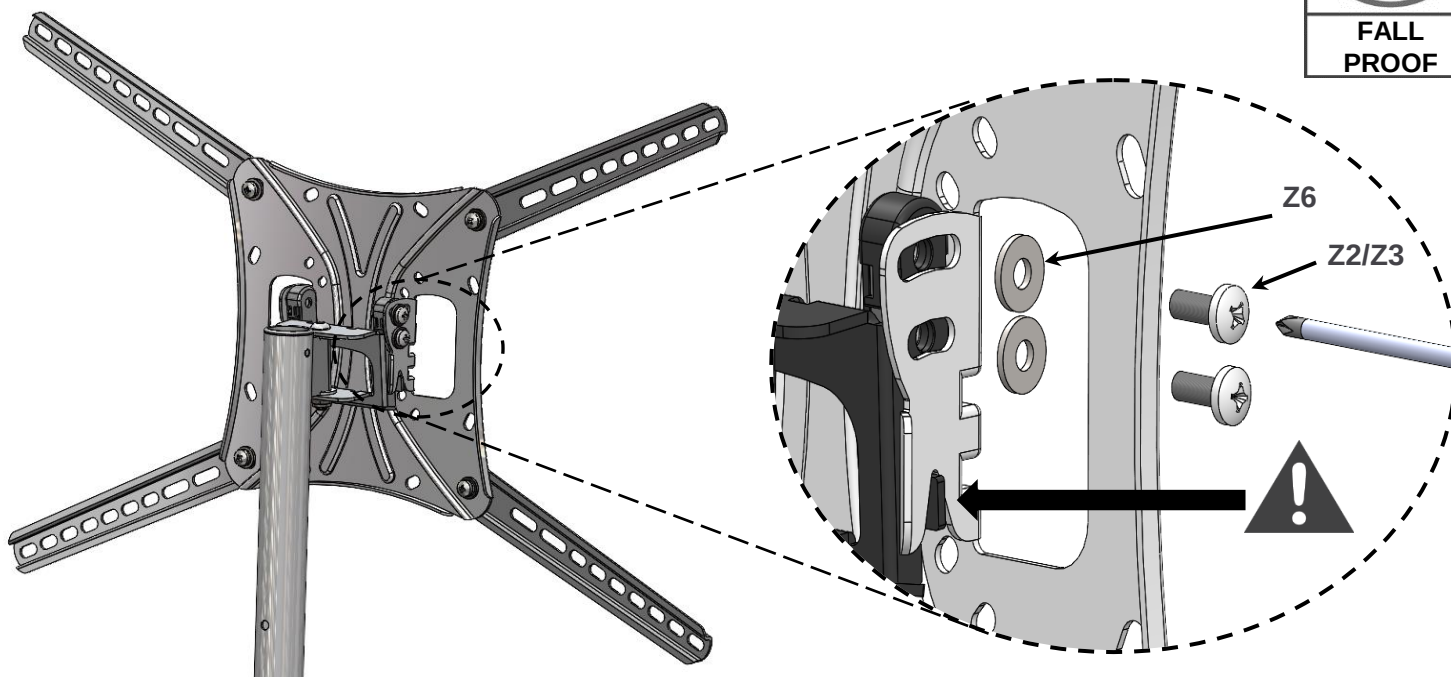

18 Level the TV.

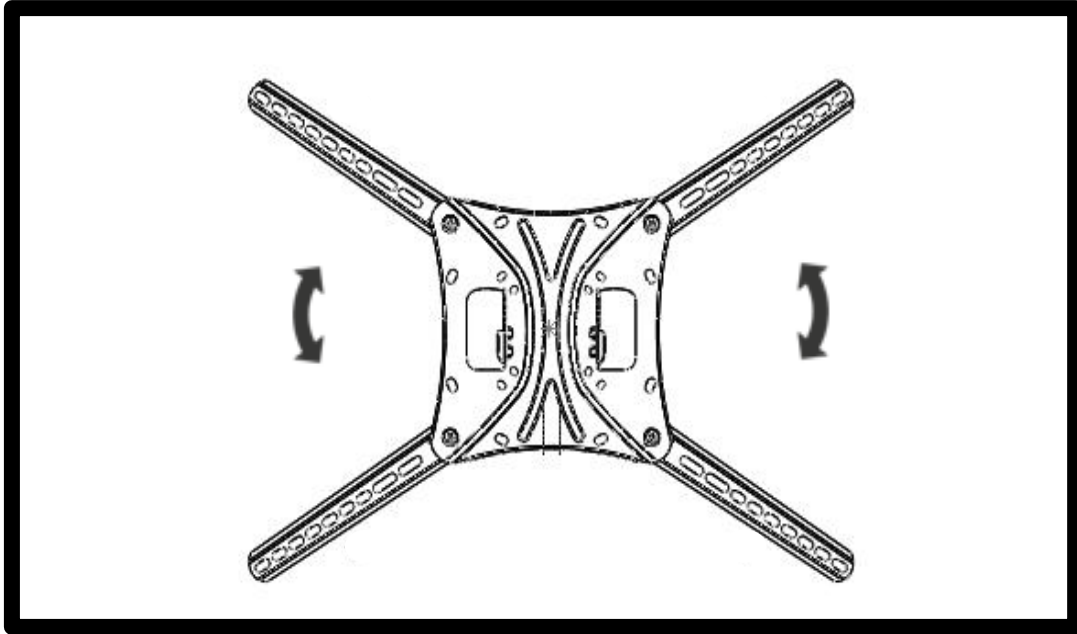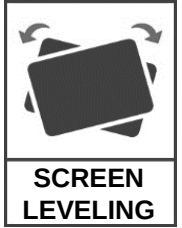


Disconnect the TV, remove the screws and lift the TV.

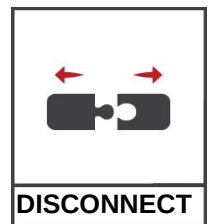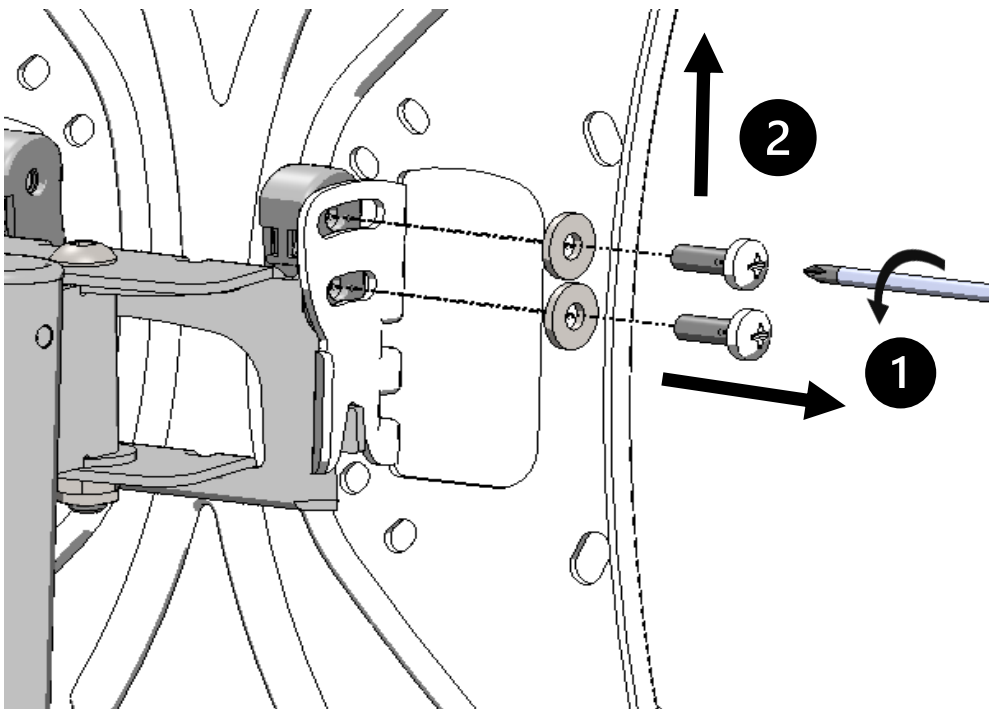

BACKSCREEN CONNECTION POSITIONING OPTIONS


1

75x75, 100x100,
100x200, 200x100, 200x200

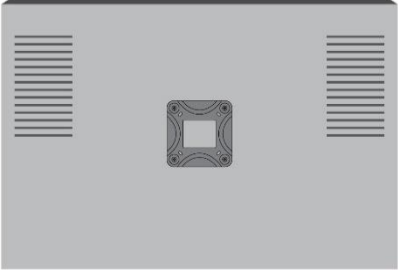


2

 300x200,
400x200, 600x200

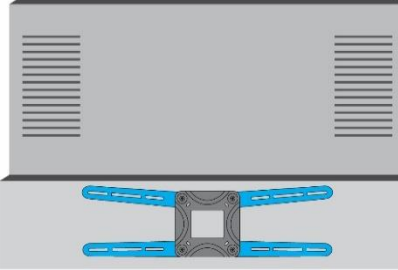


3

 200x100, 300x300,
400x300, 600x200, 600x300

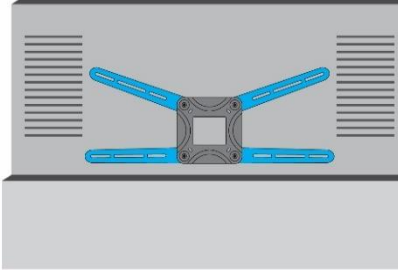


4

 300x300

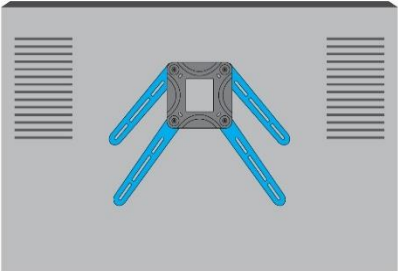


5

 300x300

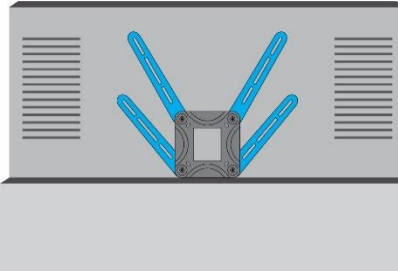


6

 200x300

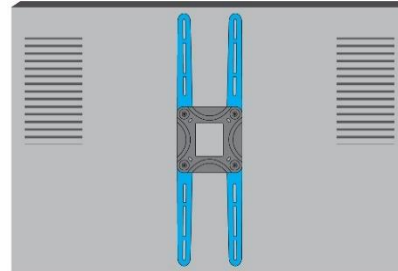


7

 300x300,
300x400, 400x400, 600x400

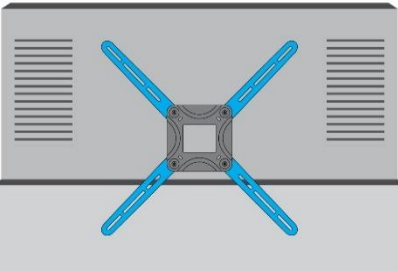

8

 400x300, 600x400

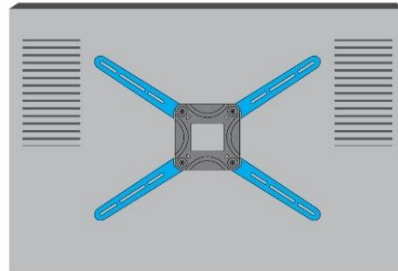



www.barkanmounts.com/FAQ