

Portable Tripod Floor Stand TV Mount




Download Assembly
Instructions with Text

Warning! Ignoring the safety and assembly instructions may result in **SERIOUS OR FATAL INJURIES** from tip over or the falling of the product and the electrical appliances. Opening the package represents your undertaking to closely read and follow the instructions. This product is not intended for use in public places. **For Safety Instructions, warranty and further information, go to: www.barkanmounts.com › Support › Safety Instructions & Warranty**

For more information: barkanmounts.com

If you are satisfied with the product, please give us a 5 stars ★★★★★ rating on the website you bought it from. If you are not satisfied please contact us at <https://www.barkanmounts.com/support> and we will solve the problem for you.

 TP310-MAN-ONL-2304

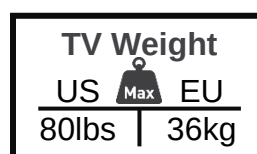


**Safety instructions and installation warnings (provided separately)
must be read in full, prior to assembly.**





Warnings!

 
Tip Over Hazard!

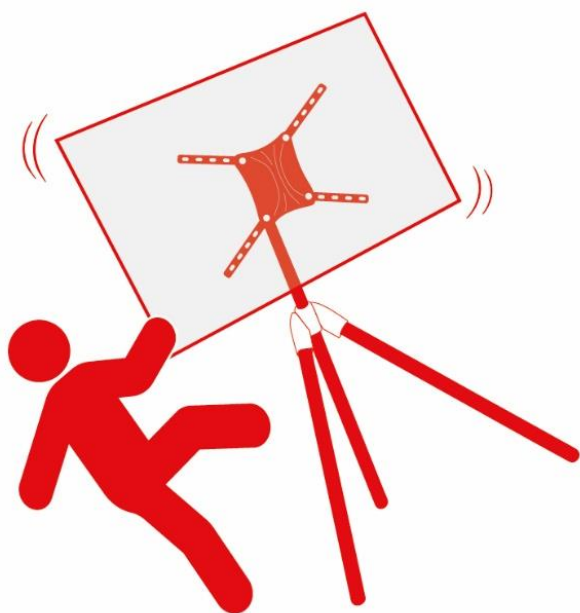

  
Anchor the product to the wall – using 2 strong cables

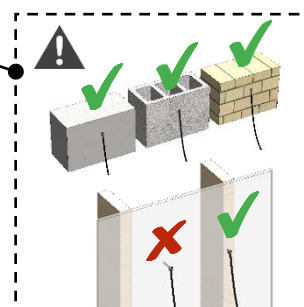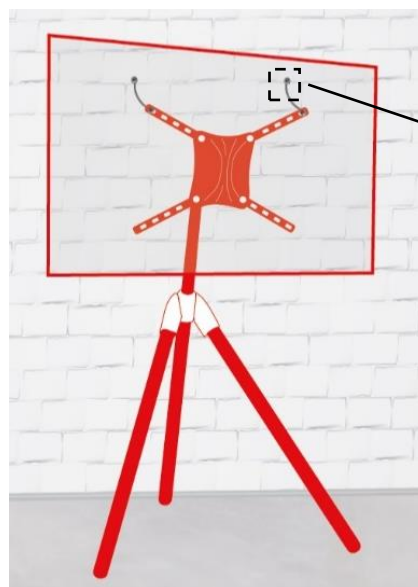

 Collision Hazard – place the product in a position that will prevent people from colliding with it

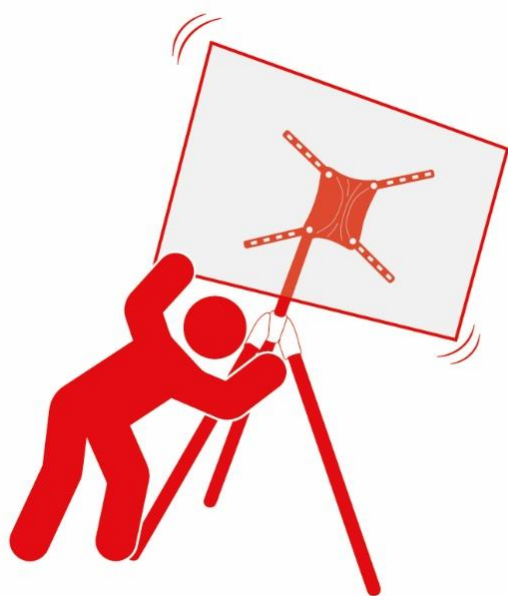

 
Do not place the product on inclined surfaces, at the edge of a surface or near stairs

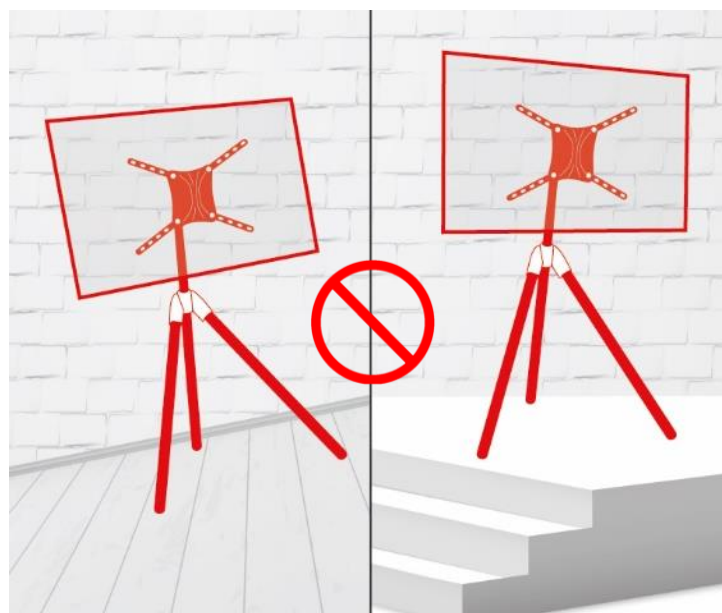


Keep children under the age of 15 away from the product



  Adjust the TV tilt angle carefully. Using excessive force might break the screen or tip over the product.

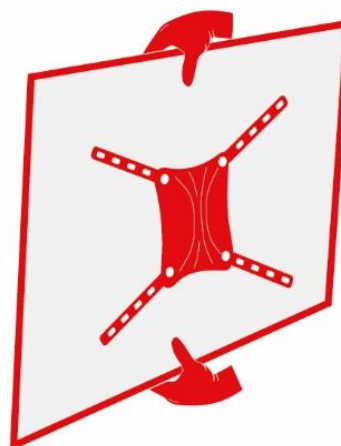


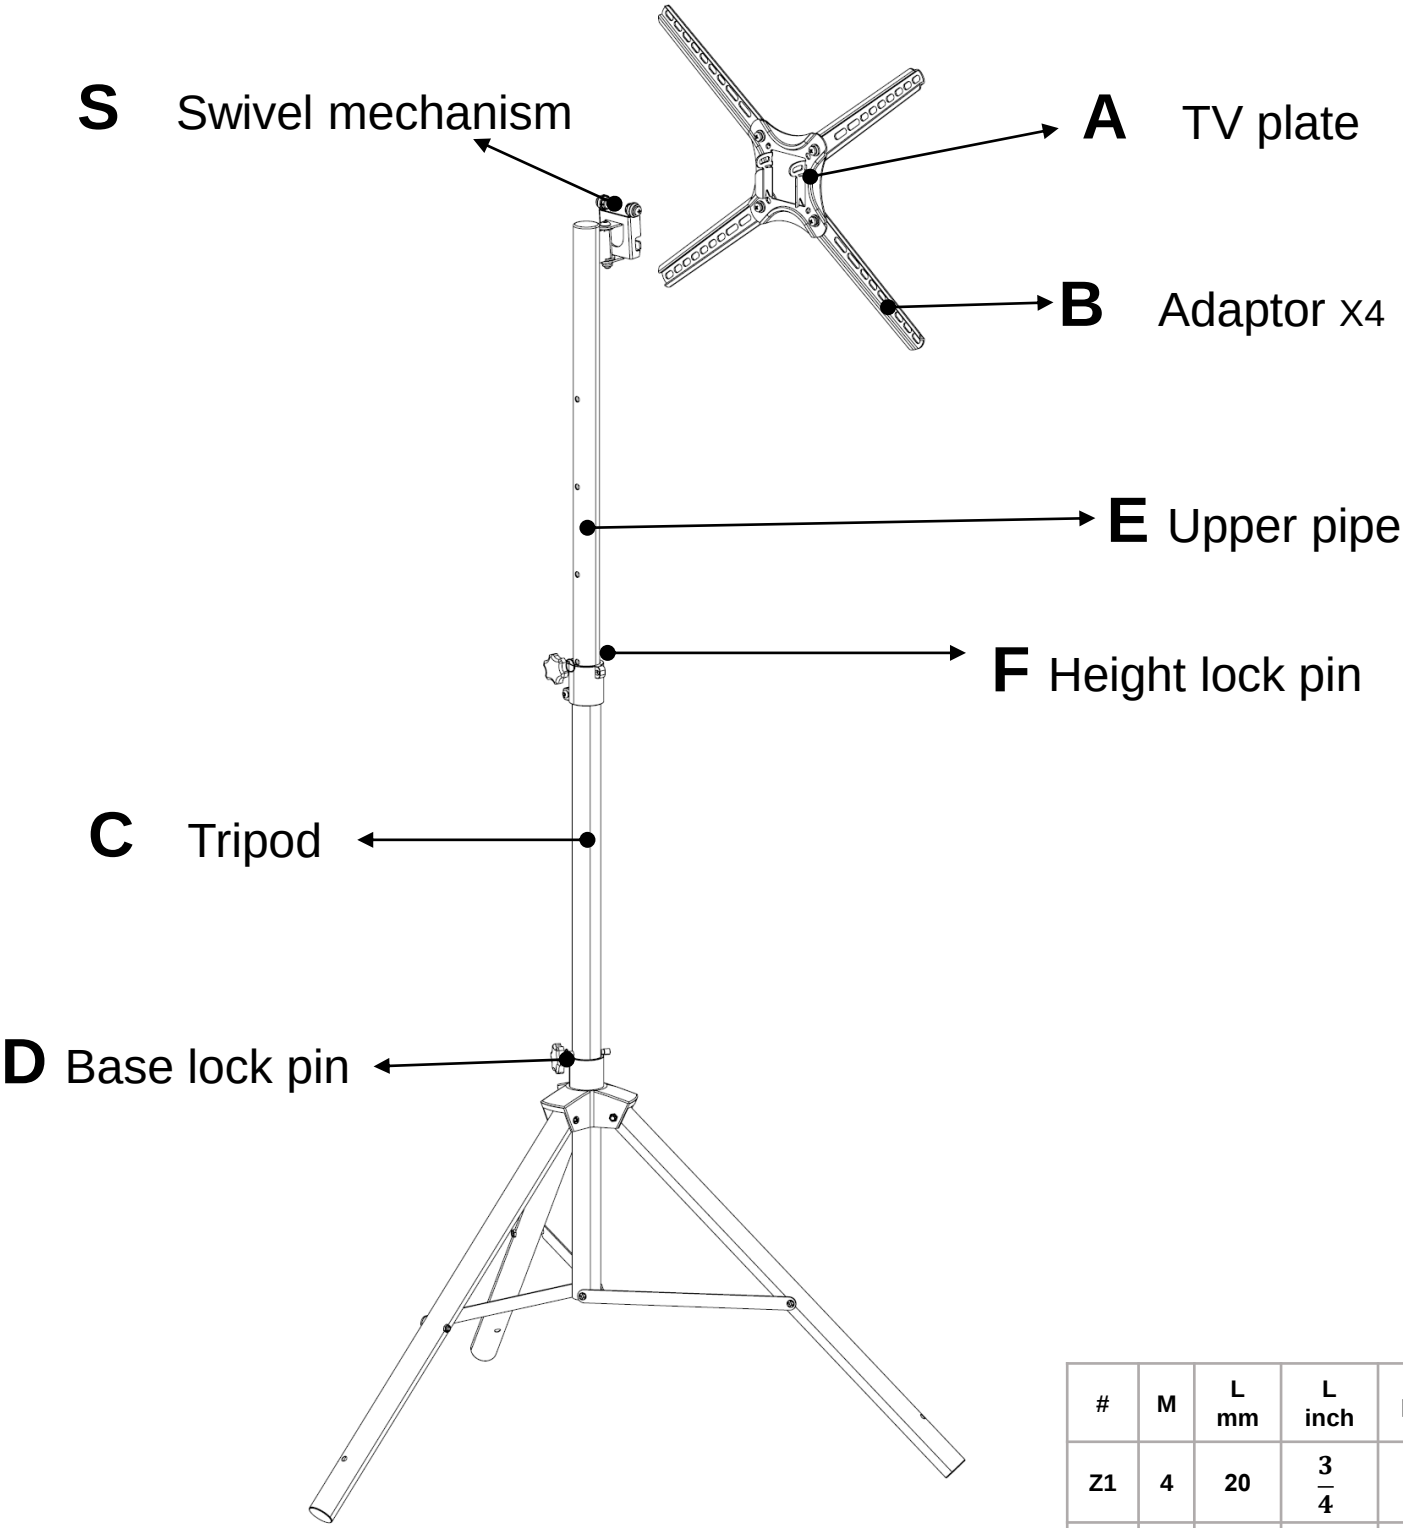


Required Tool:





#	M	L mm	L inch	pcs
Z1	4	20	$\frac{3}{4}$	4
Z2	6	16	$\frac{5}{8}$	4
Z3	6	25	1	4
Z4	8	25	1	4
Z5	8	45	$1\frac{3}{4}$	4

 Z6  x6	Z7  x4	Z8  M6 x2	Z9  x2	Z10  x4
--	--	--	--	---


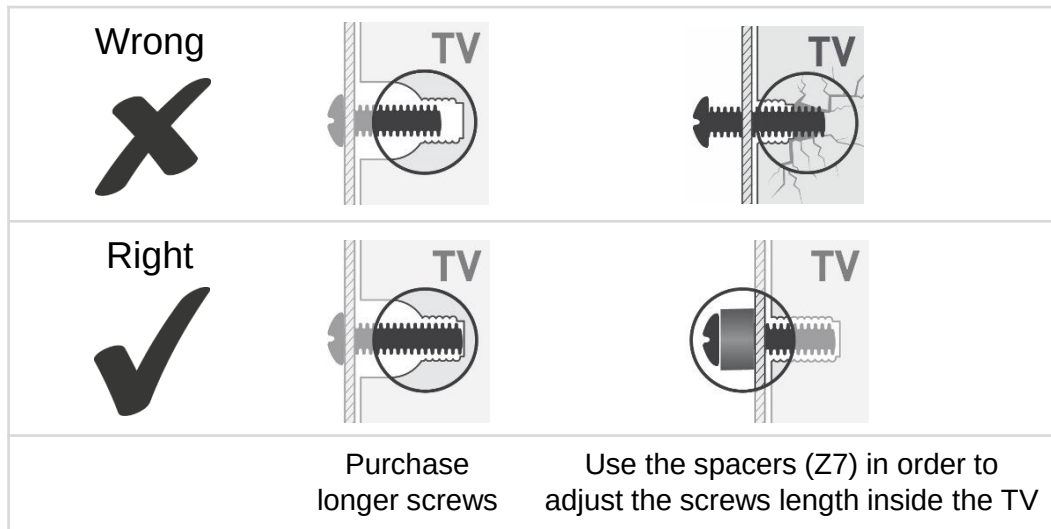 


1

  Continue according to your TV mounting hole pattern

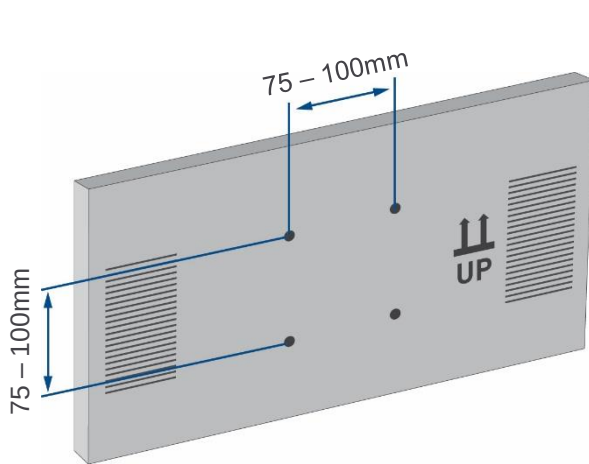



1a

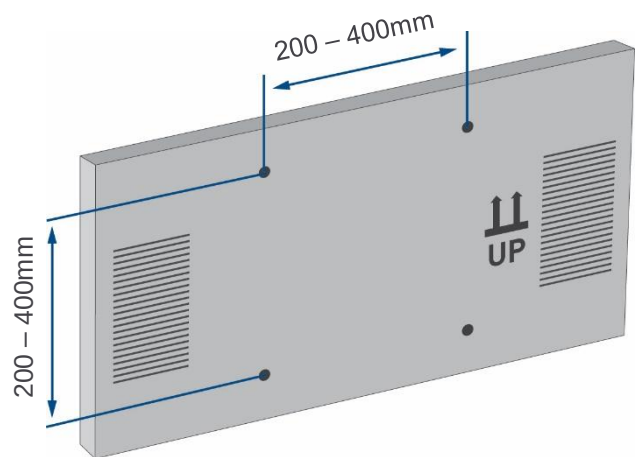  

1b

Page 5

  1a 75x75 mm up to 100X100 mm hole pattern

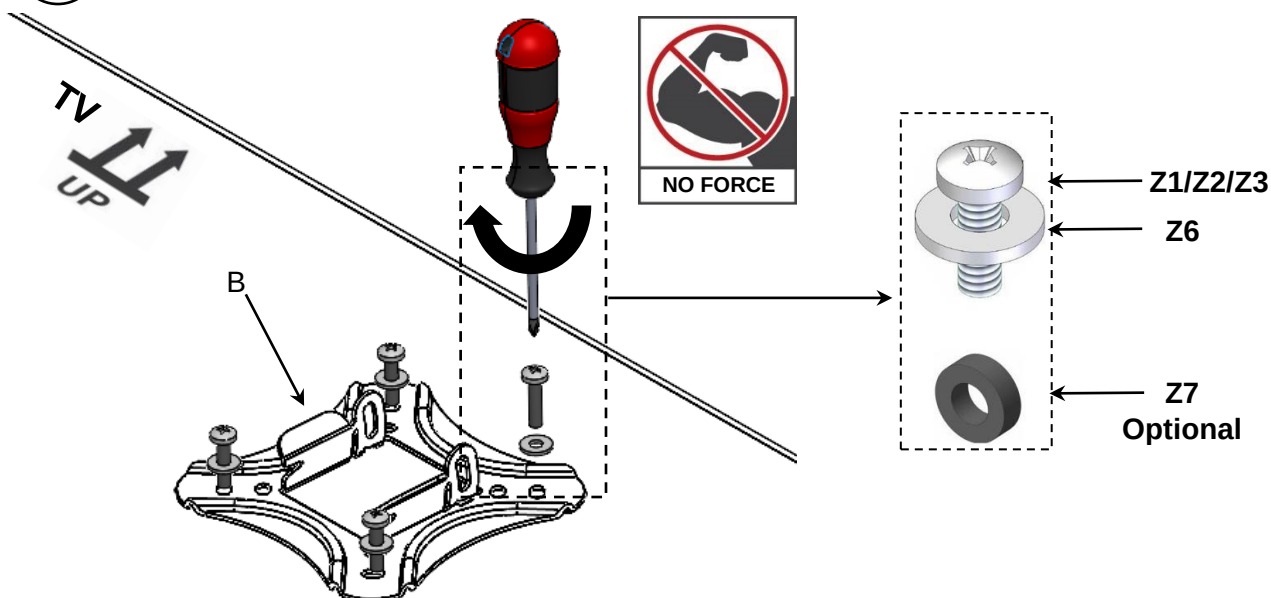


2

Page 7


- 1b 100x200 mm up to 400x400 mm hole pattern:**
Disassemble the screws, connect the 4 adaptors to the TV plate and reassemble the screws.

 (1)


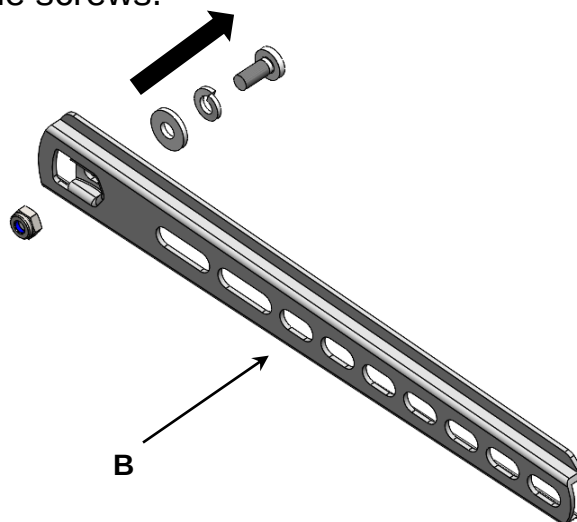


(2)

 Flat TV

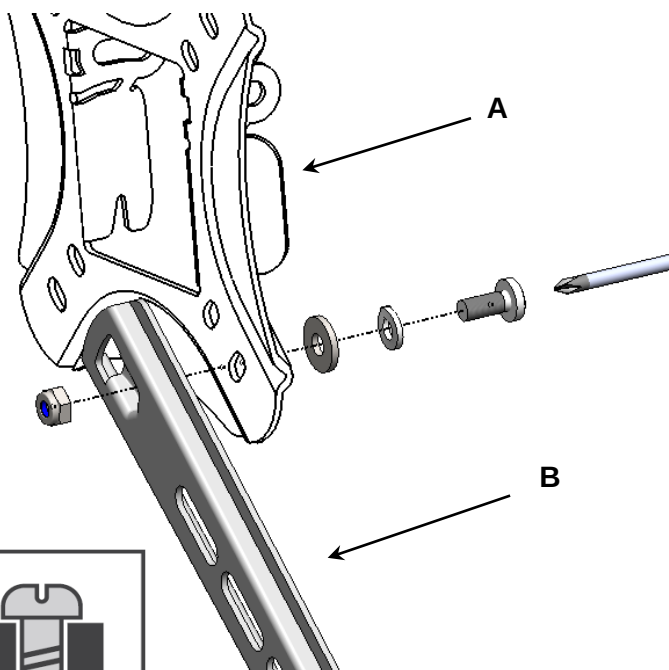


Z10

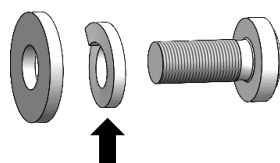  


(2)

 
Curved TV

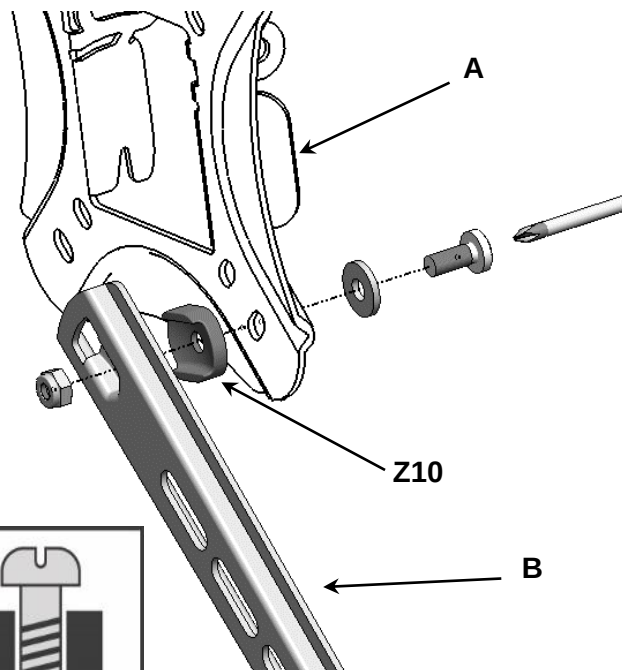

Z10

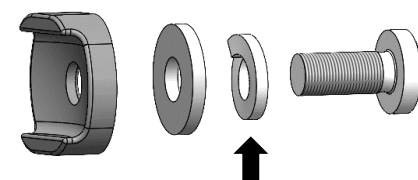 


 Position the adaptors according to your TV's hole pattern

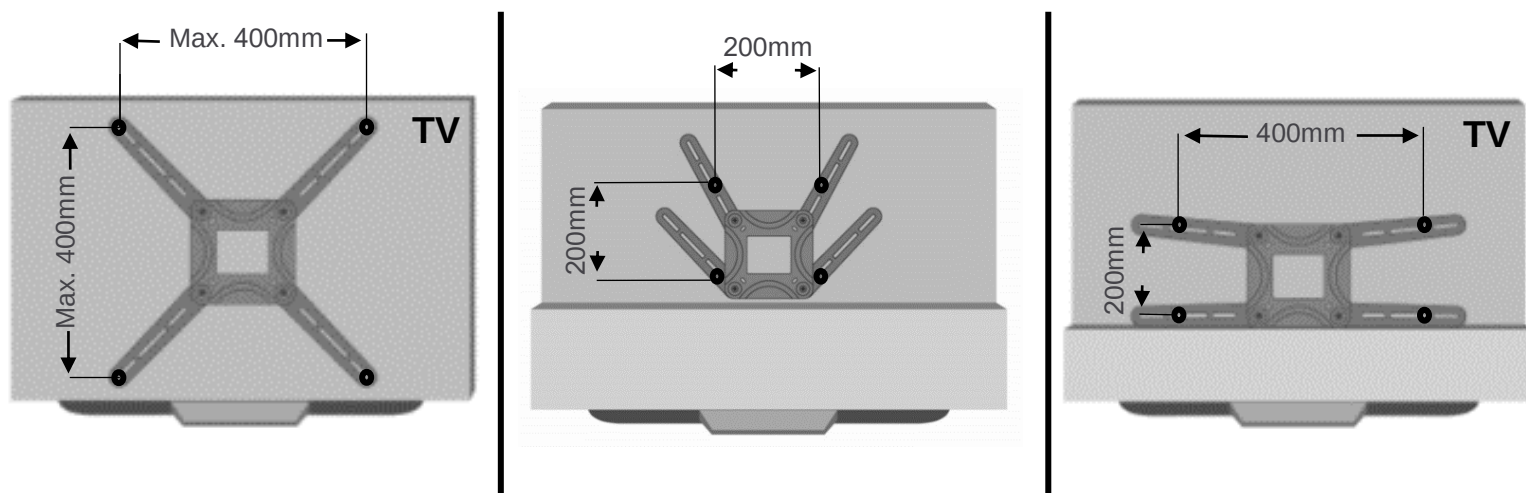


For more positioning options turn to page 9

 
Connect the TV plate with the adaptors to the TV in all 4 connection holes

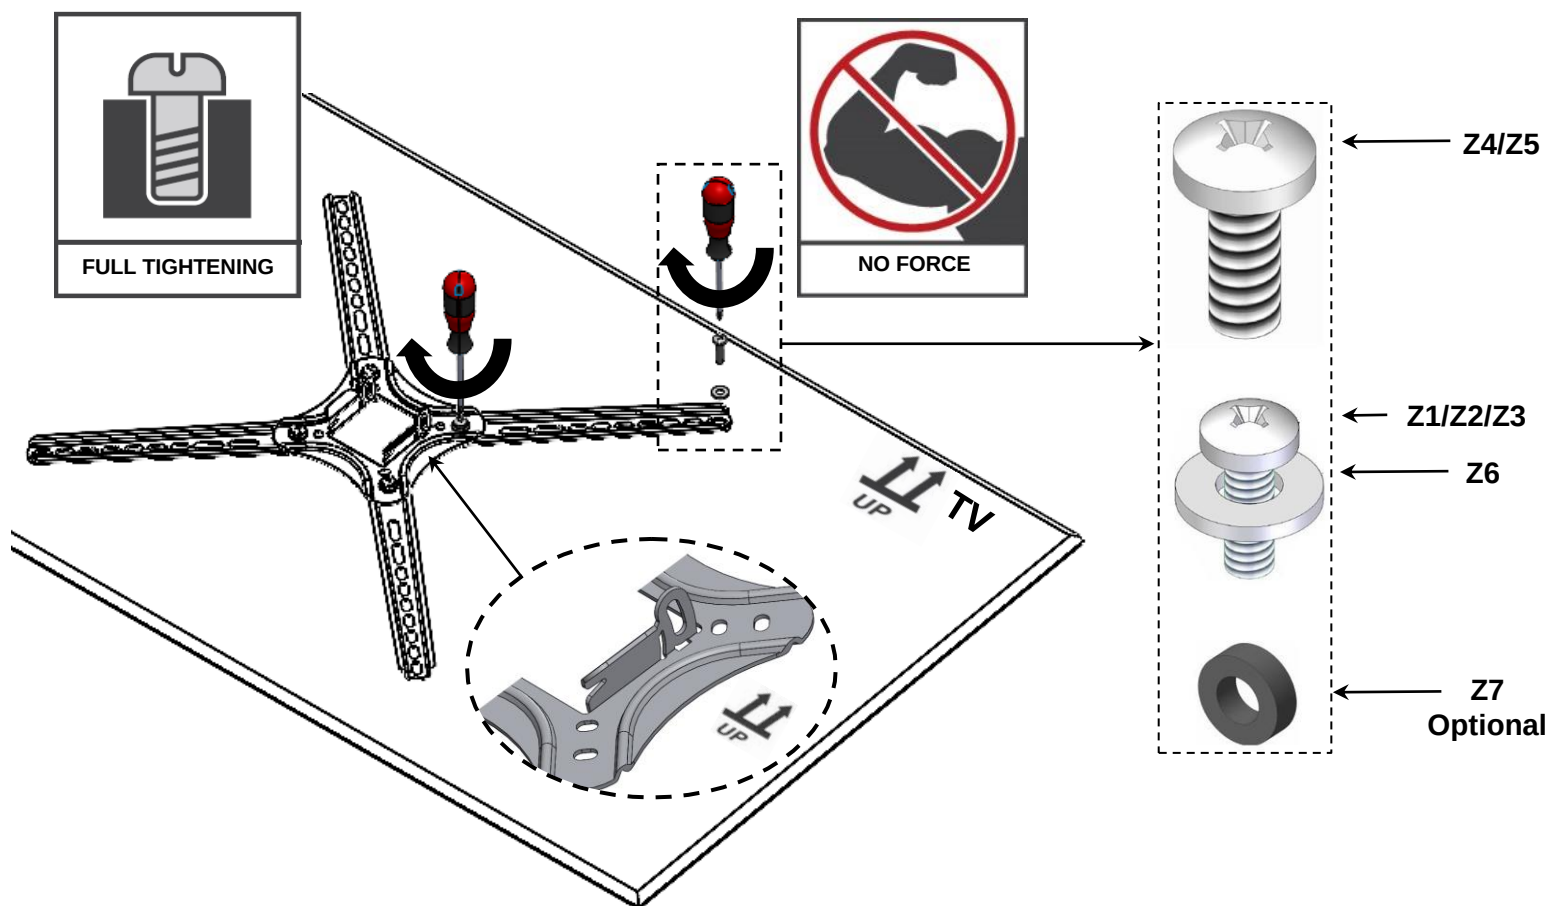

 2 Open the tripod's base and lock it with the base lock pin (D)

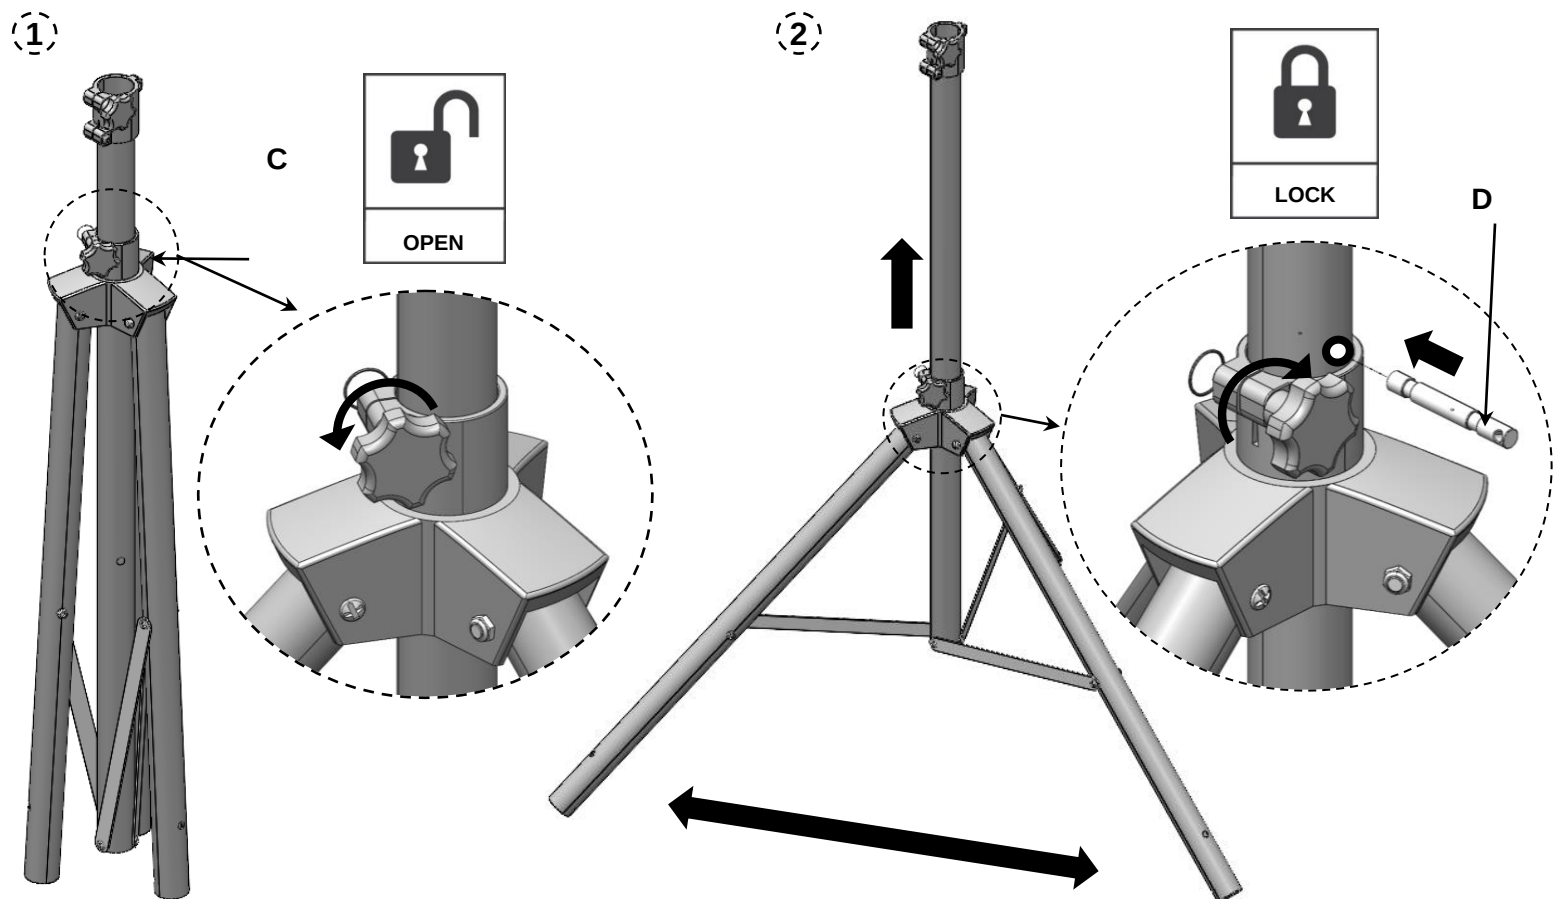


 3 Slide the upper pipe into the tripod. Lock it with the height lock pin (F)

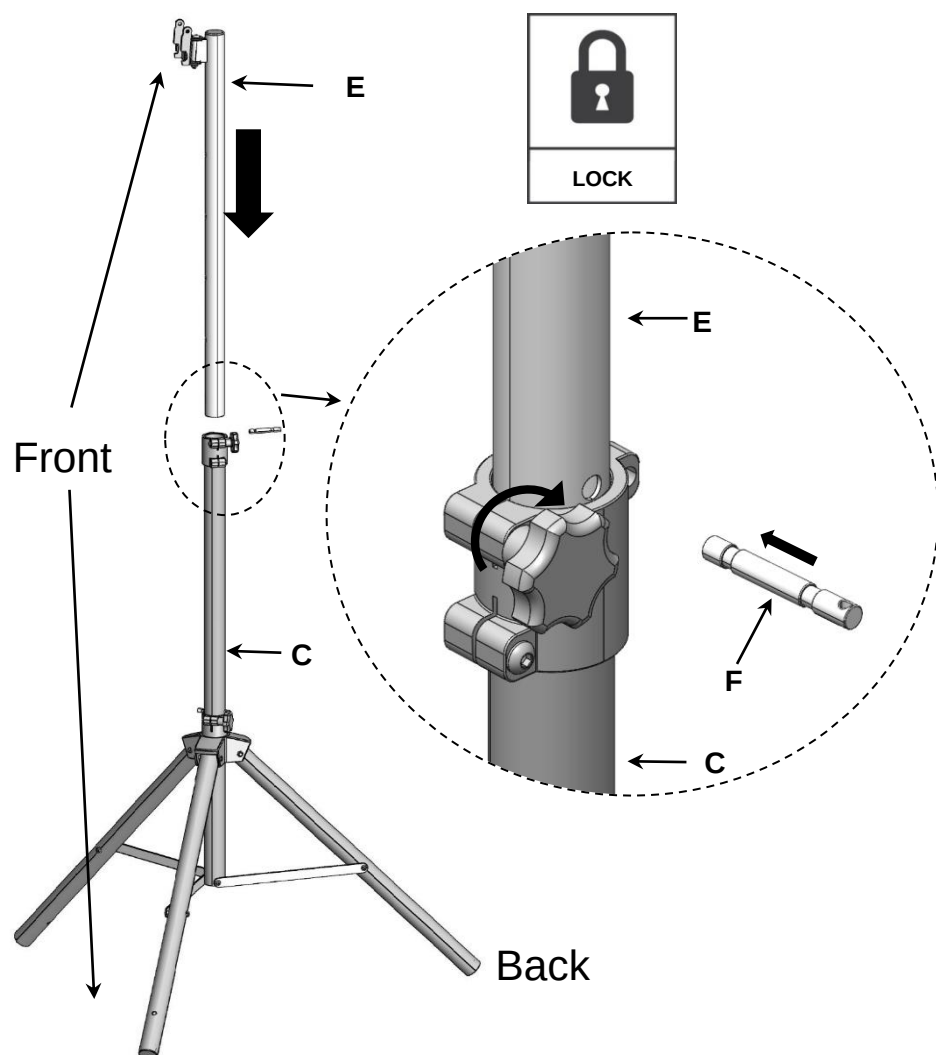


4 Weight test


 
Apply force on the upper part of the product and make sure it is assembled properly.

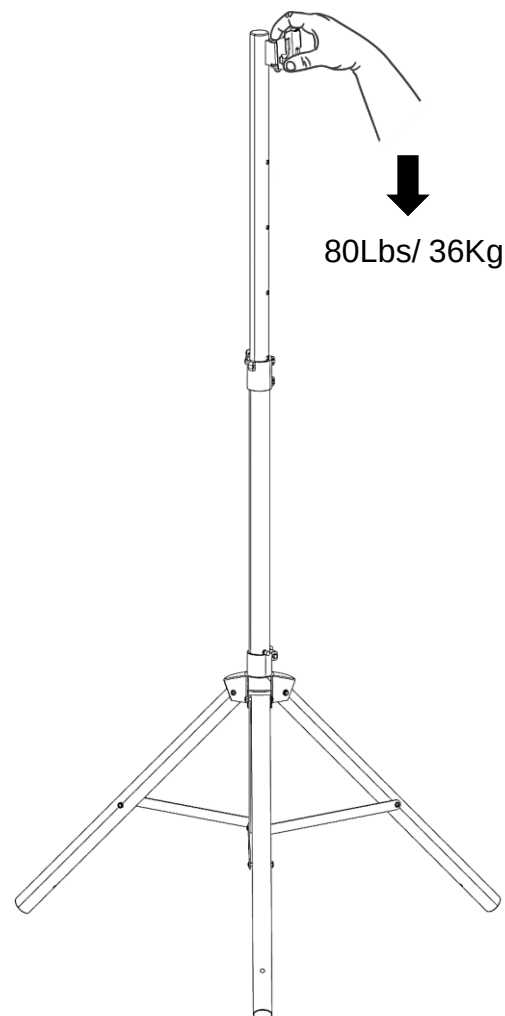

 - 5 Attach the plastic nut-housings (Z9), and then insert the nut (Z8).

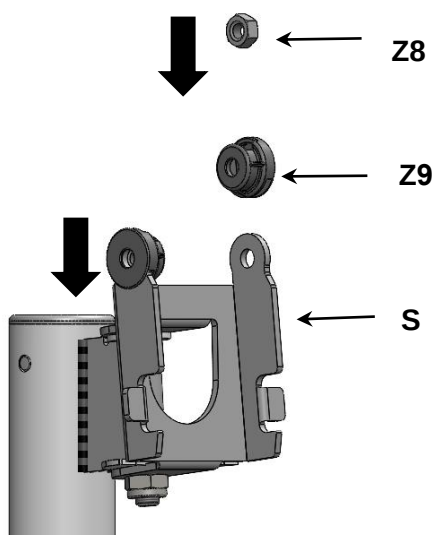


  - 6 Connect the TV with the TV plate to the tripod

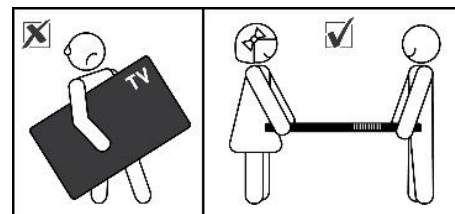
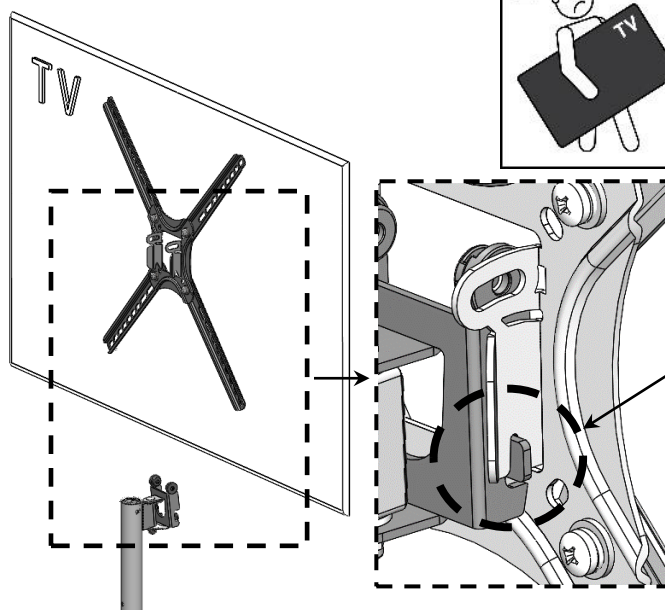


Make sure that the TV Plate slots are positioned properly

 - 7 Insert and tighten the screws from both sides to create friction for the tilt mechanism. Adjust the TV tilt angle carefully.

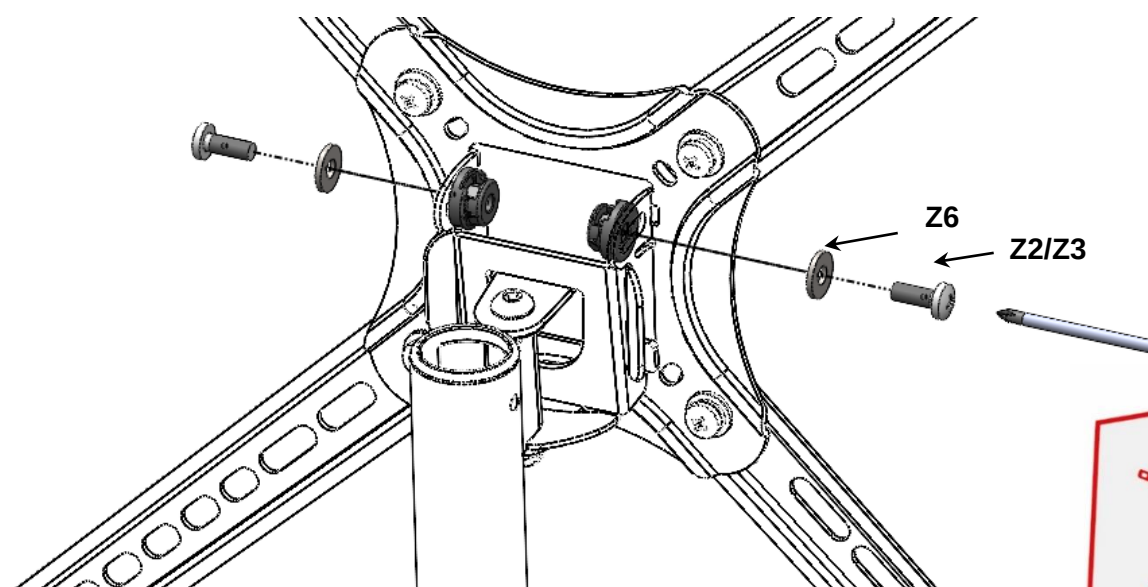


- 8 Level the TV

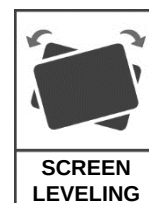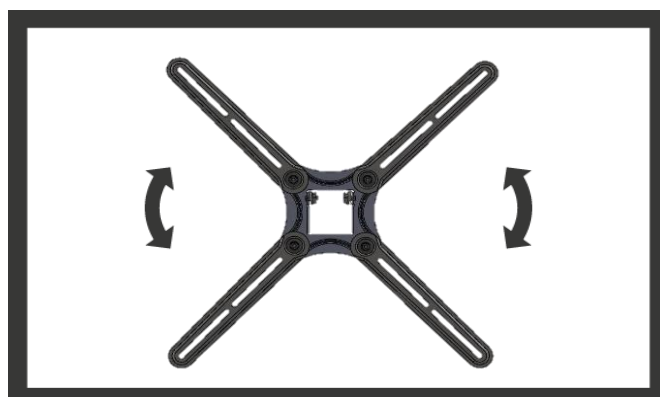  


BACKSCREEN CONNECTION POSITIONING OPTIONS

 
1 75x75, 100x100

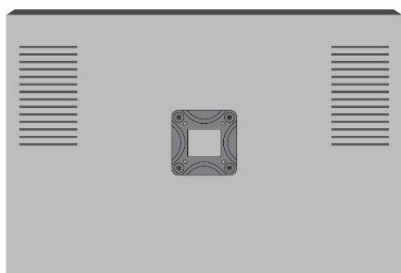


2 200x100

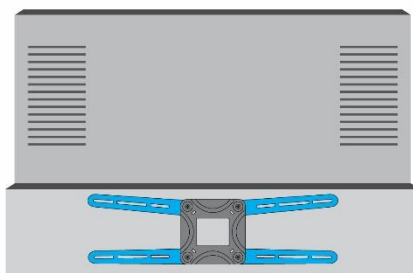 


3 300x200,
400x200, 400x300

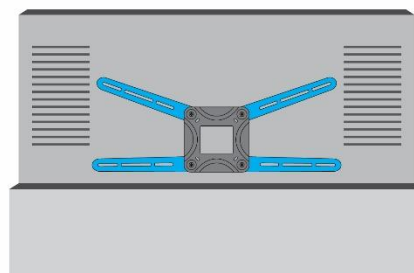 


4 200x200, 300x300

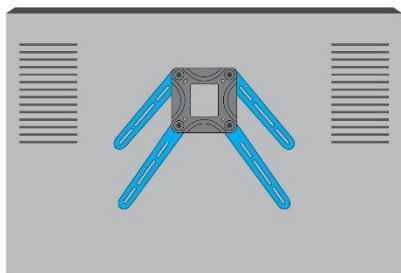 


5 200x200, 300x300

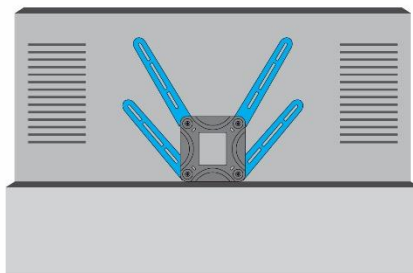 


6 100x200

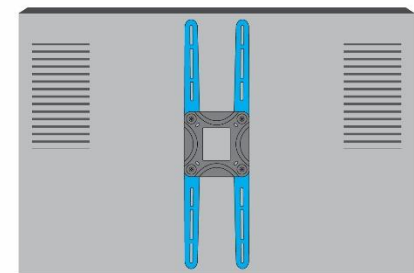 

7 200x200, 300x300,
300x400, 400x400

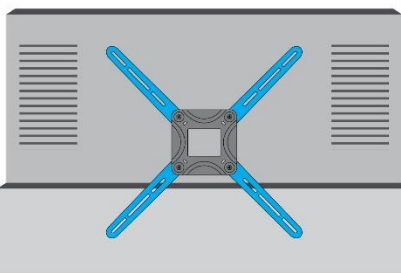 

8 300x200,
400x200, 400x300

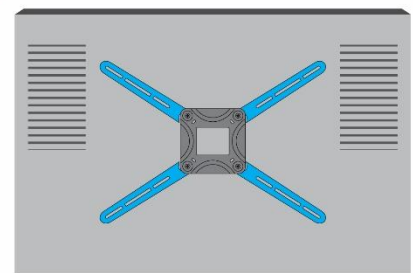 

www.barkanmounts.com/FAQ