
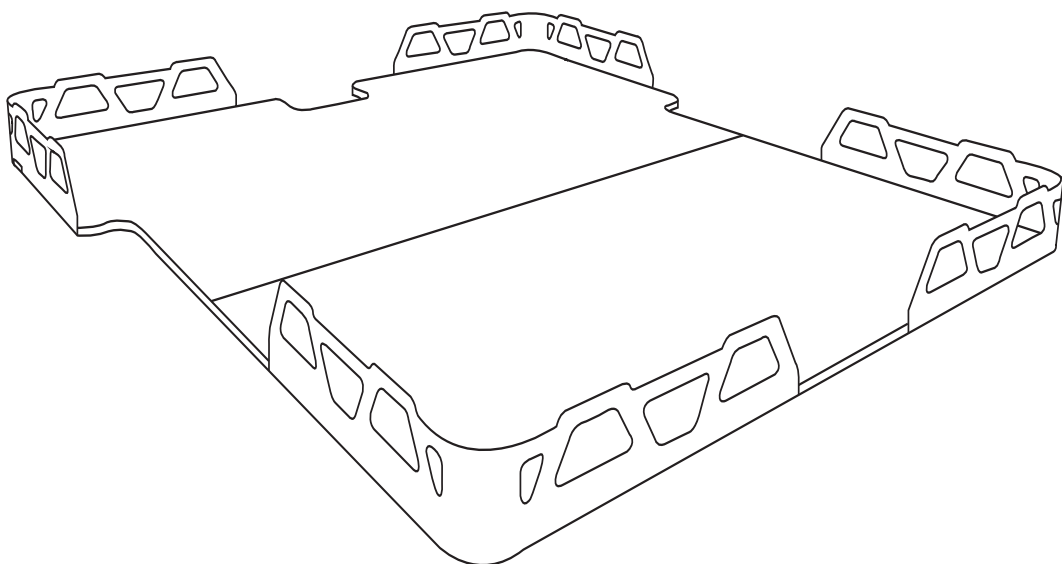


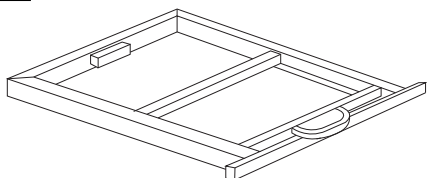


LOAD SLIDE

 
INSTALLATION INSTRUCTIONS

**A**

 
1X

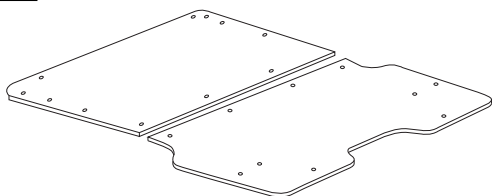B

1X

C

 
4X

D

4X

E

 
4X

F

 
2X

G

 
2X

H

2X

I

4X

J

 
4X

K

 
16X

L

16X

M


16X

N


20X



1

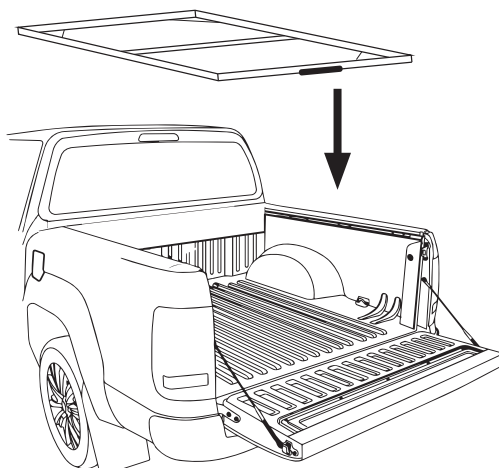


Ensure there is a clearance gap of between 5-10mm from the handle to the tailgate.

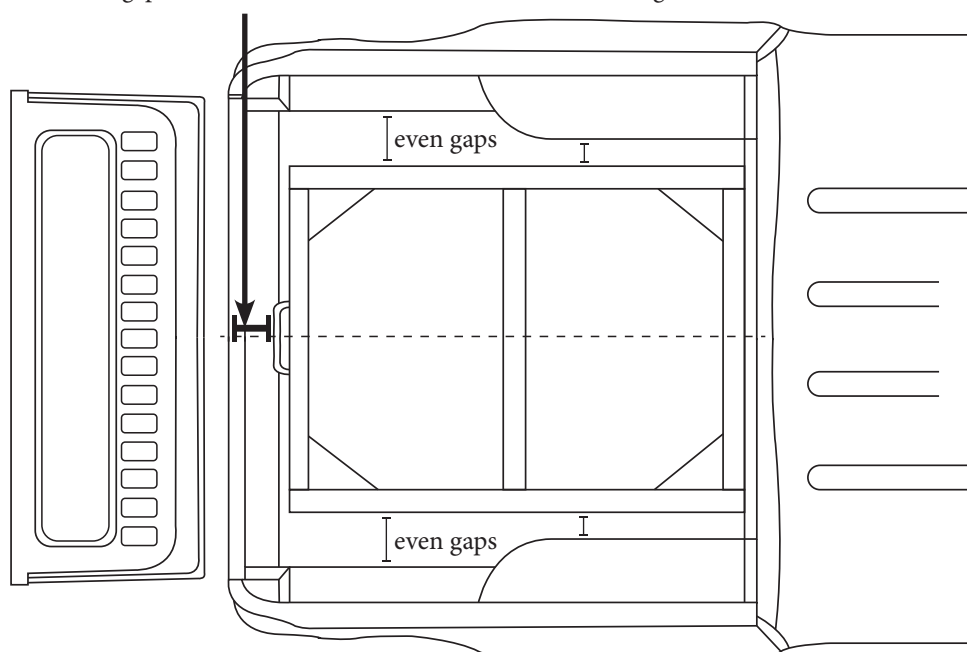

2


Centre the frame in the middle of the tub allowing even gaps between wheel arches.

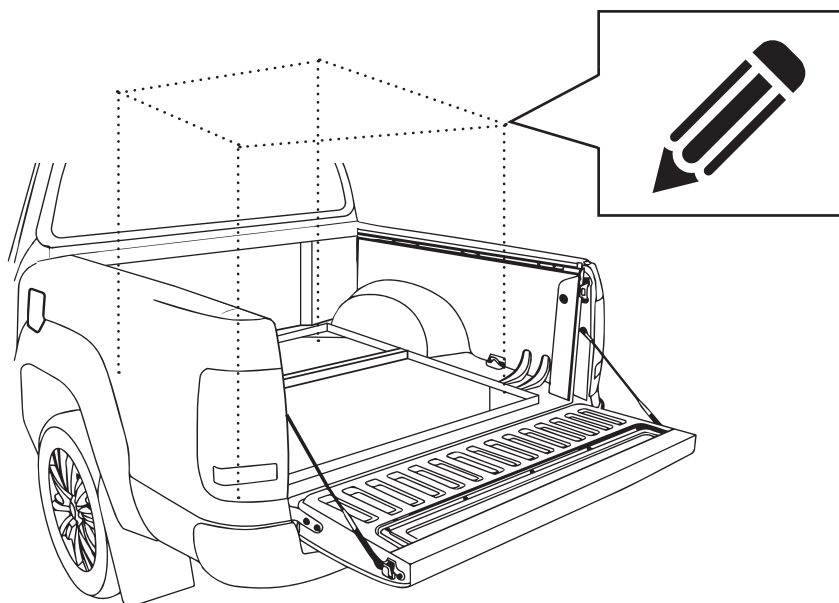


3

Mark and pick relevant drill holes.

4

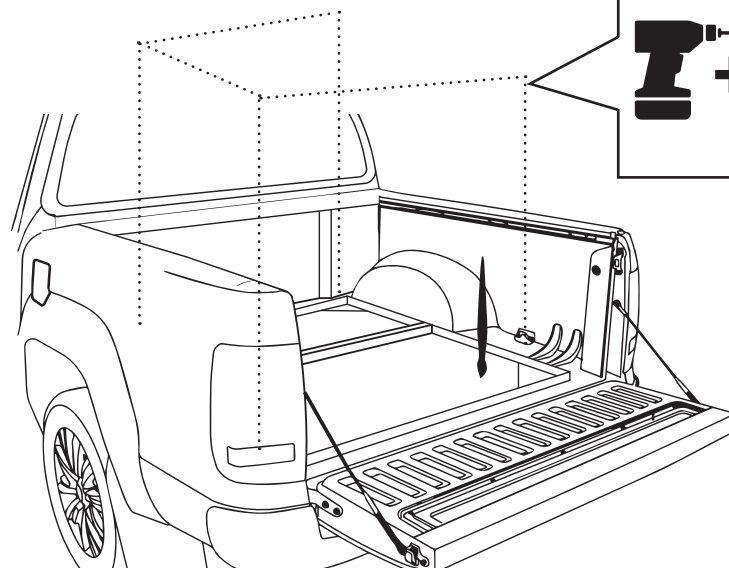


CAUTION: Before drilling, check to ensure no important or hazardous items are positioned beneath the drill points such as spare tyre, fuel lines/tank or wiring.

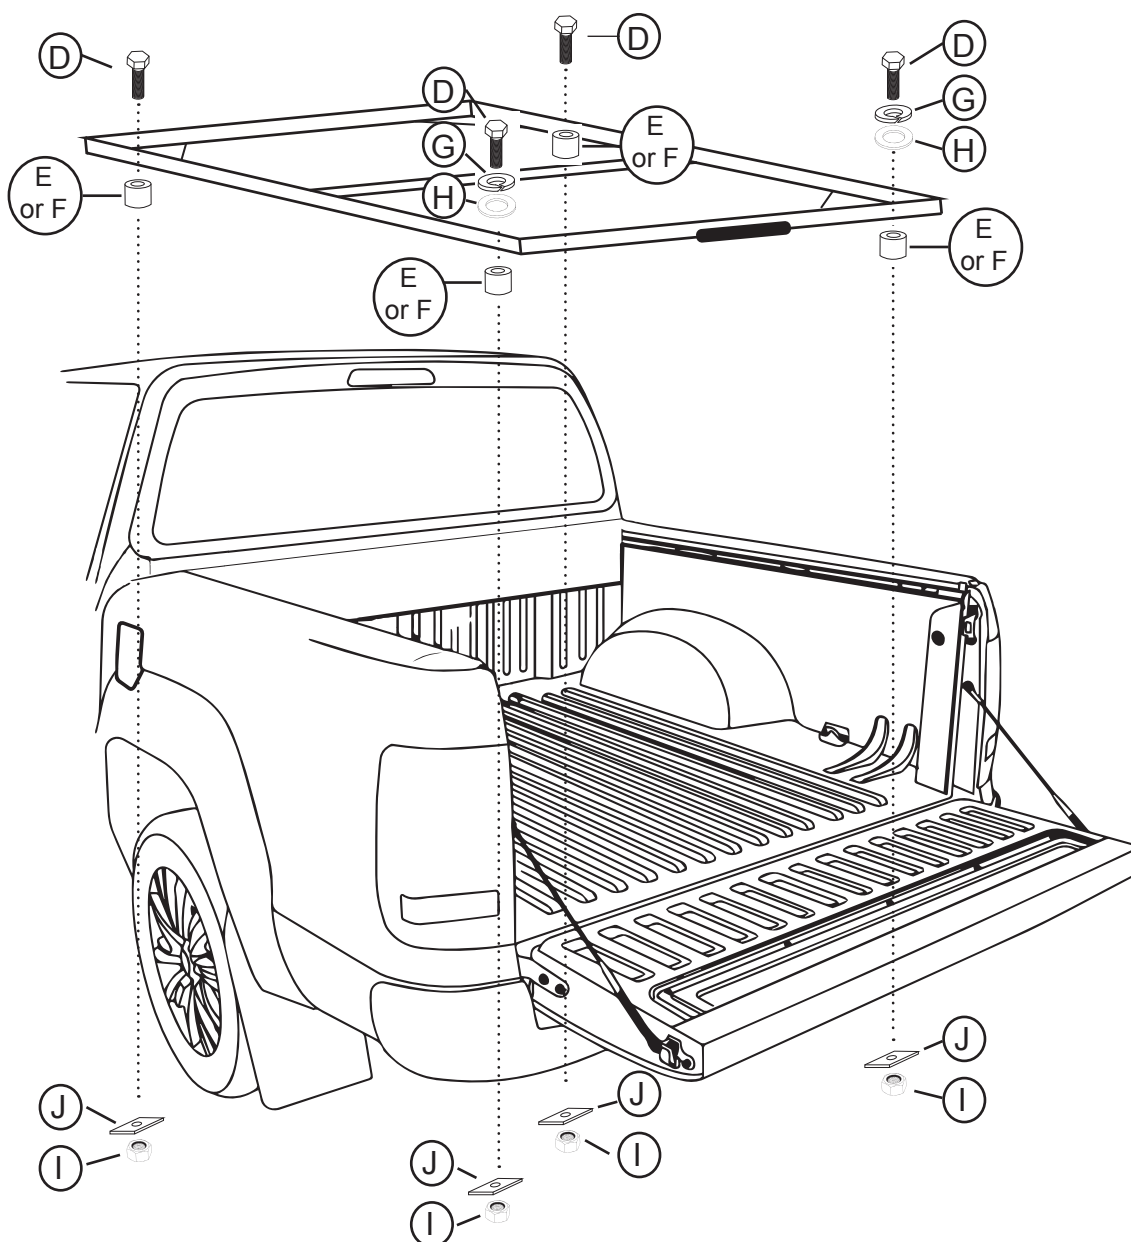

5


Ensure the spacers are placed underneath the frame. Pick relevant spacer according to fitting.

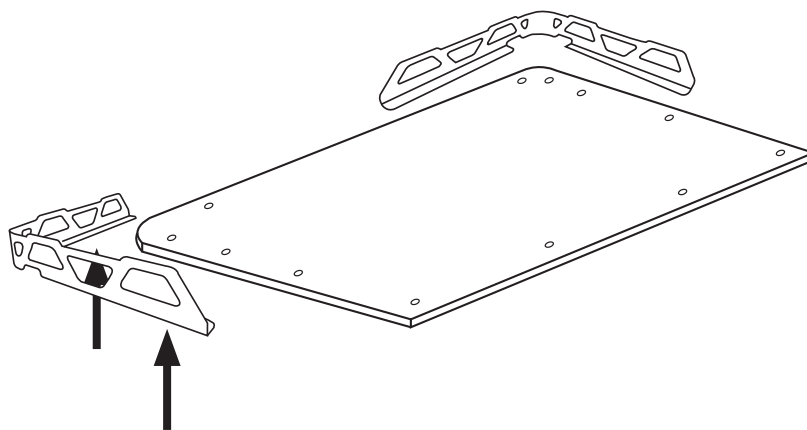


6

Ensure side-rails are placed underneath the platform.

*REPEAT THIS PROCESS FOR THE FRONT PLATFORM.

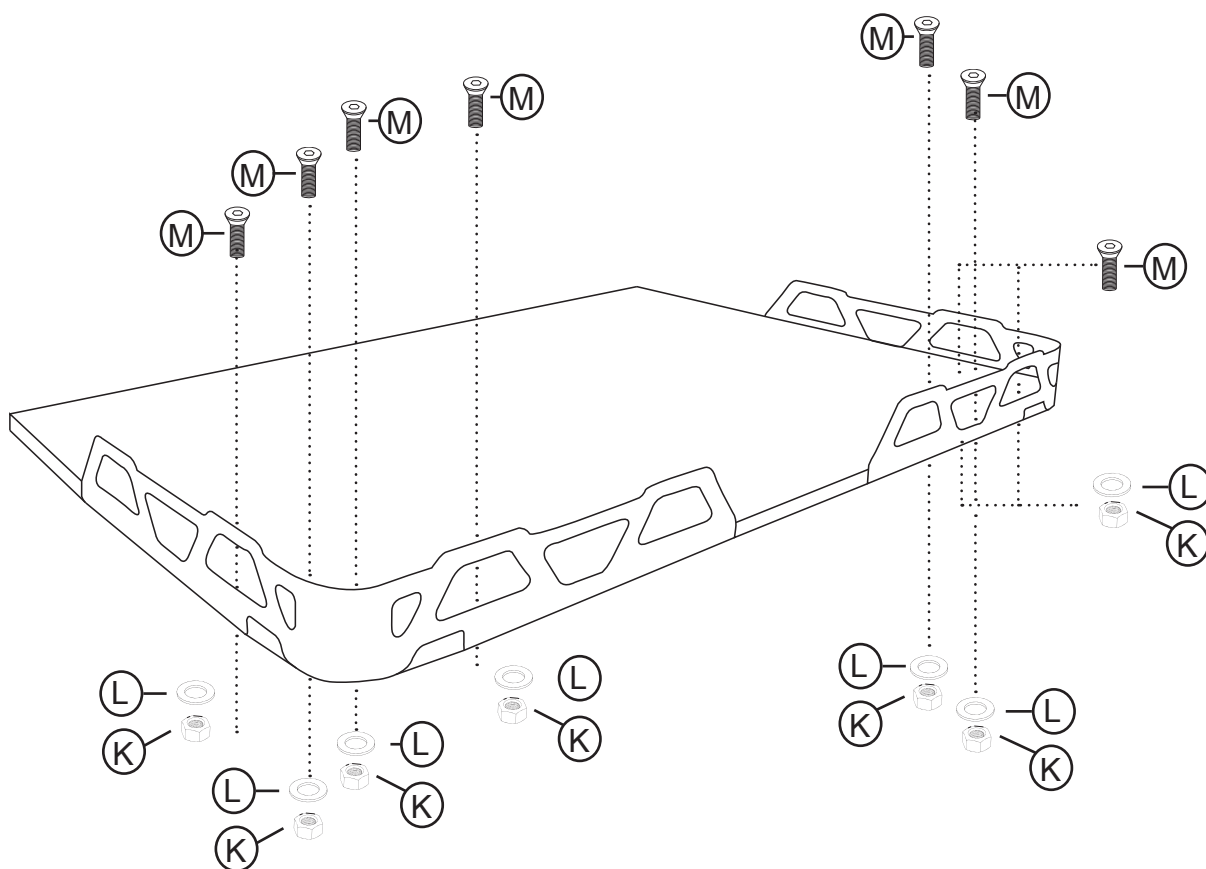


7

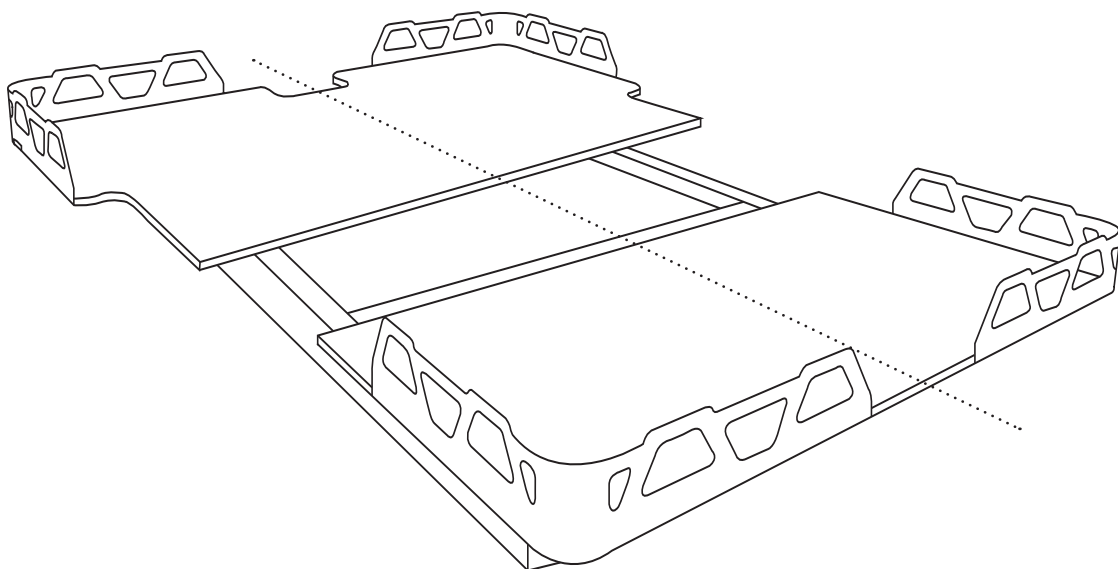


8

Centre the both platforms on the frame and ensure all gaps are even.

* Add pilot holes to frame before fastening screws.

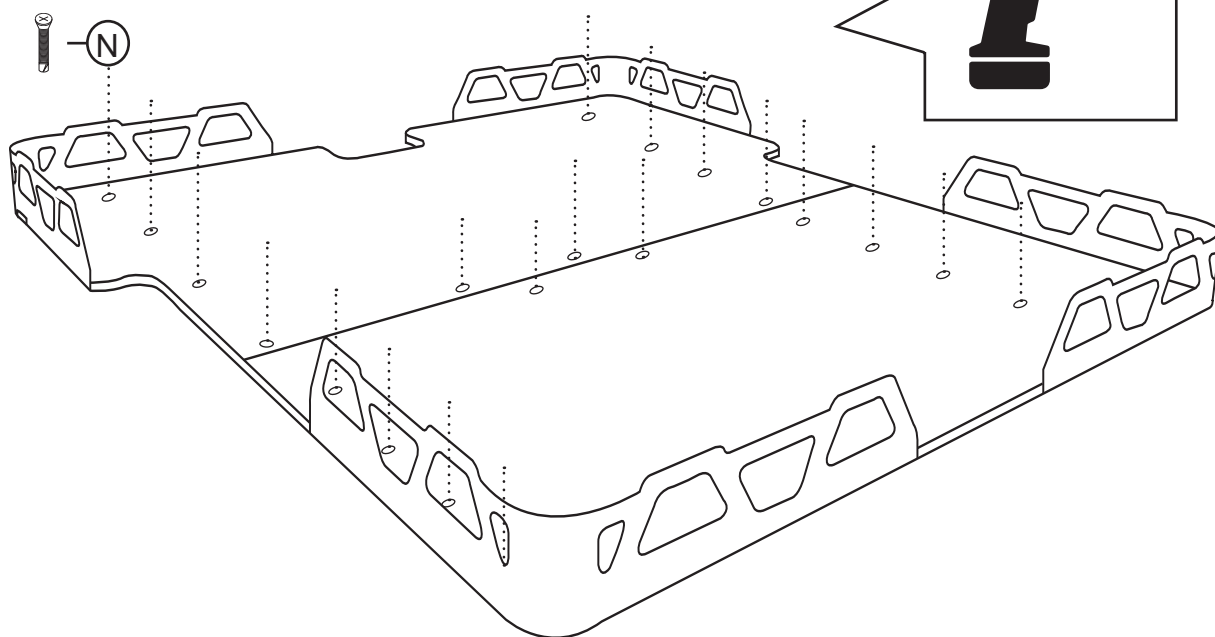

9

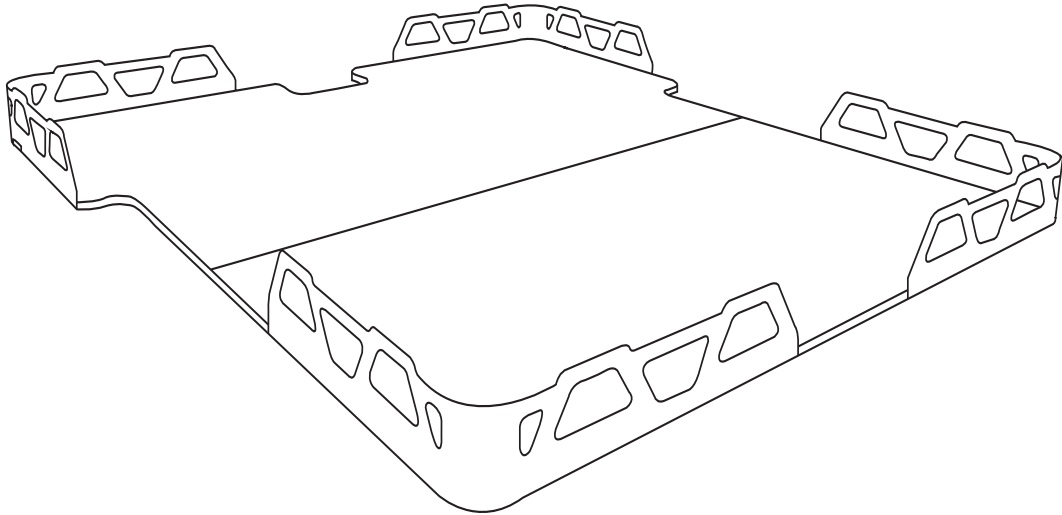

WARNINGS!



**NO STANDING
ON PLATFORM**



LOAD IS SECURE

MAX LOAD



**EVENLY
DISPERSED
LOAD**



**DO "NOT"
OVERTIGHTEN TIE
DOWN STRAPS**



**MECHANICAL
HAZARD**

MAINTENANCE

- Keep the vehicle tub clear of dirt and debris ensuring the smooth operation of the Load Slide.
- Regularly clean the roller track with a clean cloth for smooth operation.

HSP UTE LIDS PTY LTD

40 Overseas Drive, Noble Park North,
Victoria, 3174

(03) 9795 8206

info@hsputelids.com



UNLOCK YOUR VEHICLES POTENTIAL