



COOLIBAH CONTEMPORARY - FIXED WALL OVERHEAD SHOWER

WATER EFFICIENT TAPWARE


PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

- * Not suitable for gravity feed systems.
- * The showerhead is fitted with a flow regulator. This lower flow rate may not be suitable for connection to some gravity fed Water Heaters, low pressure supply networks, Instantaneous Water Heaters, Tempering Valves, Solar Water Heaters & Thermostatic Mixing Valves. Check with the manufacturers of these products.
- * Threaded nipple (1) must be square to Wall/Tile face to ensure correct installation.
- * All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.

Installation

- 1) Check that threaded nipple (1) is the correct length, as shown. Cut to length if required ensuring end face is square. Apply thread tape to the thread. **Important** : Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow.
- 2) Screw wall base (2) of shower arm (3) onto threaded nipple (1) & position so that the arm (3) is vertically up. **DO NOT OVERTIGHTEN.**
- 3) Ensure flow regulator (5) and rubber washer (4) are in position in shower head (6). Carefully screw shower head (6) onto thread of shower arm (3) using a 22mm A/F spanner & tighten, taking care not to damage the decorative finish.

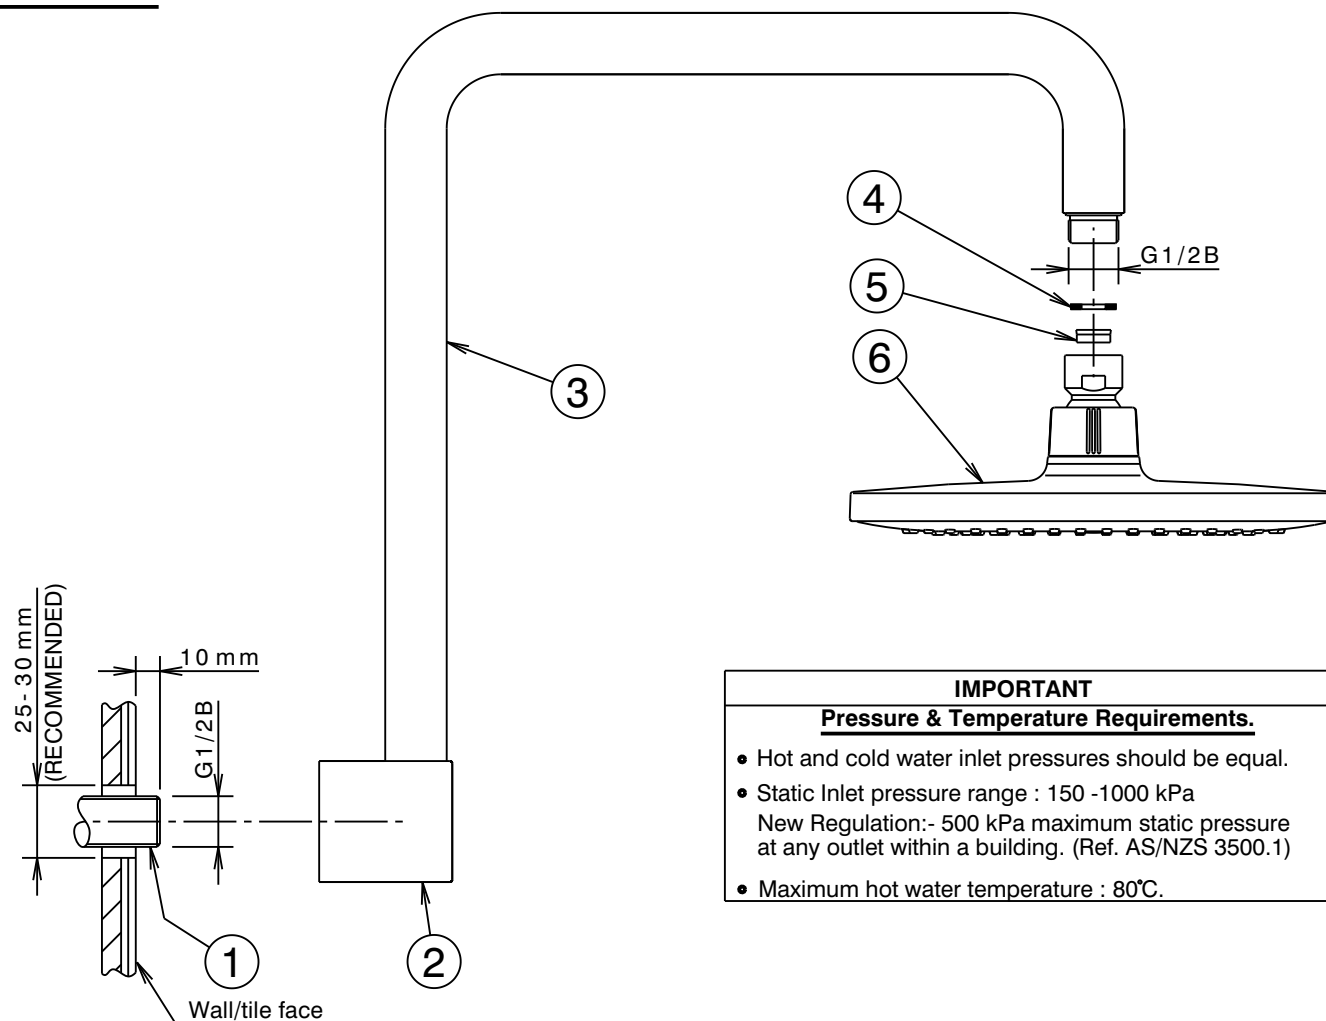

IMPORTANT

Pressure & Temperature Requirements.

- Hot and cold water inlet pressures should be equal.
- Static Inlet pressure range : 150 -1000 kPa
New Regulation:- 500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1)
- Maximum hot water temperature : 80°C.