

GOLDAIR

select

2000W
Fan
Heater

Operating Instructions



2

2 Heat Settings

Select your level of warmth

1x

1 Fan Only Setting

Creates airflow in summer



Overheat Protection

Turns off if it gets too hot



Adjustable Thermostat

Regulate your level of warmth



Safety Tilt Switch

Turns off if knocked over



Model: GSFH150

This page is intentionally left blank

General Care and Safety Guide

Thank you for choosing a Goldair Select Fan Heater. This Goldair appliance has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully.

1. Use only the voltage specified on the rating label of the appliance.
2. Keep all objects at least 1 metre from the front, sides and rear of the appliance.
3. This appliance is intended for household use only and not for commercial or industrial use.
4. Indoor use only.
5. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
6. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
7. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
8. Always unplug appliance when not in use.
9. When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Goldair Customer Services Team.
10. If your appliance does not work, or is not working properly, contact the place of purchase or the Goldair Customer Services Team.
11. Do not connect the appliance to mains supply until completely assembled and adjusted.
12. Ensure hands are dry before handling the plug or main unit.
13. Do not locate the appliance directly below any power socket outlet.
14. Ensure appliance is on a flat, stable, heat-resistant surface.
15. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
16. Carry out regular checks of the supply cord to ensure no damage is evident.
17. Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
18. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
19. It is recommended that this appliance is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.
20. A correctly specified, undamaged extension cord may be used with this appliance provided it is used in a safe manner.
21. Do not remove plug from power socket until the appliance has been switched off.
22. Do not remove plug from power socket by pulling cord; always grip plug.
23. Do not place cord under carpet or cover with rugs or furniture. Arrange the cord so it cannot be tripped over.
24. Do not place appliance on bedding or on thick & long carpet where the openings may get blocked.
25. Switch off and use handle provided when moving
26. Do not place appliance close to radiant heat source.
27. Never use the appliance to dry clothes.
28. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
29. Do not sit on the appliance.
30. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
31. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
32. Children should be supervised to ensure that they do not play with the appliance.
33. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
34. There are no user serviceable parts installed in the unit.
35. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
36. This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc are stored.
37. **WARNING** you must not cover this appliance. Covering this appliance presents fire risk and will activate the safety fuse; permanently disabling the unit.

YOUR SAFETY IS IMPORTANT TO US. PLEASE ENSURE YOU TAKE NOTE OF THE INSTRUCTIONS AND WARNINGS OUTLINED IN THIS MANUAL.

Operating your Appliance

Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. This appliance requires no installation, it should be used solely as a portable appliance.

WARNING: Keep all objects at least 1 metre from the front, sides and rear of the appliance.

WARNING: In order to avoid overheating or risk of fire, do not cover the heater.

WARNING: Never leave this appliance unattended when in use.

WARNING: Do not use this appliance with a programmer, remote-control system, separate timer or any other device that switches the appliance on automatically.

Note: When the appliance is turned on for the first time, it may release a slight, odour or smoke. This odour or smoke is a normal occurrence caused by the initial heating of the internal heating elements and should not occur again.

HEAT CONTROL SWITCH

The control switch positions are:

"0" = OFF



= Fan Only

"I" = Low Heat

"II" = High Heat

Check that the heat control switch is set to Off position before plugging the appliance into the mains supply. For greater economy, use the High Heat setting initially and then switch to the Low Heat setting.

For the Low and High Heat settings the fan remains at the same speed; only the element changes to create the greater/lesser heat output.

THERMOSTAT

Turn the thermostat knob clockwise until you reach the maximum position on the graduated scale. When the room reaches a comfortable temperature, slowly turn the knob anti-clockwise until the appliance turns off (you will hear a click). The appliance will now cycle on and off to maintain the set comfort level. Take note of this position setting for future use.

SAFETY DEVICES

This appliance has three protection devices:

1. Tilt switch - this will automatically turn the appliance off if the appliance is not in the appropriate operating position.
2. Resettable thermal link - this will automatically disconnect & reconnect the power to the appliance at a pre-set temperature.
3. Thermal fuse - this disconnects the appliance permanently in case of overheating. (It is non resettable).

CAUTION: The appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons.

Care and Cleaning

CARE AND CLEANING

The heater requires regular cleaning to ensure trouble free operation:

Unplug the heater from the mains supply before cleaning.

Ensure that the heater has been allowed to cool down completely before cleaning.

Use a damp cloth (not wet) to wipe the exterior of the heater to remove dust and dirt.

Use a vacuum cleaner to remove dust and fluff from around the grills and fins.

Never use solutions such as benzene, thinners or polishing agents.

Ensure the heater is dry before plugging back into the mains supply.

Do not attempt to dismantle the appliance. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase.

TECHNICAL SPECIFICATION

Model No: GSFH150
Supply: 220-240VAC 50Hz
Wattage: 1800-2000W

GOLDAIR

SUPPORT AND TECHNICAL ADVICE

Goldair – New Zealand
Monday – Friday 8am-5pm
Phone +64 (0)9 917 4000
Phone 0800 232 633
info@cdb.co.nz

Goldair – Australia
Monday – Friday 8am-5pm
Phone +61 (0)3 9365 5100
Phone 1300 465 324
info@cdbgoldair.com.au

Two Year Warranty

Thank you for purchasing this Goldair Select product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **two years**. In non-domestic use Goldair limits the voluntary warranty to **three months**.

Goldair undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits given to you by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

Goldair – New Zealand

CDB Goldair
PO Box 100-707
N.S.M.C
Auckland

Phone +64 (0)9 917 4000
Phone 0800 232 633
www.goldair.co.nz

Goldair – Australia

CDB Goldair Australia Pty
PO Box 574
South Morang
Victoria, 3752

Phone +61 (0)3 9365 5100
Phone 1300 GOLDAIR (1300 465 324)
www.goldair.com.au

Goldair Select Two Year Warranty (IMPORTANT: Please complete and retain this warranty card)

Name

.....
.....

Address

.....
.....
.....
.....

Place Of Purchase

.....

Date Of Purchase

.....

Name Of Product

.....

Model Number

.....

Attach a copy of the purchase receipt to this warranty card

This page is intentionally left blank

GOLDAIR

select

CDB  GOLDAIR

New Zealand
PO Box 100-707,
North Shore Mail Centre,
Auckland, 0745
www.goldair.co.nz

Australia
PO Box 574,
South Morang,
Victoria, 3752
www.goldair.com.au