



# KitchenAid®

## ARTISAN® 4 SLICE TOASTER KMT423

Experience the perfect start to every morning with the KitchenAid Toaster. A one-touch control raises and lowers bread on demand, Crumpet and Defrost buttons toast everything just the way you want and a Keep Warm button keeps toast warm until you're ready without additional browning.

[kitchenaid.com.au](http://kitchenaid.com.au) or [kitchenaid.co.nz](http://kitchenaid.co.nz)



# KitchenAid®

©/™ ©2014 KitchenAid. All rights reserved.

# KitchenAid®

## ARTISAN® 4 SLICE TOASTER KMT423

**ONE TOUCH CONTROL** Raises and lowers bread, even in the middle of a cycle.

**7 SHADE SETTINGS** Turn the Shade Control to the right for darker toasting or to the left for lighter.

**EXTRA WIDE 3.8CM SLOTS** Handles the thickest crumpets, breads or pastries.

**SELF CENTRING BREAD RACKS** Centres thick or thin breads for even toasting.

**LCD DISPLAY** Remembers the last shade and function setting, so everything toasts the same way every time.

**ALL METAL CONSTRUCTION** Durable with a sleek design.

### MULTI-FUNCTION BUTTONS:

**KEEP WARM** Keeps toasted foods warm for up to one minute.

**CRUMPET** Reduces power on one side by 50% to gently brown the outside and precisely toast the inside.

**DEFROST** Breads can be toasted to perfection in minutes.

**REHEAT** Quickly reheats previously toasted food.

**TOAST/CANCEL** An easy way to start or cancel toasting at any point.

## Specifications and Dimensions

### Product

Height	21cm
Width	33cm
Depth	29.2cm
Cord length	106.7cm
Net Weight	3.6kg

### Product Carton

Height	26.8cm
Width	34.6cm
Depth	38.5cm
Shipping Weight	4.2kg

Specifications subject to change without notice.



EMPIRE RED  
97410

ONYX BLACK  
97420

### OPTIONAL ACCESSORIES



SANDWICH RACK  
97500



BUN WARMER  
97502