



In-Car Dash Camera with 2.4" Screen



720p
Resolution



2.4" LCD
Screen



90° Angle
Lens



Loop
Recording

NX-10 | USER MAUAL

Caution

- Ensure you are using your Car Dash Cam within your countries' road laws. Please make sure you are familiar with your local road legislation before use.
- Avoid leaving your Dash Cam in direct sunlight for extended periods of time in an unventilated space.
- Please set time and date before you use this device to record.
- The notifications given by the Car Dash Cam are suggestions only, please drive to the actual conditions.
- The system is to be used only for non-commercial use, within the limits permitted by the relevant laws.
- Avoid using the Car Dash Cam near any devices that emit radio interference (e.g. Microwave Ovens).
- It is considered normal operation for the Car Dash Cam to get warm during use.

Battery Warning

- Always charge the Car Dash Cam using the provided charger. Improper charging of the Car Dash Cam may result in failure of the internal battery.
- Never dismantle the Car Dash Cam or expose the internal battery.
- Do not dispose of the Car Dash Cam in fire.
- Dispose of the Car Dash Cam observing local regulations being mindful of the internal battery.
- Do not attempt to replace or expose the internal battery.

Notes and Installation


- It is advised that the Car Dash Cam is installed near the rear view mirror, at the top centre of the windshield for optimal operation.
- Make sure that the lens is within the range of the windscreen wiper to ensure a clear view when it rains.
- Do not touch the lens with your fingers. Finger prints left on the lens will result in unclear videos or photos. If photos or videos are blurred, please clean the lens gently with a microfibre cloth.
- Only use the included charging cable to power the Car Dash Cam.

Thank you for purchasing a NX Dash Cam. Please read through instructions before attempting to install or use this product.

Note:

1. Please abide by the relevant laws in your local area; please do not use this product for illegal purposes.
2. Please insert your Micro SD memory card before recording video, taking care to insert it the right way to avoid damage.
3. To avoid losing important footage, it is suggested that you back-up footage on a weekly basis to your computer.
4. Please ensure the windscreen mounting bracket is installed securely to avoid damaging the dash cam.
5. Battery charge will diminish over time. If the dash cam is not used for a long period of time, please ensure the dash cam is charged fully before use.
6. The working temperature of the dash cam is 0° to 40° degrees Celsius.
7. Please do not leave the dash cam in an excessively humid environment as it is not water resistant.
8. Please avoid shooting footage directly into the sun so as to avoid damage to the dash cam.
9. Please avoid using the dash cam in an excessively dusty environment so as to not obstruct the camera lens.
10. This dash cam is a precision electronic product; please do not expose it to strong shock, vibration, magnetic fields or heavy current fields.
11. Please do not attempt to disassemble or repair this product, doing so will void the warranty.
12. Please do not operate and set this product while driving. If interaction with the product is required, please do so before driving or stop driving.
13. Please charge the battery fully before first use.
14. To clean, please use a soft and dry cloth to get rid of dust. Do not use solvents to clean the product.

A. PRODUCT DETAILS

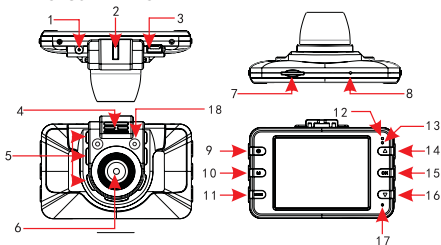

- | | |
|------------------------|----------------------|
| 1. 12V power input | 10. MENU button |
| 2. Bracket slot | 11. MODE button |
| 3. USB outlet | 12. Recharging light |
| 4. Speaker | 13. Operation light |
| 5. Heat vent | 14. UP button |
| 6. Lens | 15. OK button |
| 7. Micro SD card slot | 16. DOWN button |
| 8. RESET button | 17. Microphone |
| 9. Power ON/OFF button | 18. IR LED's |

B. FUNCTIONS:

- | | |
|--|------------------------|
| 1. Supports multiple video resolutions including 720P & 480P (AVI file format) | 6. Motion detection |
| 2. Built-in microphone & speaker | 7. Time and Date stamp |
| 3. Supports up to 32GB Micro SD Card | 8. PC Webcam Function |
| 4. Loop video | 9. Multi language |
| 5. Automatic start up and shut down | |

C. ACCESSORIES

The following accessories are bundled with your NX-10 Dash Cam:



D. OPERATION

1. Start-up:

- a) When the dash cam is in a powered down state, long press ON / OFF button. The dash cam automatically begins recording.
- b) When the dash cam is in a powered down state and is connected to the 12v car charger the dash cam will automatically start recording upon ignition of the vehicle.

Note: If there is no Micro SD card present in the dash cam during power up, the green operation LED light will pulse quickly and the LCD screen will display the message "no card".

2. Shut-down:

- a) When the dash cam is in a powered on state, long press the ON / OFF button to shut-down the dash cam.
- b) When the dash cam is in a powered on state and is connected to the 12v car charger, if the 12v charger is unplugged from the dash cam or the vehicle ignition is turned off, the dash cam will automatically shut-down after 5 seconds.

Note: If the battery runs flat, the dash cam will shut-down automatically and save the video file.

3. Charging:

- a) You can charge the battery by connecting the supplied USB cable to a power source including a computer or USB charging adapter.
- b) You can also charge the battery by connecting the supplied 12v car charger to a 12v compatible power source.

Note: During charging the red light turns on until charging completes. Only use the included power cable to power up the NX-10.

4. Installing Micro SD memory card:

- a) Insert the Micro SD memory card into the Micro SD card slot as per correct indicated orientation until you hear a "click" indicating the card is properly seated.
- b) To remove the card, push the Micro SD card in until you hear a "click" at which point in time you can remove it.

5. Video recording:

- a) The dash cam will start video recording immediately after powering up the device, a green light will pulse indicating recording.
- b) When in stand-by mode, press the MODE button to change to Video mode.
- c) If the dash cam is in stand-by mode, press the OK button. The dash cam begins recording.
- d) Press the OK button again to stop recording and save the file.

Note: In Video mode, press the ON / OFF button to turn on the IR light.

6. Loop Recording:

Loop recording helps you maximise your memory by constantly recording over old video footage in pre-set time blocks. You can save loop recorded

time blocks of incidents.

- a) In Standby mode, press the MENU button to access the Video Time Menu
- b) Press the UP or DOWN button to select the duration of time blocks Off / 1min / 3min / 5min / 10min
- c) To save Loop Recorded time blocks, see "File Protection".

7. Motion Detection:

- a) In Standby mode, press the MENU button to access the Motion Detection Menu
- b) Press the UP or DOWN button to select On
- c) While powered on, when the camera detects motion it will begin video recording
- d) When motion is no longer detected, the camera will record for a further 10 seconds then stops recording

8. Photo:

- a) When in stand-by mode, press the MODE button to change to Photo mode.
- b) Press the OK button to take pictures – a chime will indicate photos have been captured.

Note: In Video mode, press the ON / OFF button to turn on the IR light.

9. Playback:

- a) In stand-by mode, press the MODE button to enter Playback mode
- b) Press the UP or DOWN button to select the file to preview
- c) Press the OK button to play or stop

10. Delete:

- a) In Playback mode, press the MENU button to access the Delete menu
- b) Press the UP or DOWN button to select "delete current" or "delete all" and press the OK button to confirm your selection and return to the Delete menu.
- c) Press the MENU button to exit the Delete menu and return to playback mode.

11. File protection:

- a) In Playback mode, to protect a file from being overwritten by Loop Recording, press the MENU button to access the Lock menu, select the file and lock it.
- b) In order to delete protected files, select the file and unlock it, then the files can be deleted.

E. OPTIONS & SYSTEM SETTINGS

- a) In standby mode, press the MENU button to enter the set-up menu.
- b) Press the UP or DOWN button to select the setting.
- c) Press the OK button to confirm your selection.
- d) After confirmation, press the MENU button to exit.

For specific menu information please see the following table:

Image Settings	Mode	Menu	Setting	Remark
	Video	Resolution	720p / VGA	The higher the resolution, the higher the pixels
		Video Time (Loop recording)	Off / 3min / 5min / 10min	Pre-time loop video
		Motion Detection	Off / On	
		Audio Record	Off / On	
		Time Stamp	Off / On	
	Photo	Size	3M / 2M / 1.3M / VGA	
		Time Stamp	Off / On	
	Play-back	Delete	Delete One / Delete All	
		Lock	Lock One / Unlock One Lock All / Unlock All	
		Thumbnail	Off / On	
		Volume	0 / 1 / 2 / 3 / 4 / 5 / 6	
	Setup	Date / Time	Year - Month - Day	
		Auto Power Off	Off / 1min / 2min / 5min	
		Language	English, Chinese, Japanese, Korean, French, German, Italian, Portuguese, Russian, Spanish	
		Screen Saver	Off / 1min / 3min / 5min	
		Light Frequency	50Hz / 60Hz	
		USB	Mass Storage / PC	Select option when connecting to PC
		Format	Cancel / OK	
		System Reset	Cancel / OK	

F. VIDEO AND PHOTO DOWNLOAD

- Connect the dash cam to your computer via the supplied USB cable.
- Choose "mobile disk" or "PC camera" in the USB Menu and press the OK button.
- If "mobile disk" is selected, you can manage the files via your PC file browser.
- If "PC camera" is selected the dash cam can be used as the webcam.

Note: If at any time the dash cam stops functioning, please press the RESET button to restart.

G. SPECIFICATIONS

Screen Size	2.4"
Pixels	3MP
Lens	90° Wide view angle
Minimum Light	1 Lux
Video Resolution	720p / VGA
Video Format	AVI / MJPG
Frames	30fps
Image Resolution	3M / 2M / 1.3M / VGA
Image Format	JPG
Motion Detection	Yes
Loop Recording Time	Off / 1min / 3mins / 5mins / 10mins
Memory Card	Micro SD Card (max. Capacity 32GB)
USB Port	USB 2.0
Power	DC 12V
Battery Capacity	260mAH
Microphone / Speaker	Built-In
Language	English, Chinese, Japanese, Korean, French, German, Italian, Portuguese, Russian, Spanish
Weight	45g
Size	77mm x 36mm x 52mm

Warranty Terms & Conditions

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is provided in addition to your rights under the Australian Consumer Law.

NX Australia warrants that this product is free from defects in material and workmanship for a period of 12 months from the date of purchase or for the period stated on the packaging. This warranty is only valid where you have used the product in accordance with any recommendations or instructions provided by NX Australia.

This warranty excludes defects resulting from alterations of the product, accident, misuse, abuse or neglect.

In order to claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to NX Australia. NX Australia will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for collection. All costs involved in claiming this warranty, including the cost of the retailer sending the product to NX Australia, will be borne by you.

Email: info@nxdashcam.com





ENGINEERED FOR THE NEXT GENERATION™