



Cartia Vanity Installation Instructions

Essential:

- Installation must be performed by qualified tradespersons
- Plumbing must be performed by licensed plumbers only
- Please check the carton to make sure the product is complete and meets your expectations prior to installation
- Installation must confirm to all local plumbing and building codes
- It is recommended all vanities be installed 300mm minimum from any wet areas such as open showers, baths, spas

Installation - Cabinet

- Measure and mark position of cabinet, making sure to make level front to back and side to side so that the cabinet is square
- If required cutout holes for plumbing pipes and fittings
- Level feet using packers and/or adjustment keeping the cabinet square and level
- Using appropriate wall fasteners attach the cabinet to the wall, we highly recommend installation mounts at several locations on the cabinet backboard into stud, noggins or full brick. Recheck that the cabinet is square and level, adjust if required. Door and drawer openings must be square and level to maintain function.
Install handles if required
If required adjust doors and drawer alignment to aid in proper function

Installation – Tops

- We recommend installation of tapware and waste prior to installation of the ceramic or SMC
- Test fit the top onto the cabinet with your tapware and waste ensuring there is sufficient clearance for plumbing and doors and drawer function
- Test plumbing and check for leaks, keep cabinet dry, clean any spills immediately and wipe clean
- With the cabinet securely in the final installation position run a bead of anti-fungal silicone around the top 4 edges of the cabinet body making sure not to silicone the door or drawers. Place the top onto the bead of silicone, it is important the top is flush to the wall and overhangs the cabinet at the front and sides so that water cannot enter the cabinet. The weight of the vanity top with properly installed waste and plumbing line will hold the top in place until the silicone is permanently dry.
Final fix plumbing

Installation – sealing in

- Make watertight the cabinet by closing the space between the wall and back of the top with anti-fungal silicone.
Make watertight the back of the cabinet by closing the gap between the left- and right-hand side panels of the cabinet with anti-fungal silicone
- The ridges on the underside of the SMC top will stop a water drip line entering the cabinet, we recommend sealing the gap between the top and cabinet with anti-fungal silicone

Cartia Australia Pty Ltd
Unit 17, Suite 5
633-639 Hume Hwy, Casula NSW 2170
Ph: (02) 9600 6166
E: sales@cartiaaustralia.com.au



Cartia Vanity Care and Maintenance

Our products have been dutifully manufactured using advanced technologies using materials selected to conform with Australian standards and building codes all the while befitting form and function in a stylish yet affordable product.

We recommend using only non-abrasive liquid detergents for cleaning or warm soapy water with soft cloths or tissue for cleaning of all product surfaces including cabinet insides and outsides, SMC tops, ceramic tops, ceramic basins, polymarble tops and poly marble basins. Using harsh, caustic or corrosive cleaners and sanitisers directly onto your vanity is highly discouraged as it may damage the product finishes.

Polishing may not be possible over burn marks, scratches or dents; we recommend keep sharp objects away from the vanity as well as hot appliances.

Used with care this product will last many years of hassle free service.

Cartia Australia Pty Ltd
Unit 17, Suite 5
633-639 Hume Hwy, Casula NSW 2170
Ph: (02) 9600 6166
E: sales@cartiaaustralia.com.au


FIX CABINET INSTRUCTION

* Ensure The Wall is Flat & Plumb

Before starting, check that the wall is plumb and flat. If not, the cabinet will need to be packed out so that it is sitting level. Otherwise the cabinet will twist, causing the doors and drawers to be out of alignment and not function correctly.


Fix Freestanding cabinet

1. Please put the plastic expansion nails into the wall with an appropriate position
2. Please use the screw to fix the cabinet on the wall the screw must through the gasket

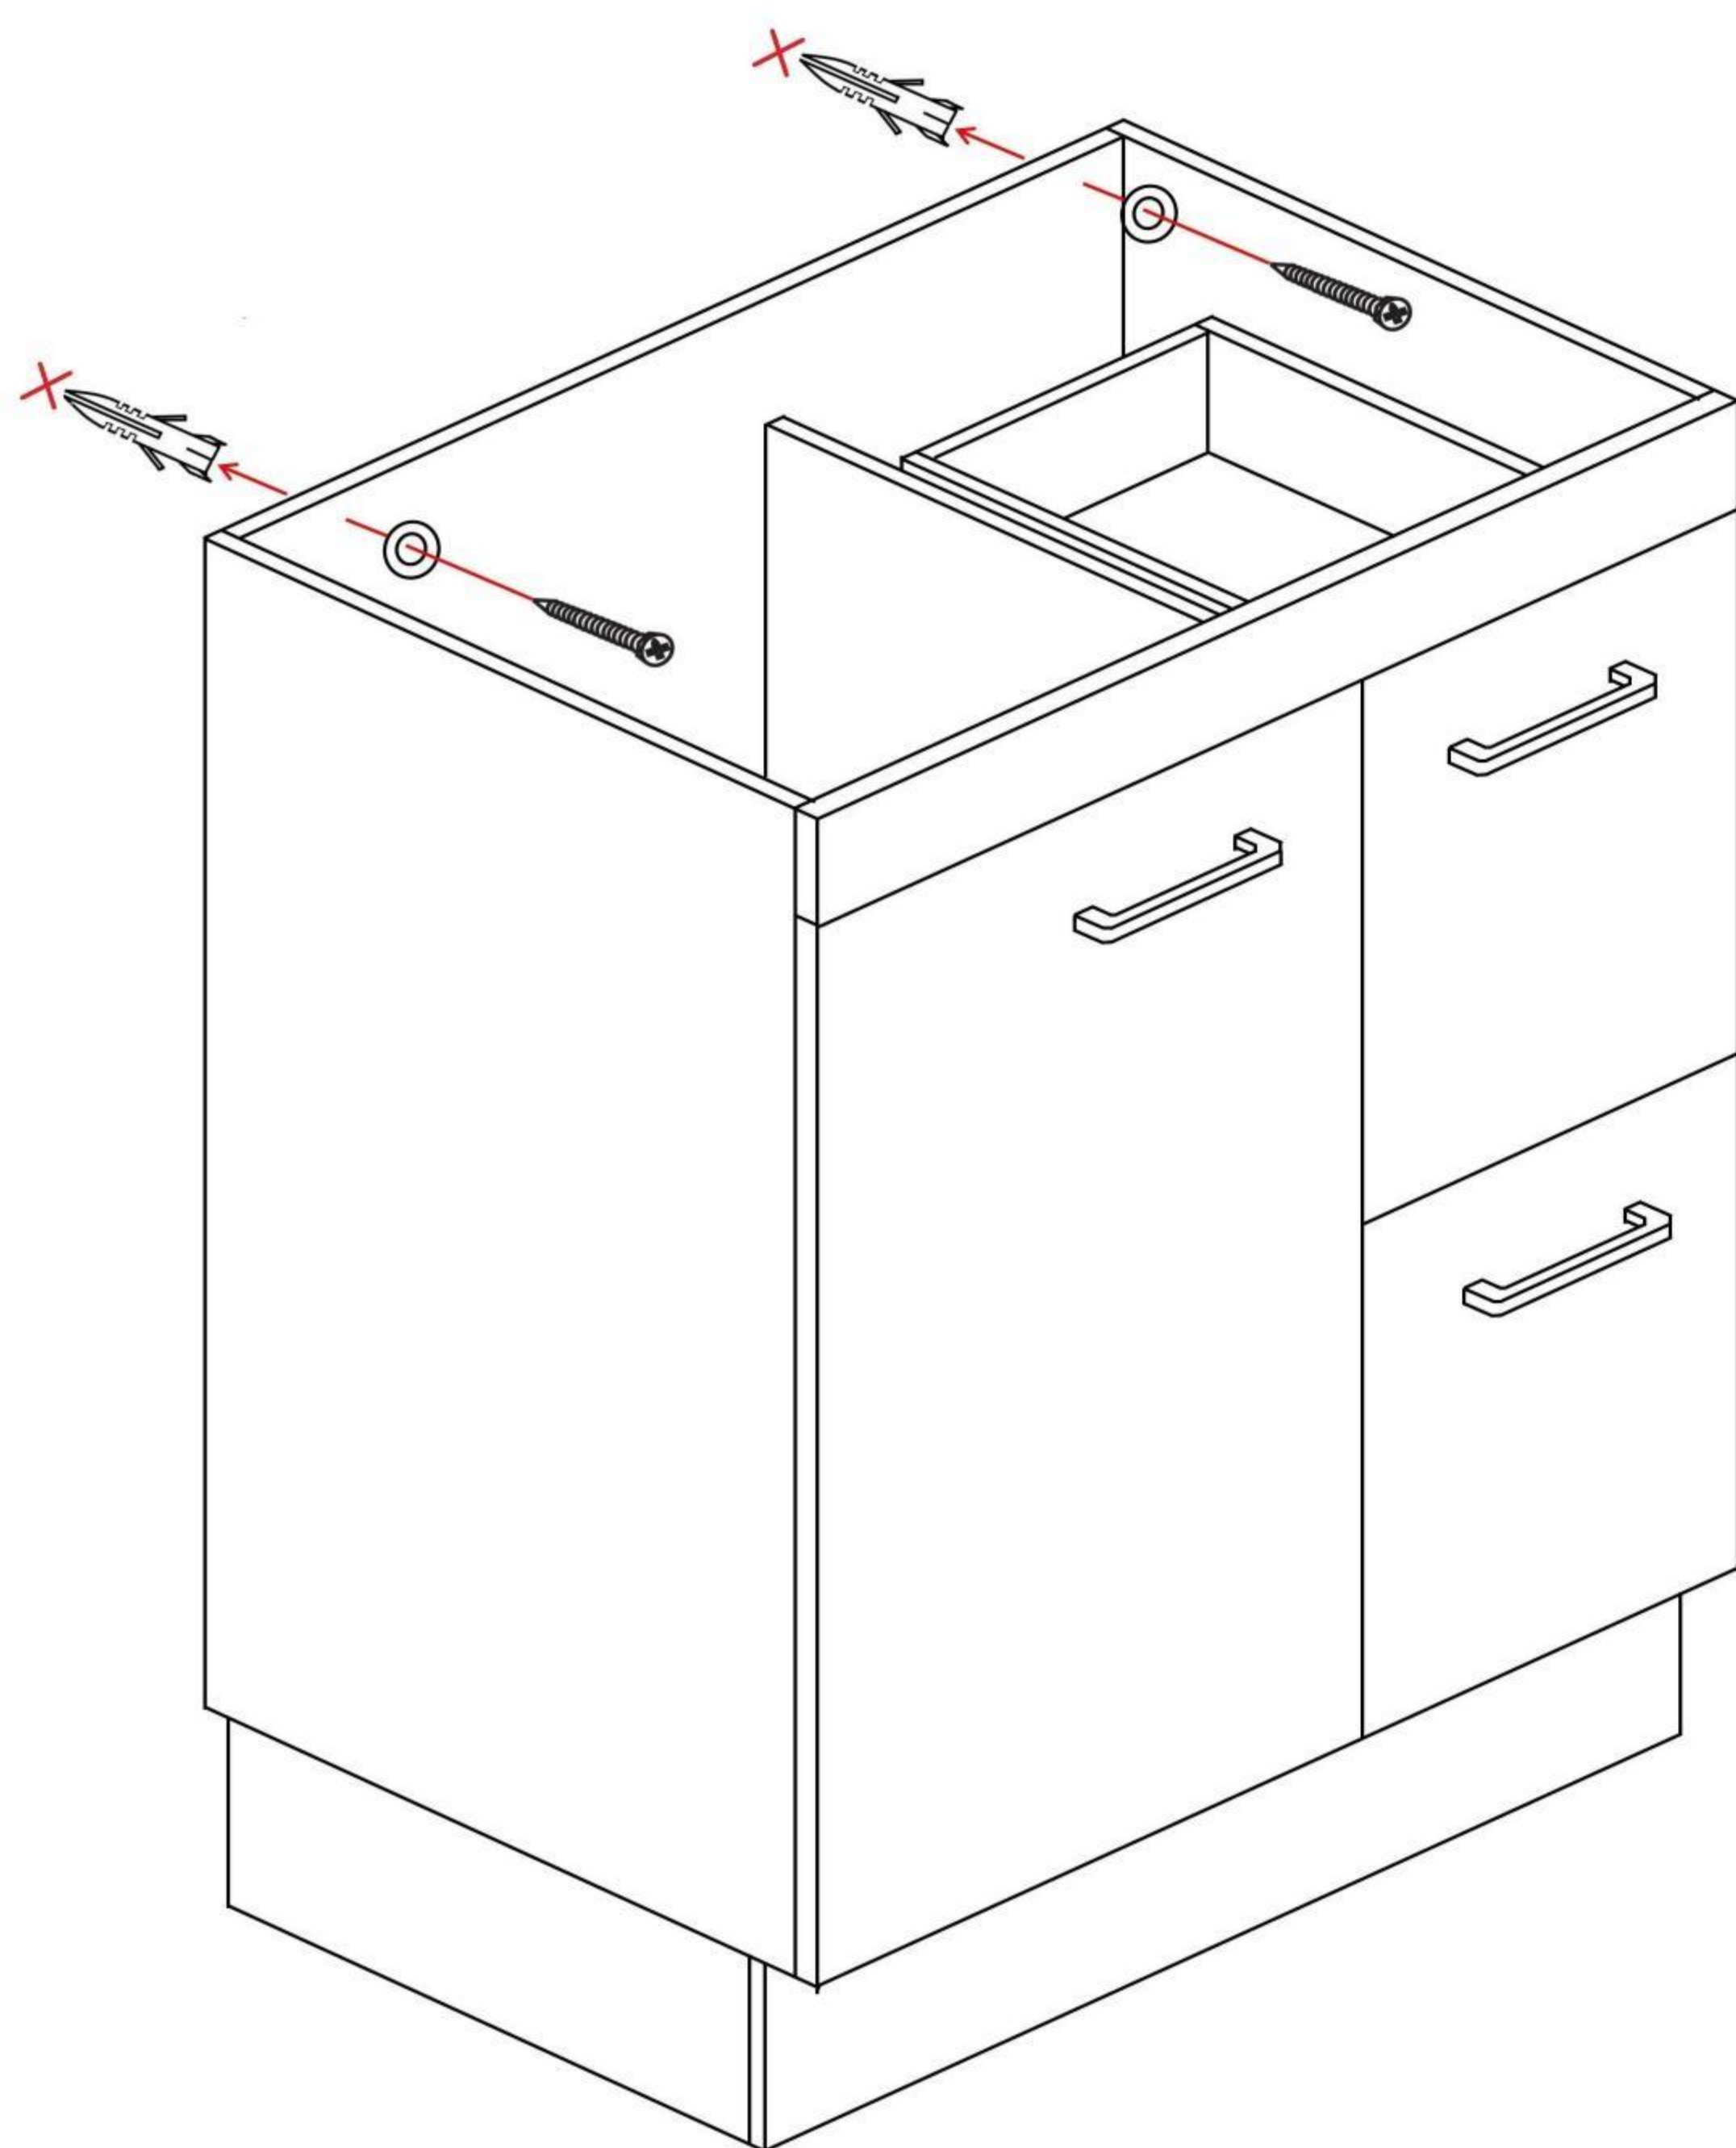


Fix Shaving Cabinet

1. Fix the Mounting Batten with suitable screws on the wall
2. Hang the Shaving Cabinet on the Mounting Batten

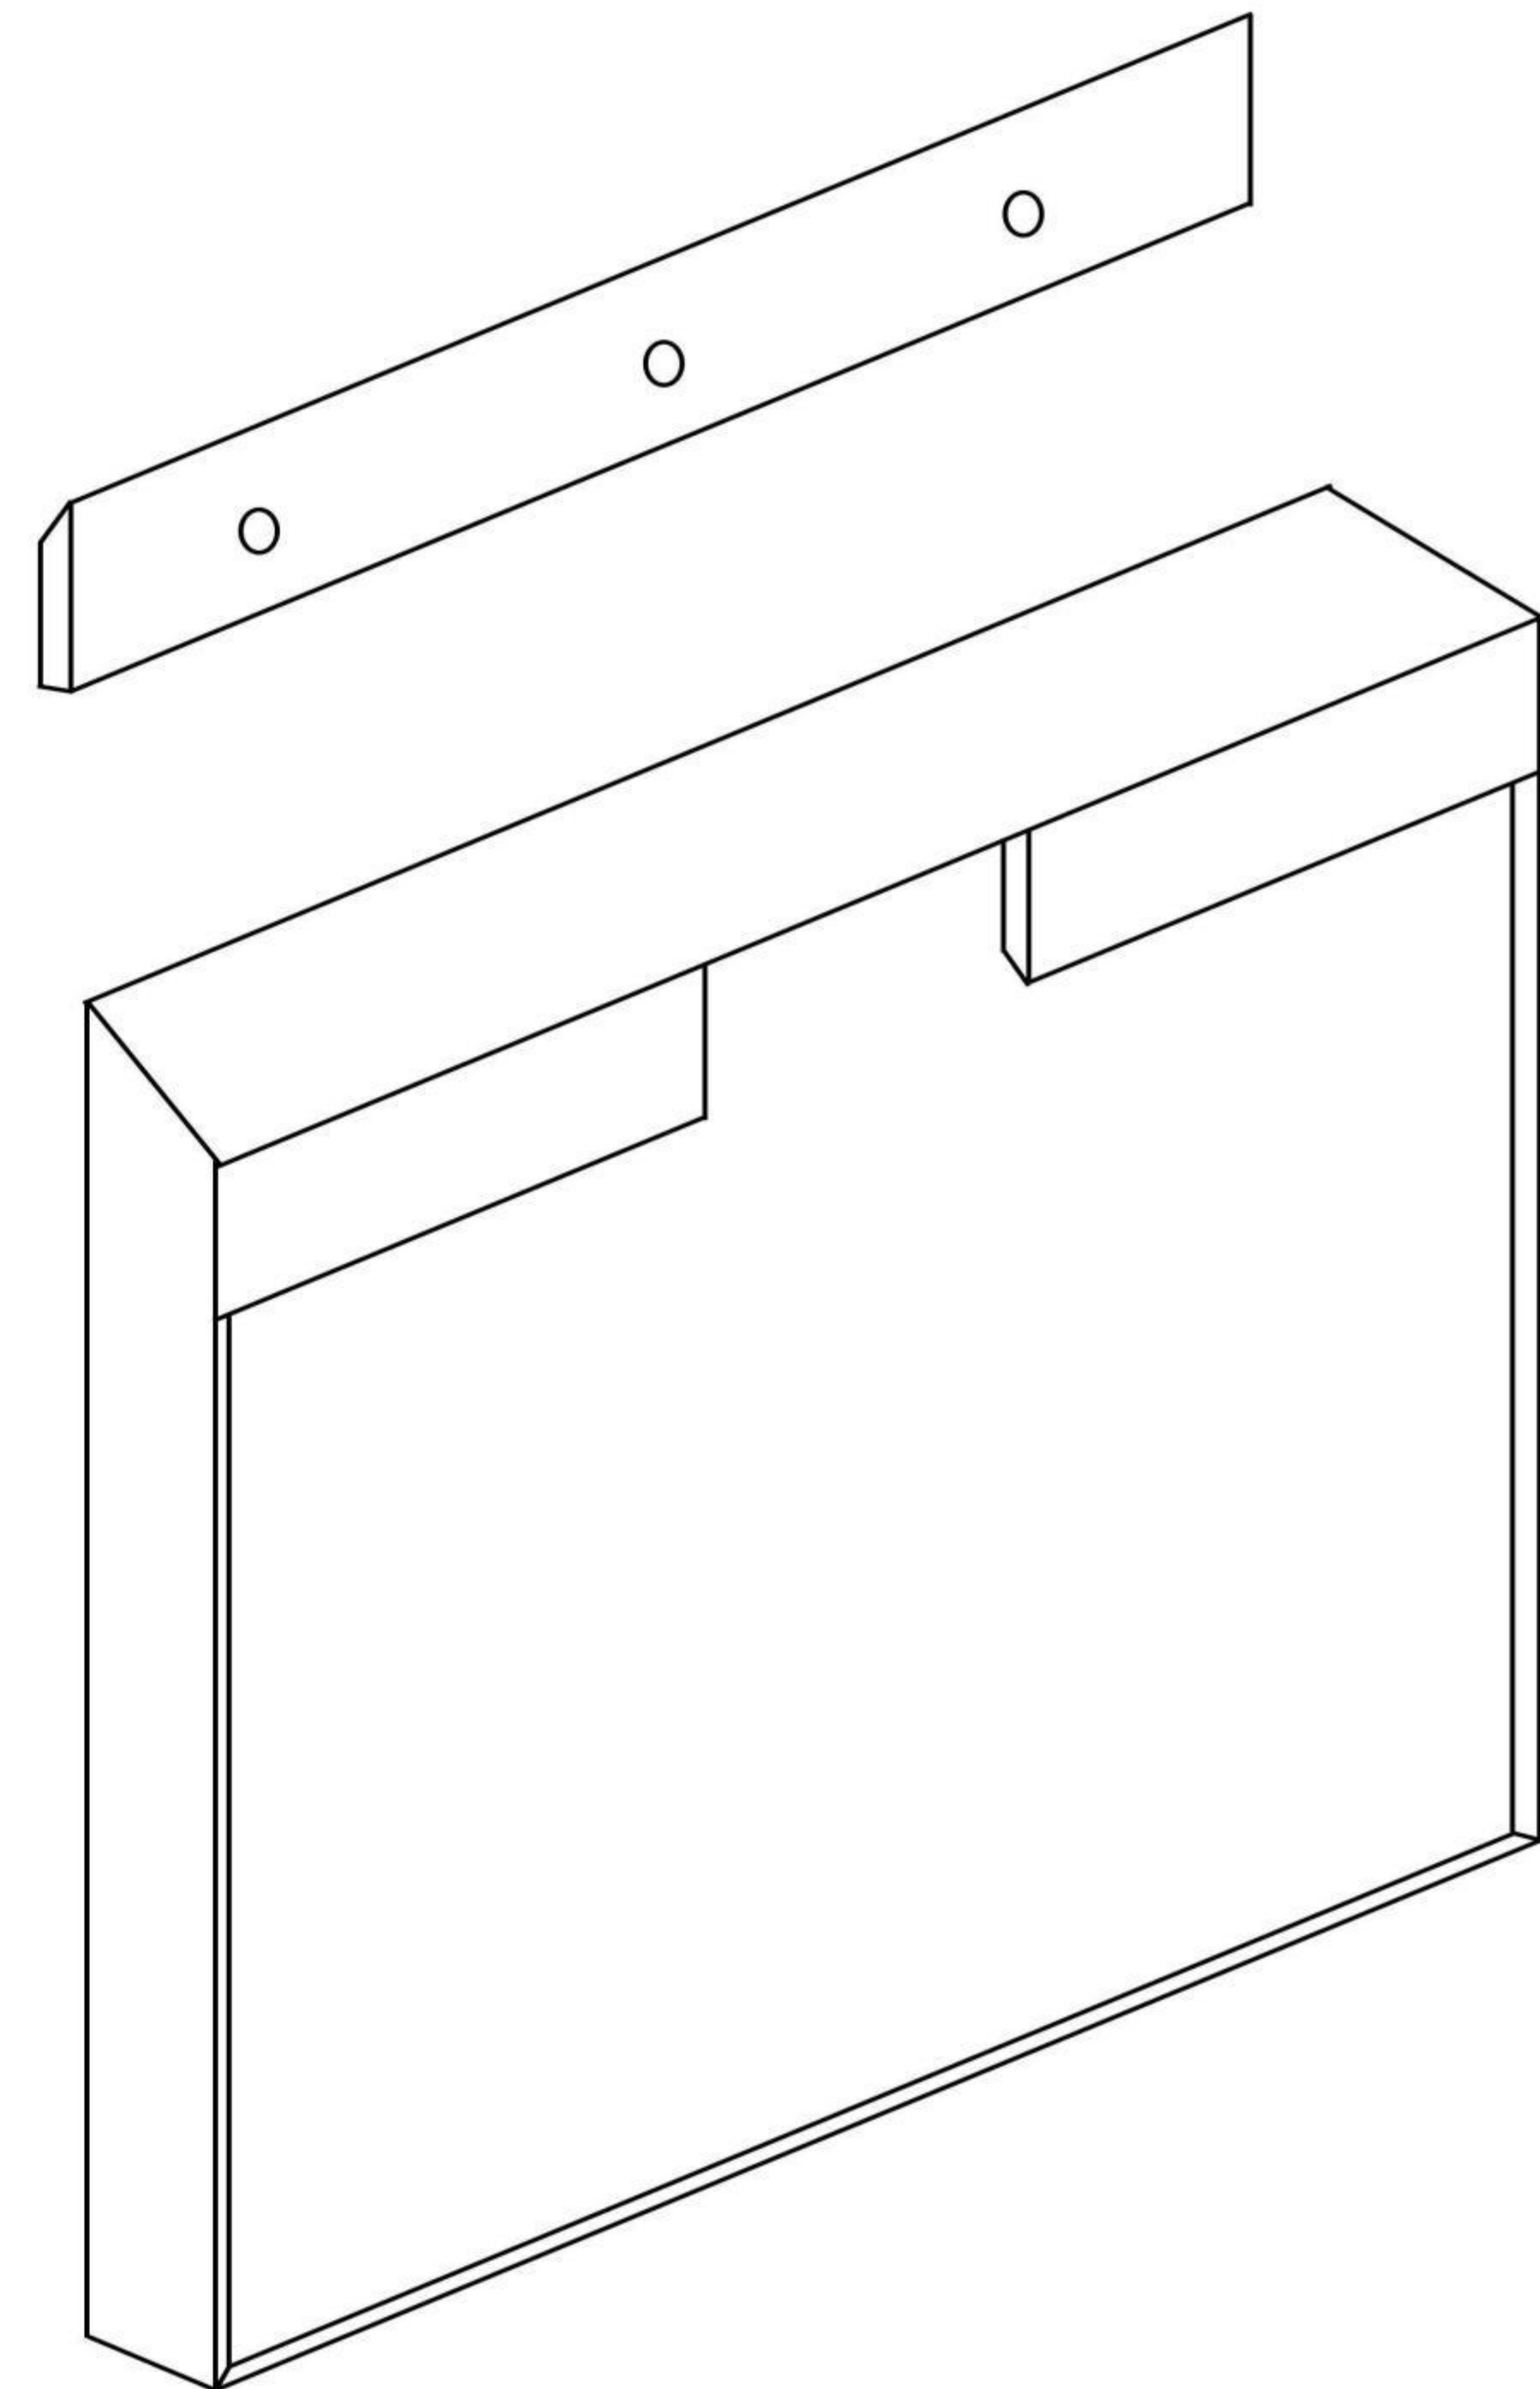


Fix Wall Hung Cabinet


1. Two Brackets A are on the cabinet already
2. Measure the distance between Two Brackets A
3. Put the plastic expansion nails into the wall with same distance as Two Brackets A
4. Use screws to fix the Bracket B in the wall
5. Connect Bracket A and Bracket B

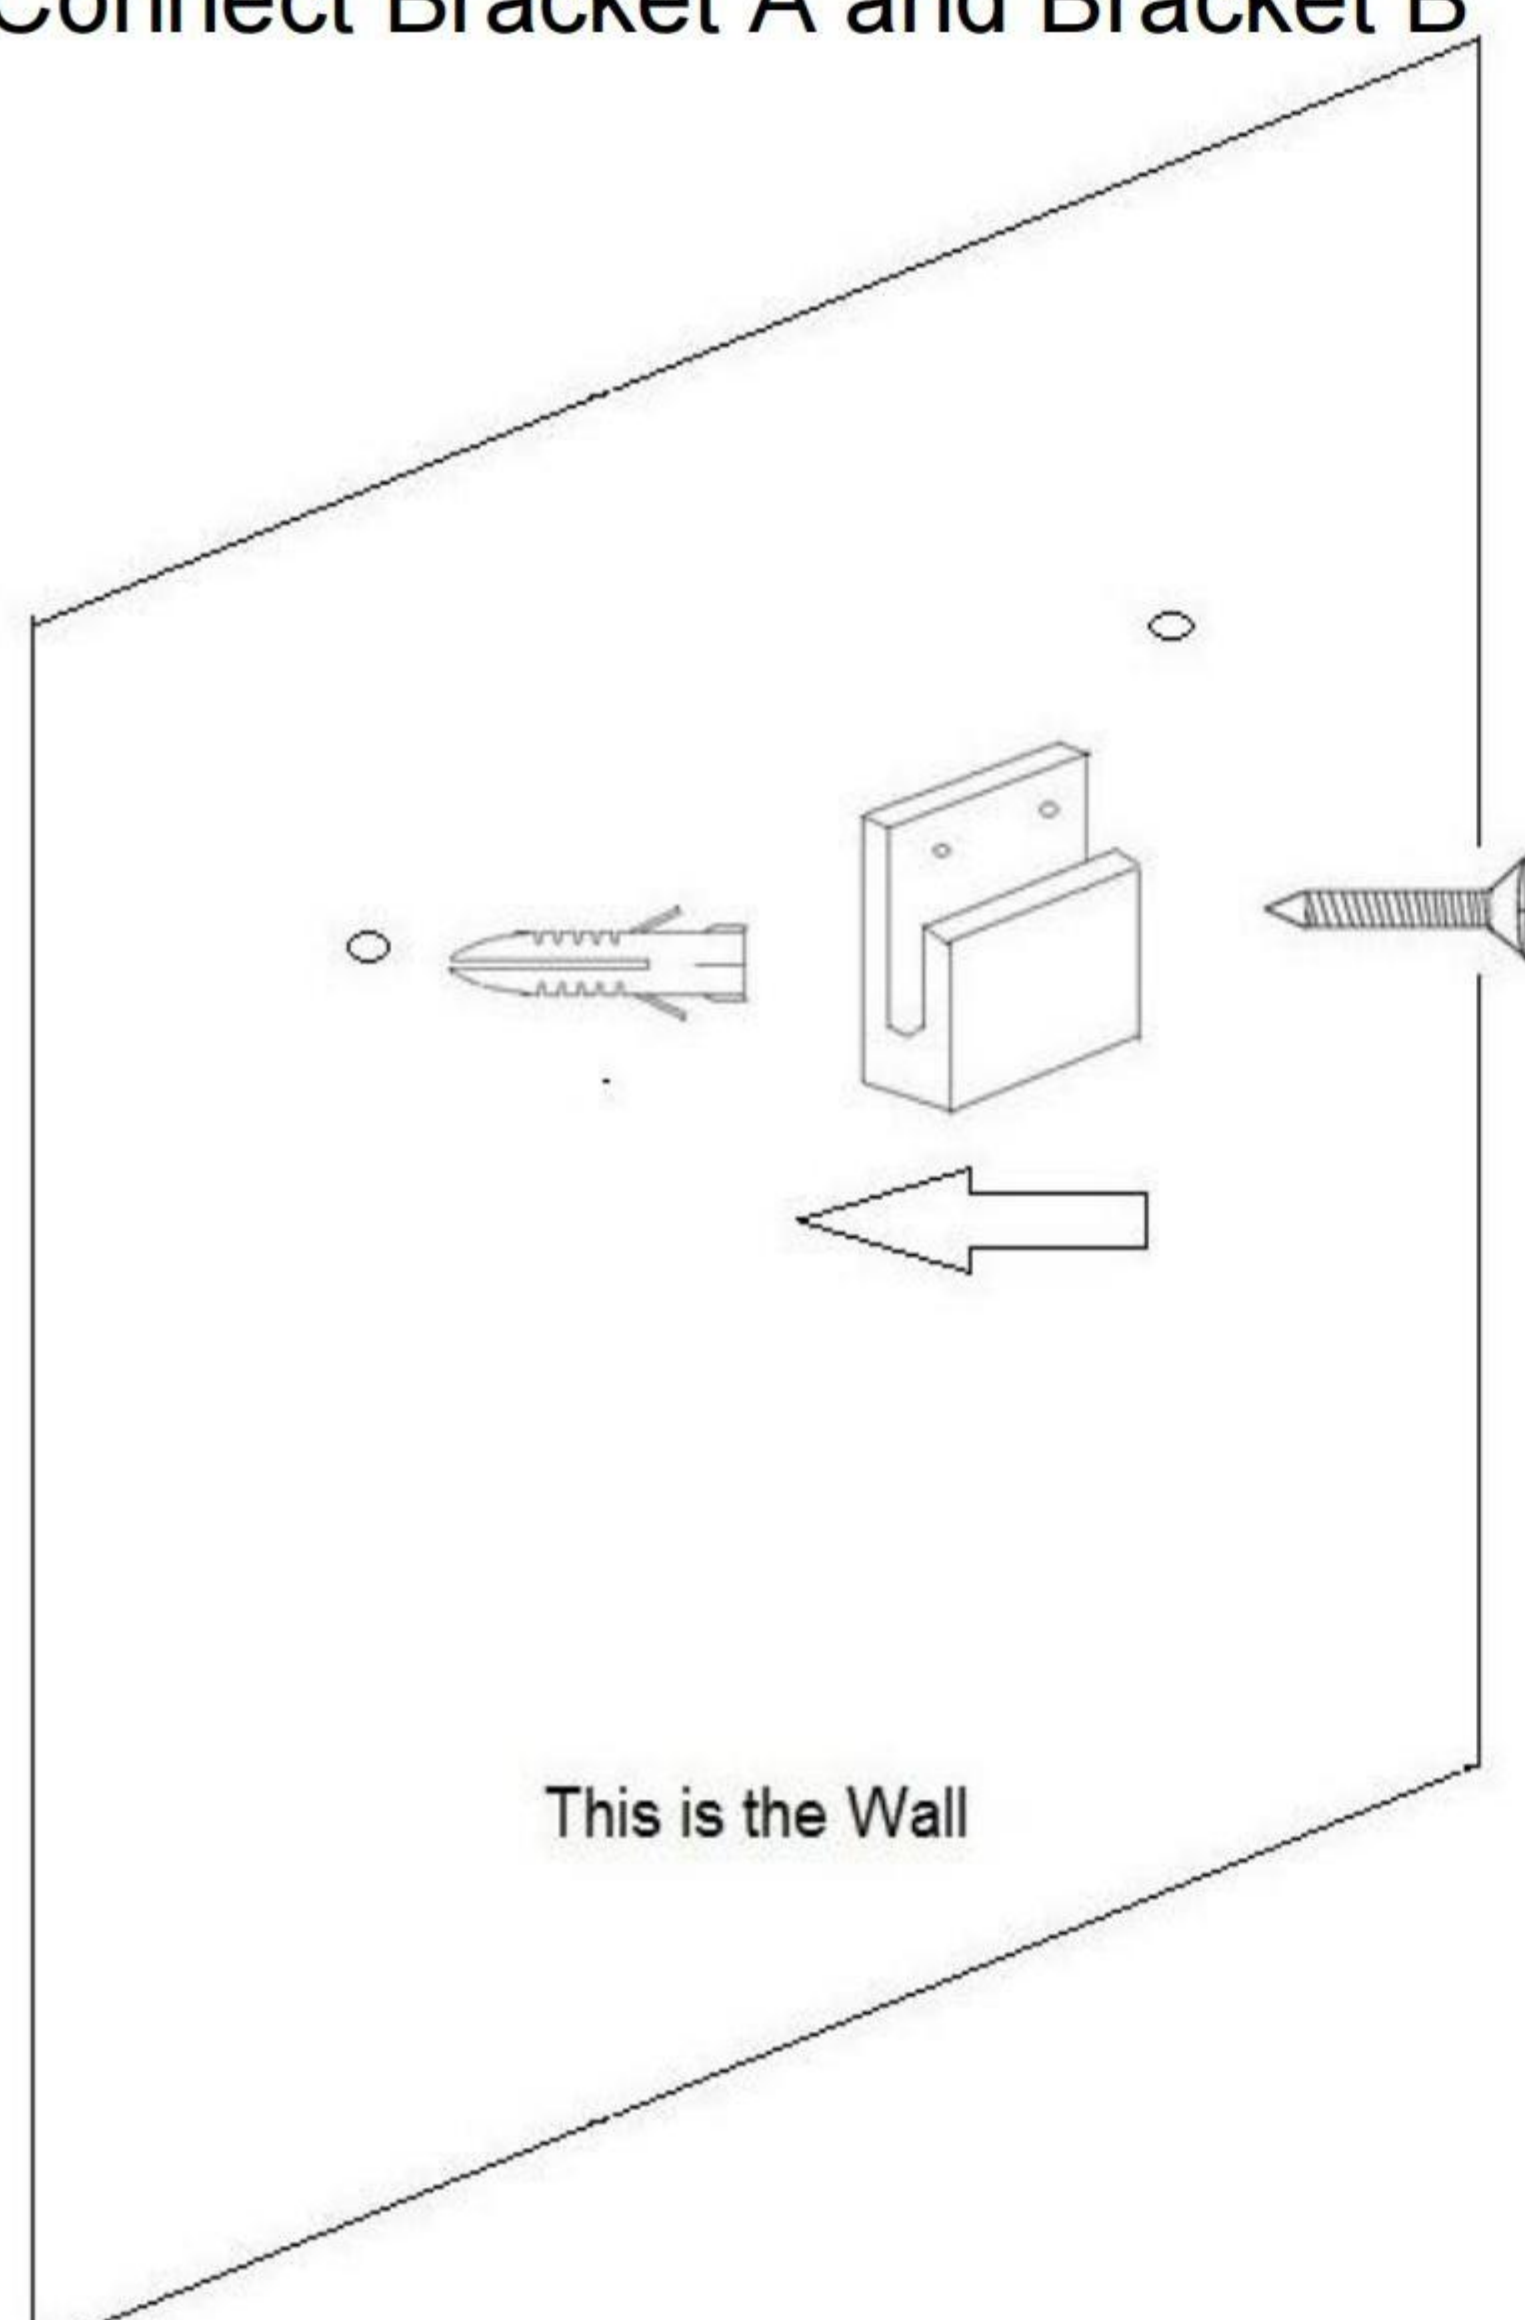

Wall View

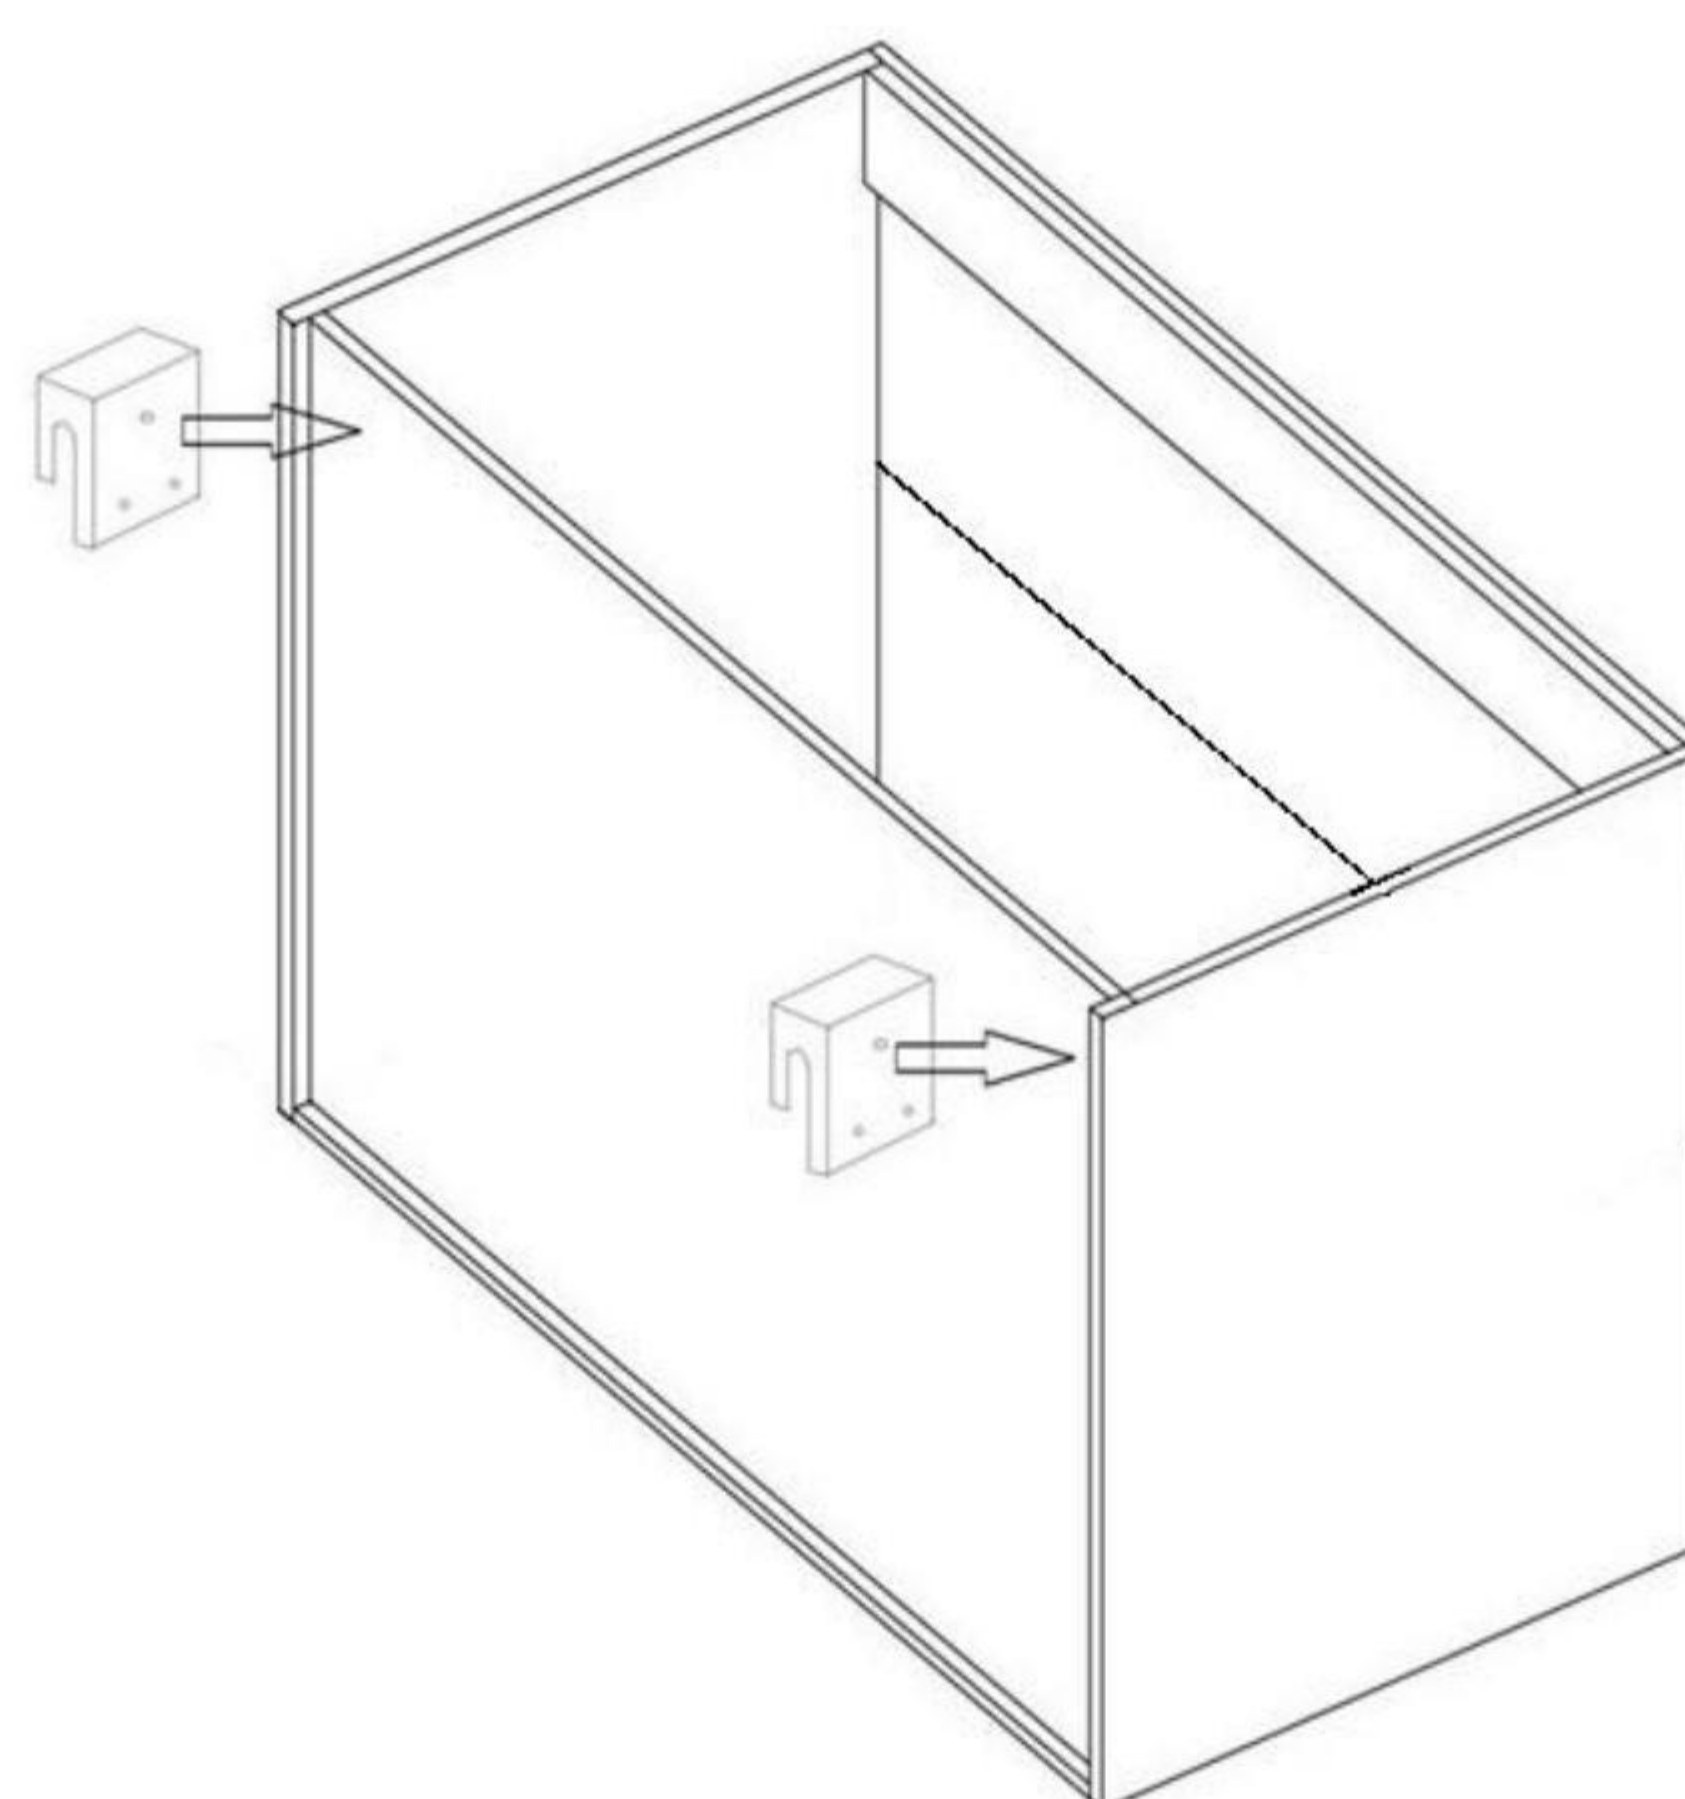


Cabinet Back View

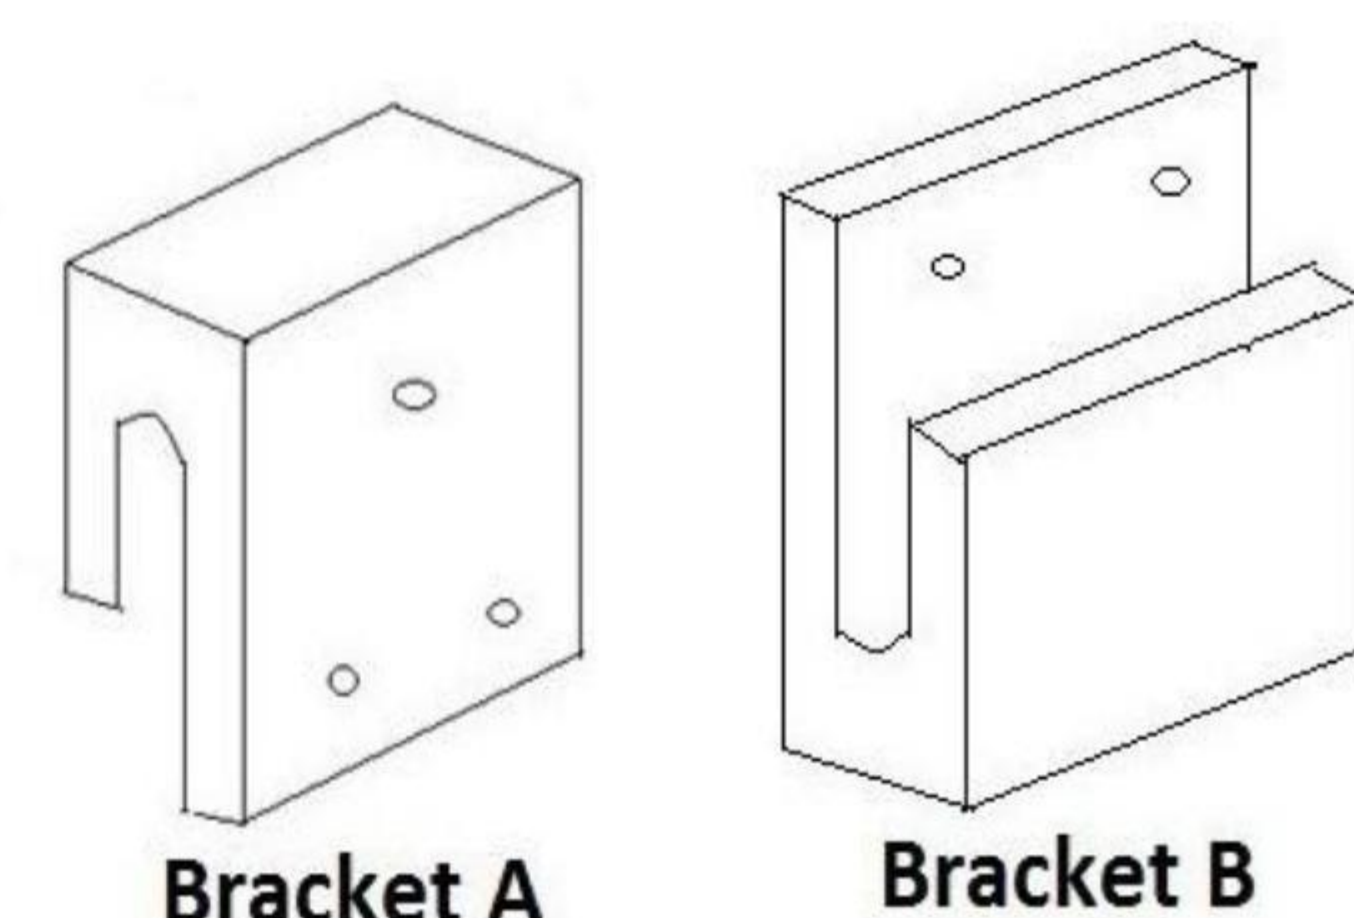


Bracket A

Bracket B

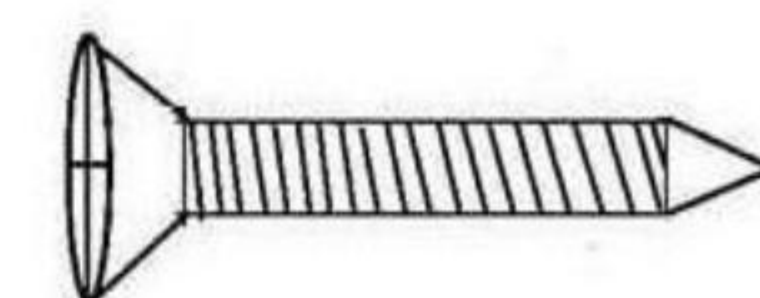

Screw

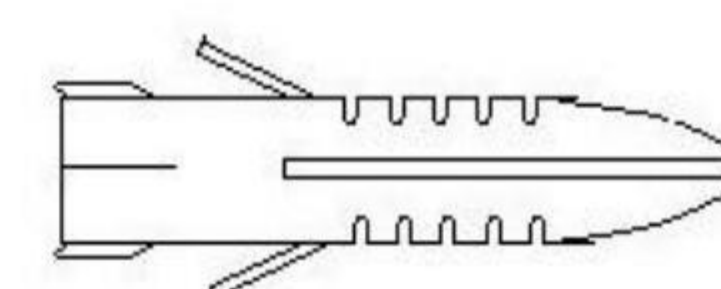


Plastic expansion

Drawer Removal Instruction


Normal runner

PleaseUplift the buttons both left and right then pull the drawer out.

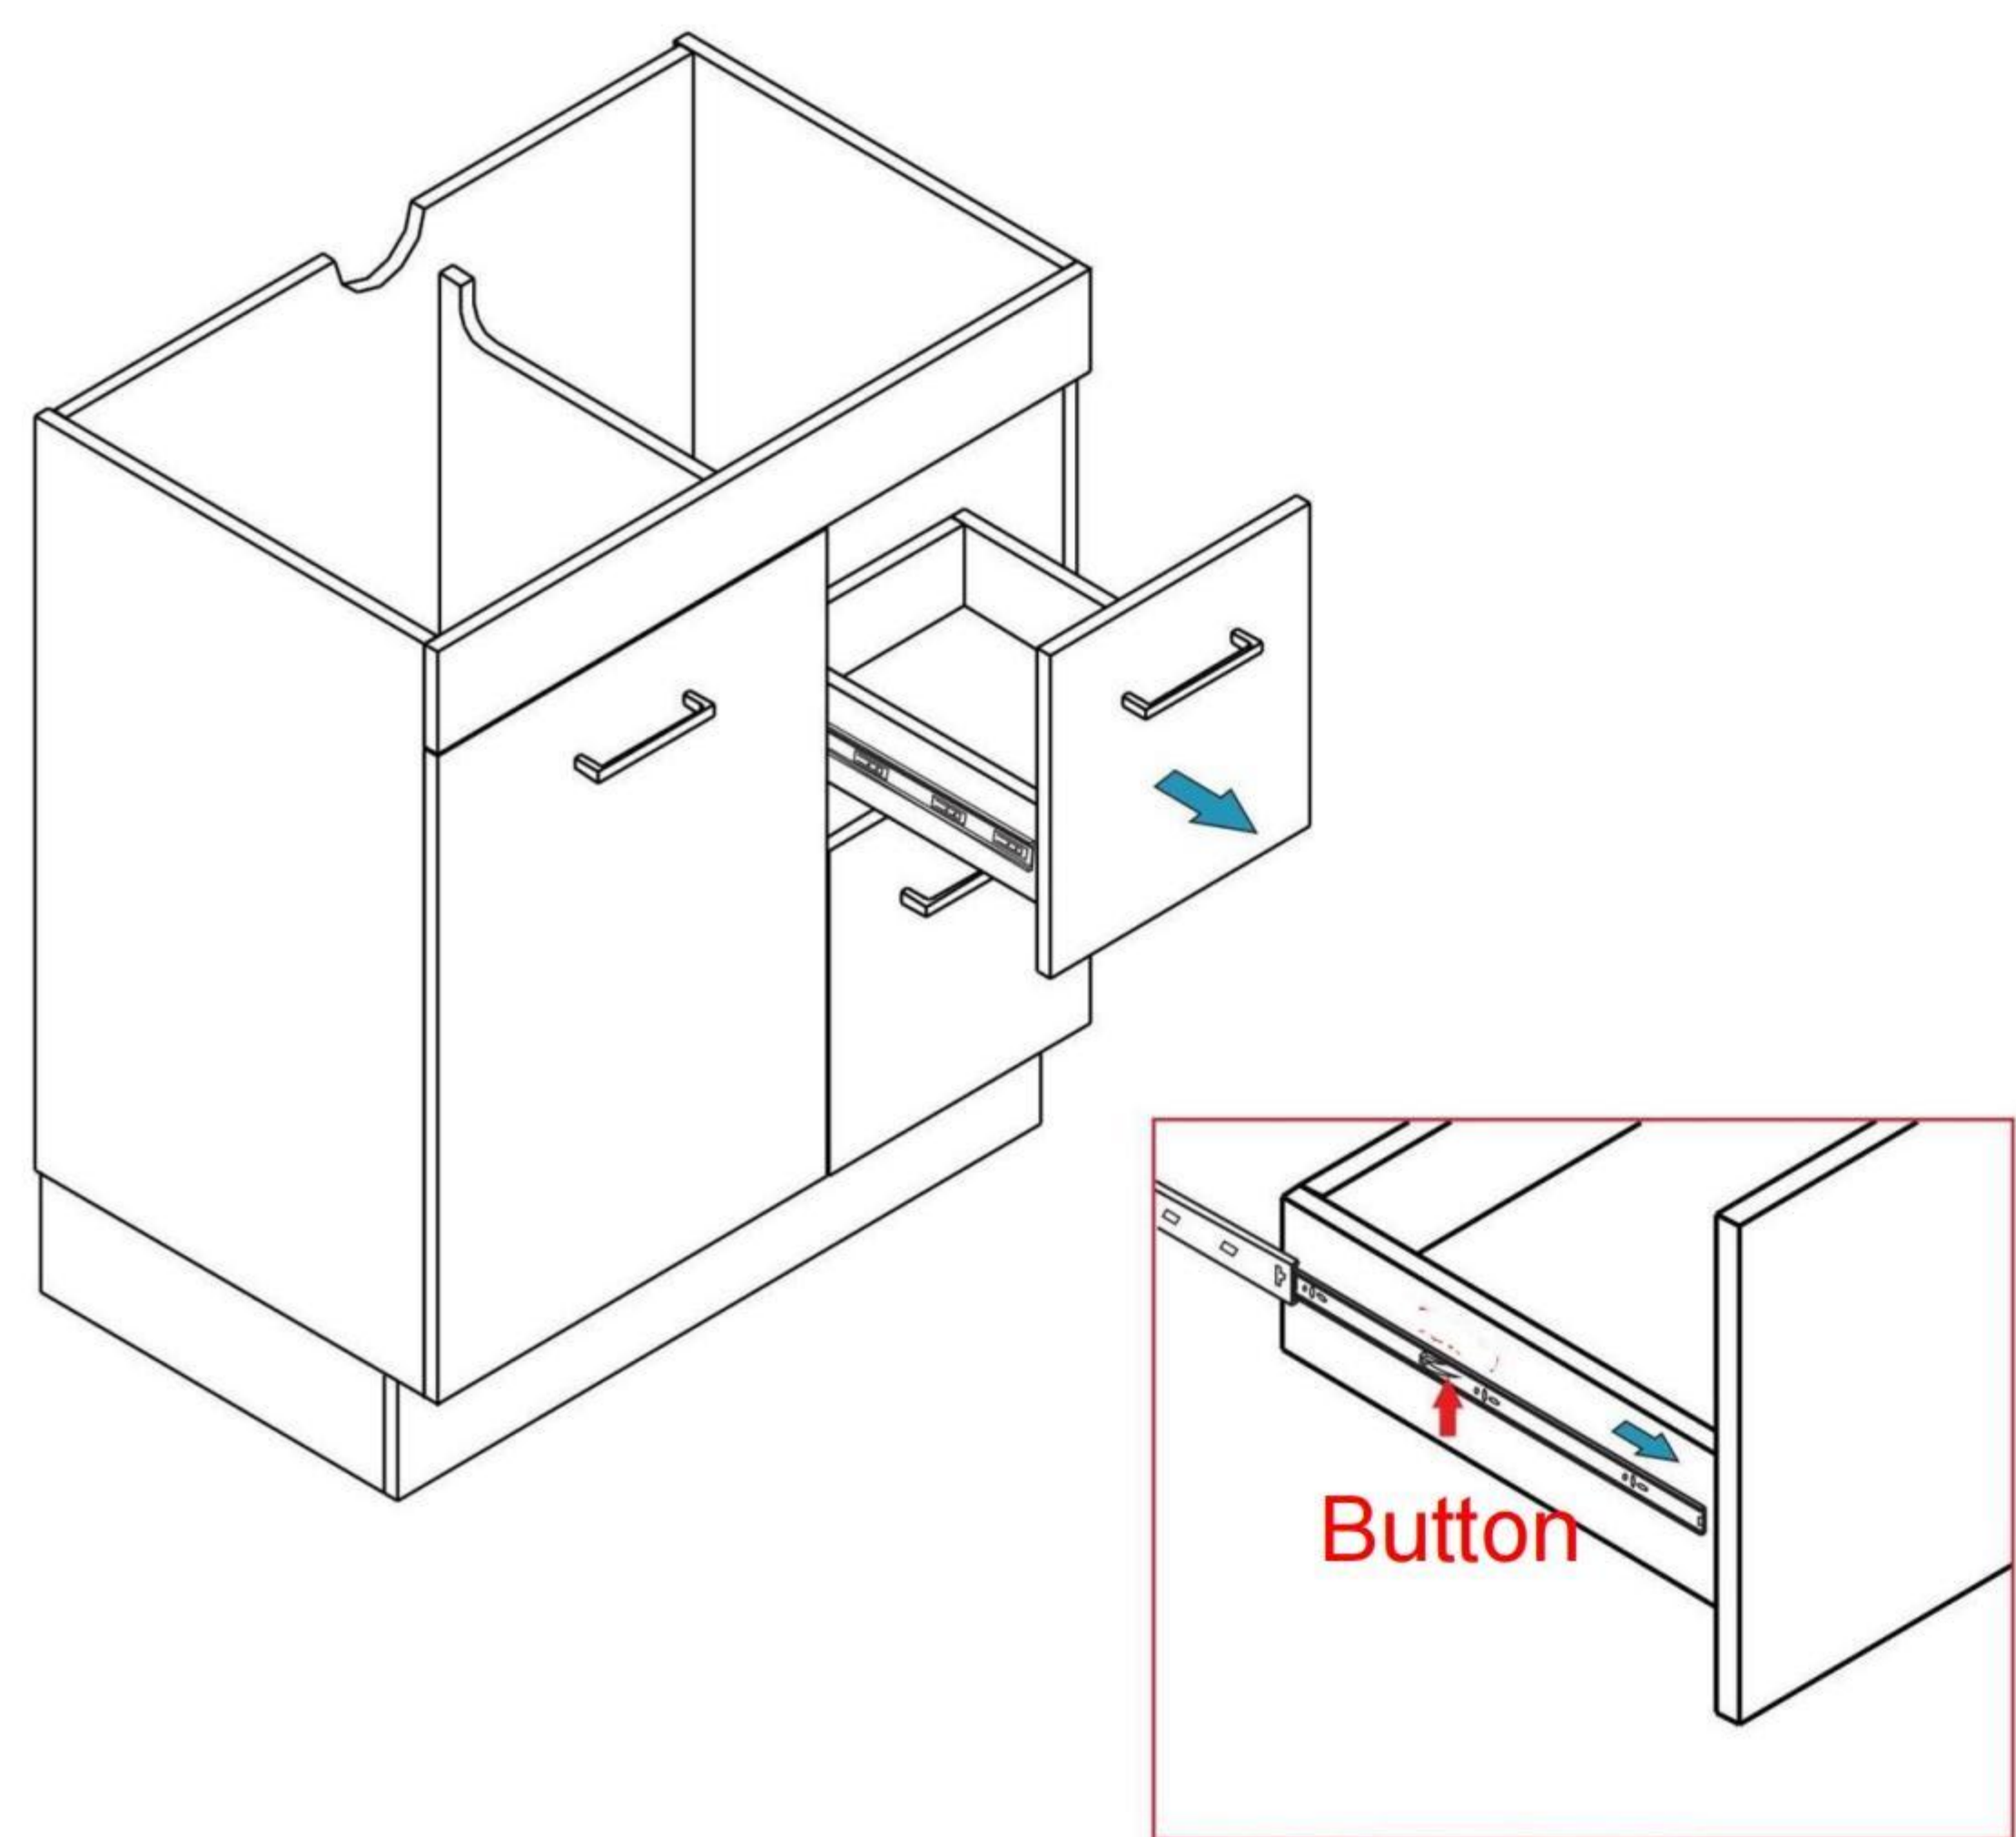

Metal runner



Please Press the Buttons both left and right then pull the drawer out.

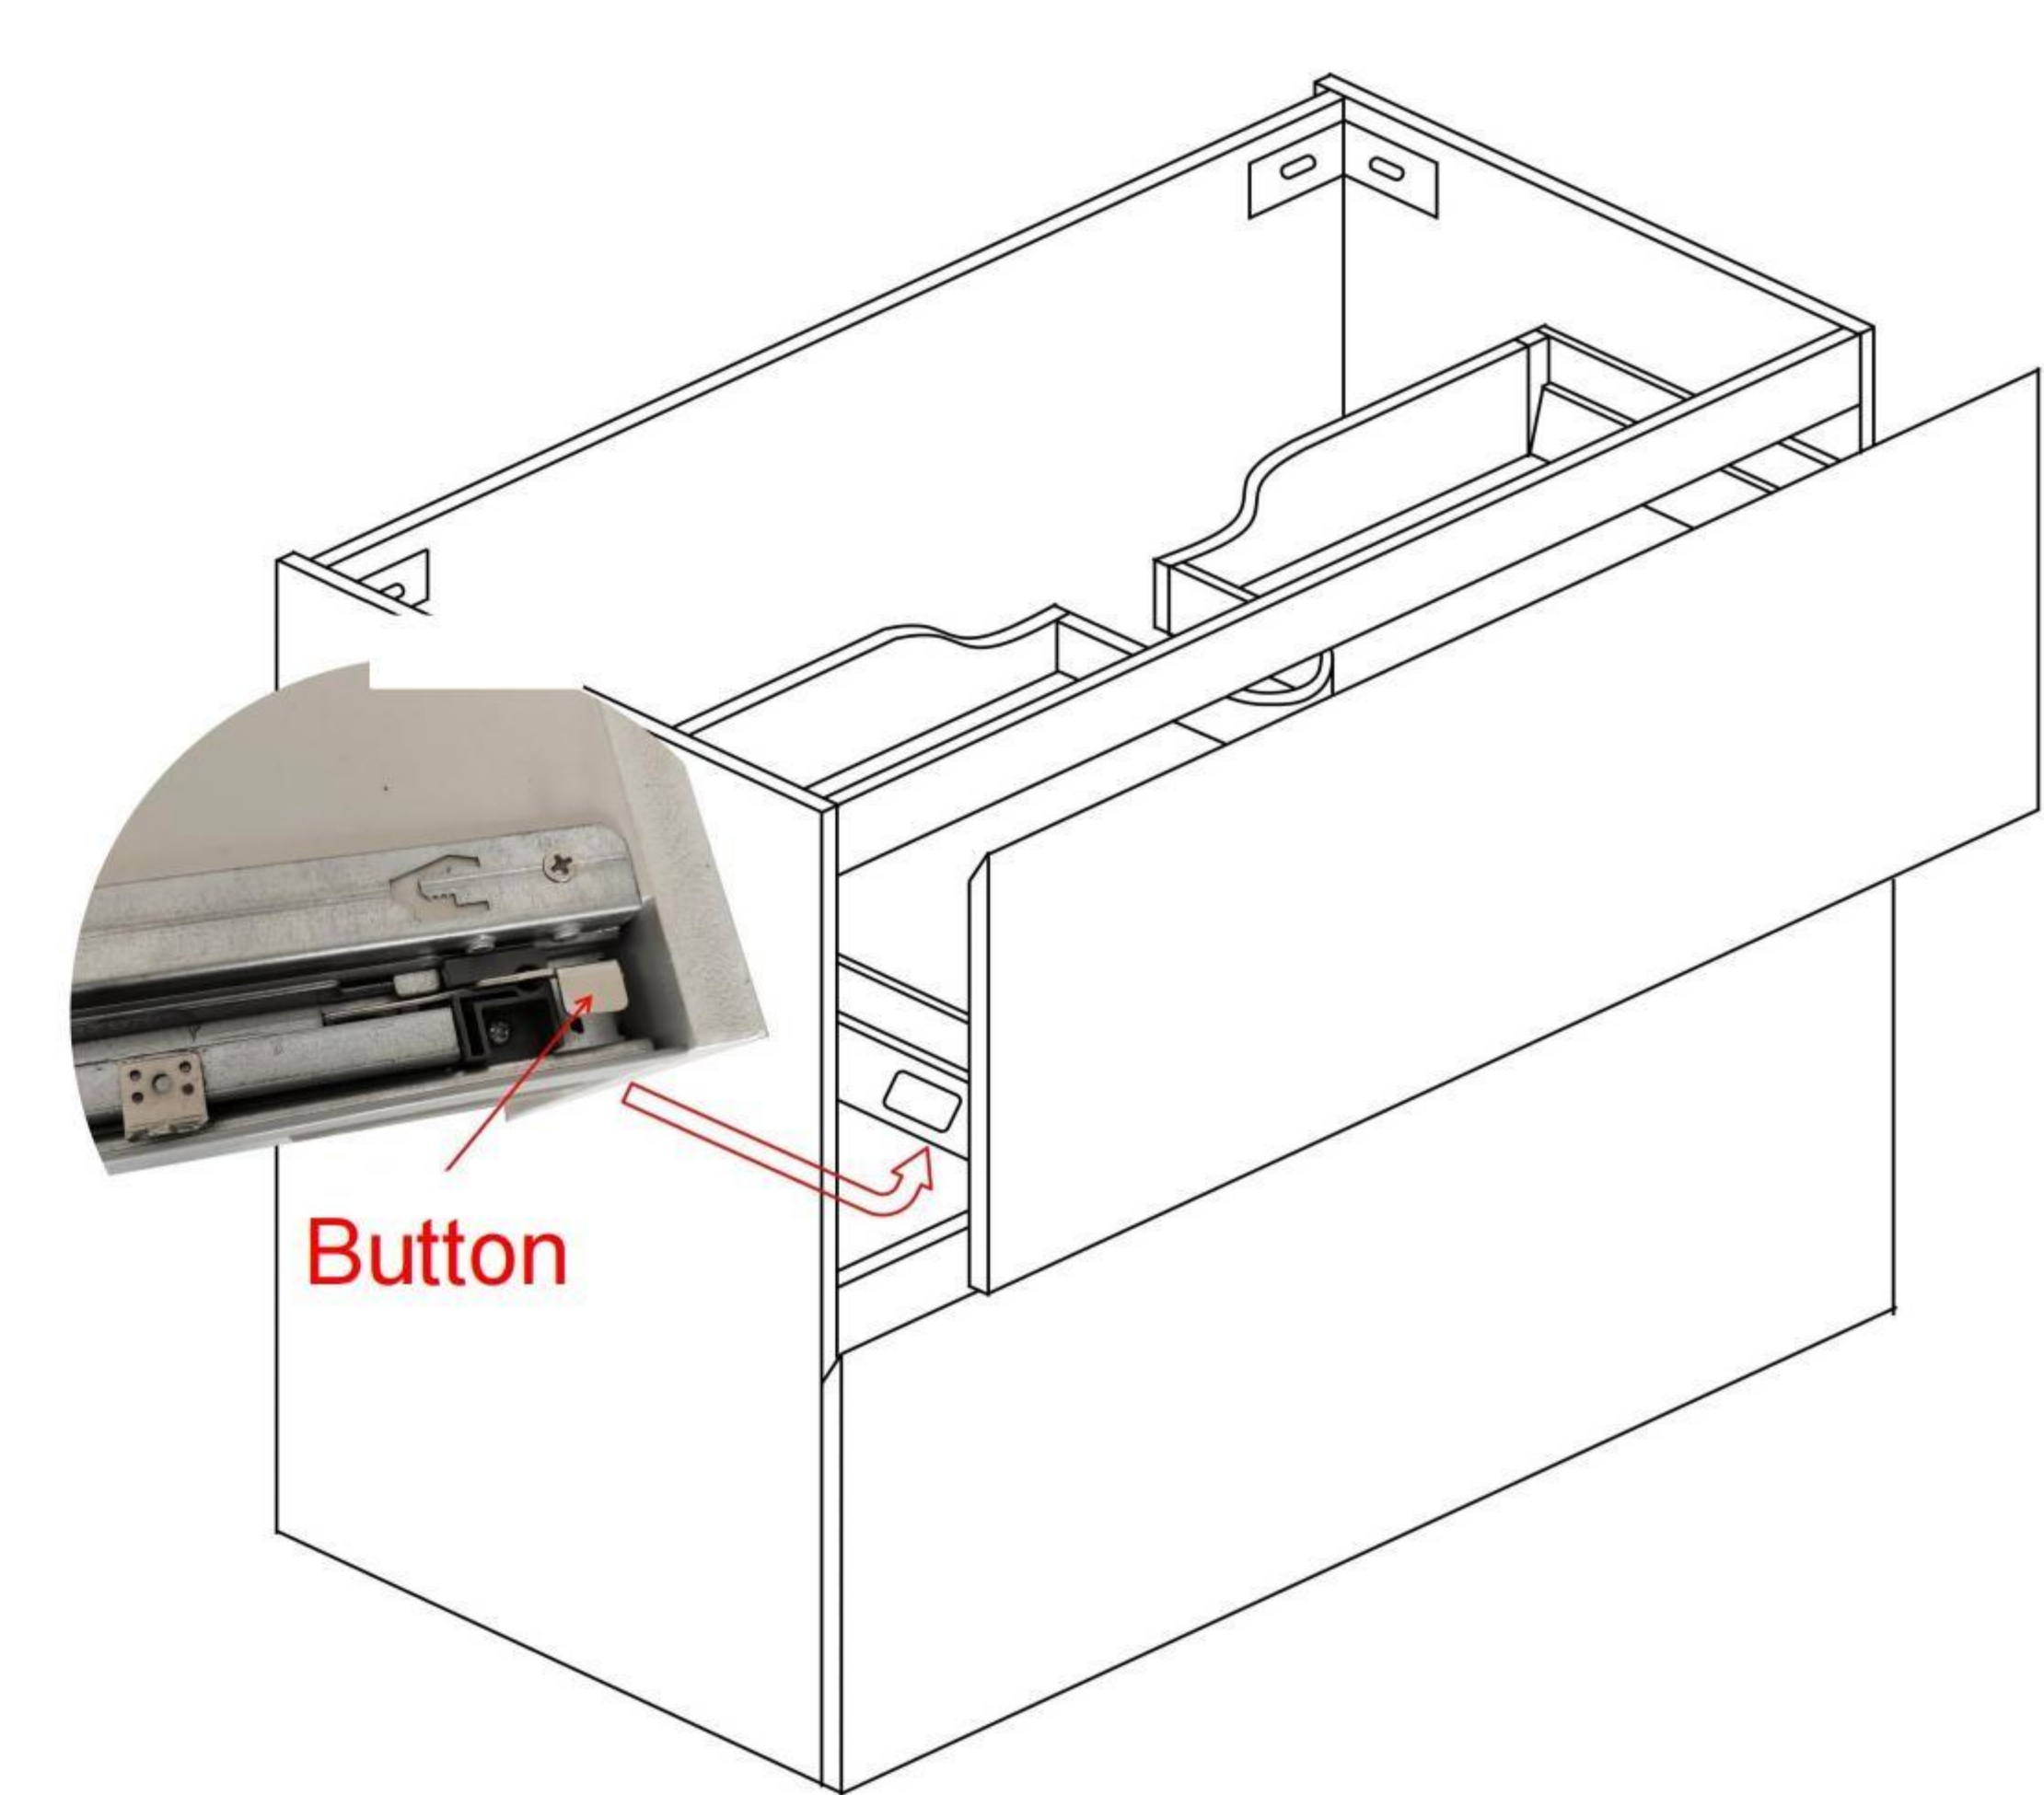

Adjust Door Instruction


- Please follow the below steps to adjust
- 1. Depth adjustment, turn the screw B
 - 2. Side adjustment, turn the screw C
 - 3. Height adjustment, turn the screw D

* If you need take of the door of shaving cabinet please press the button A

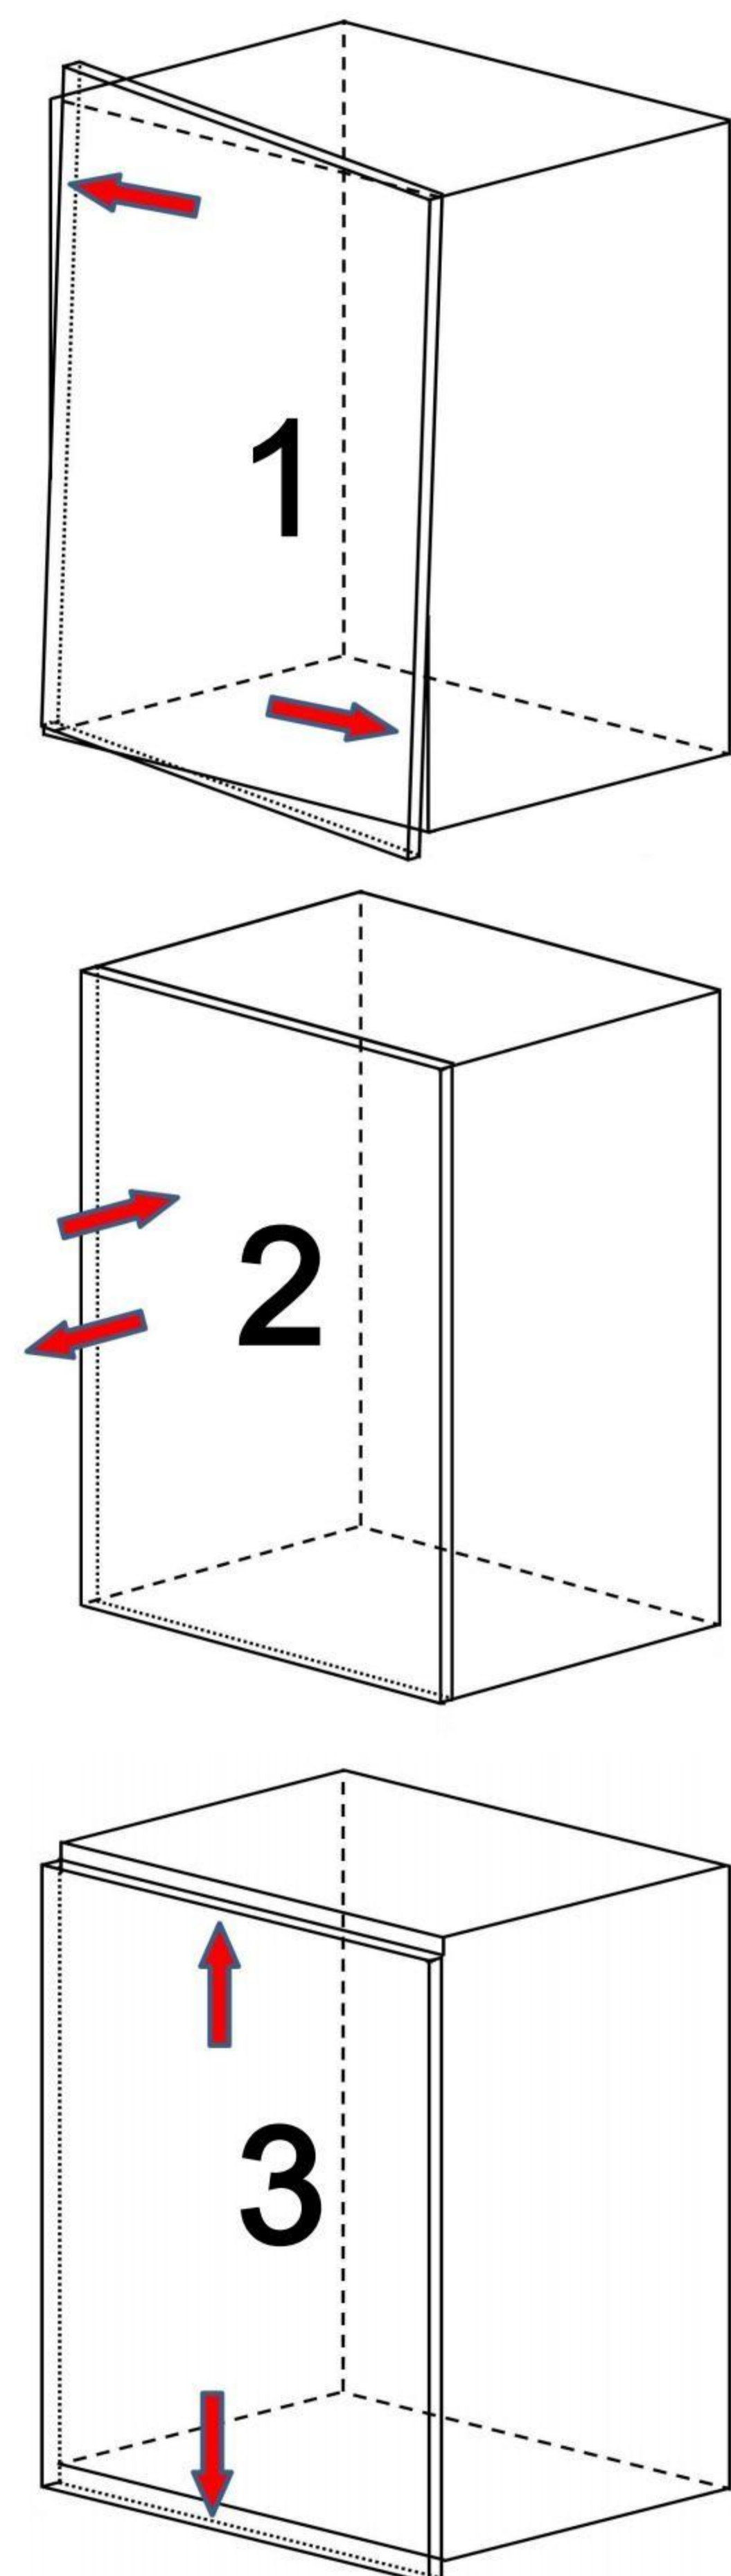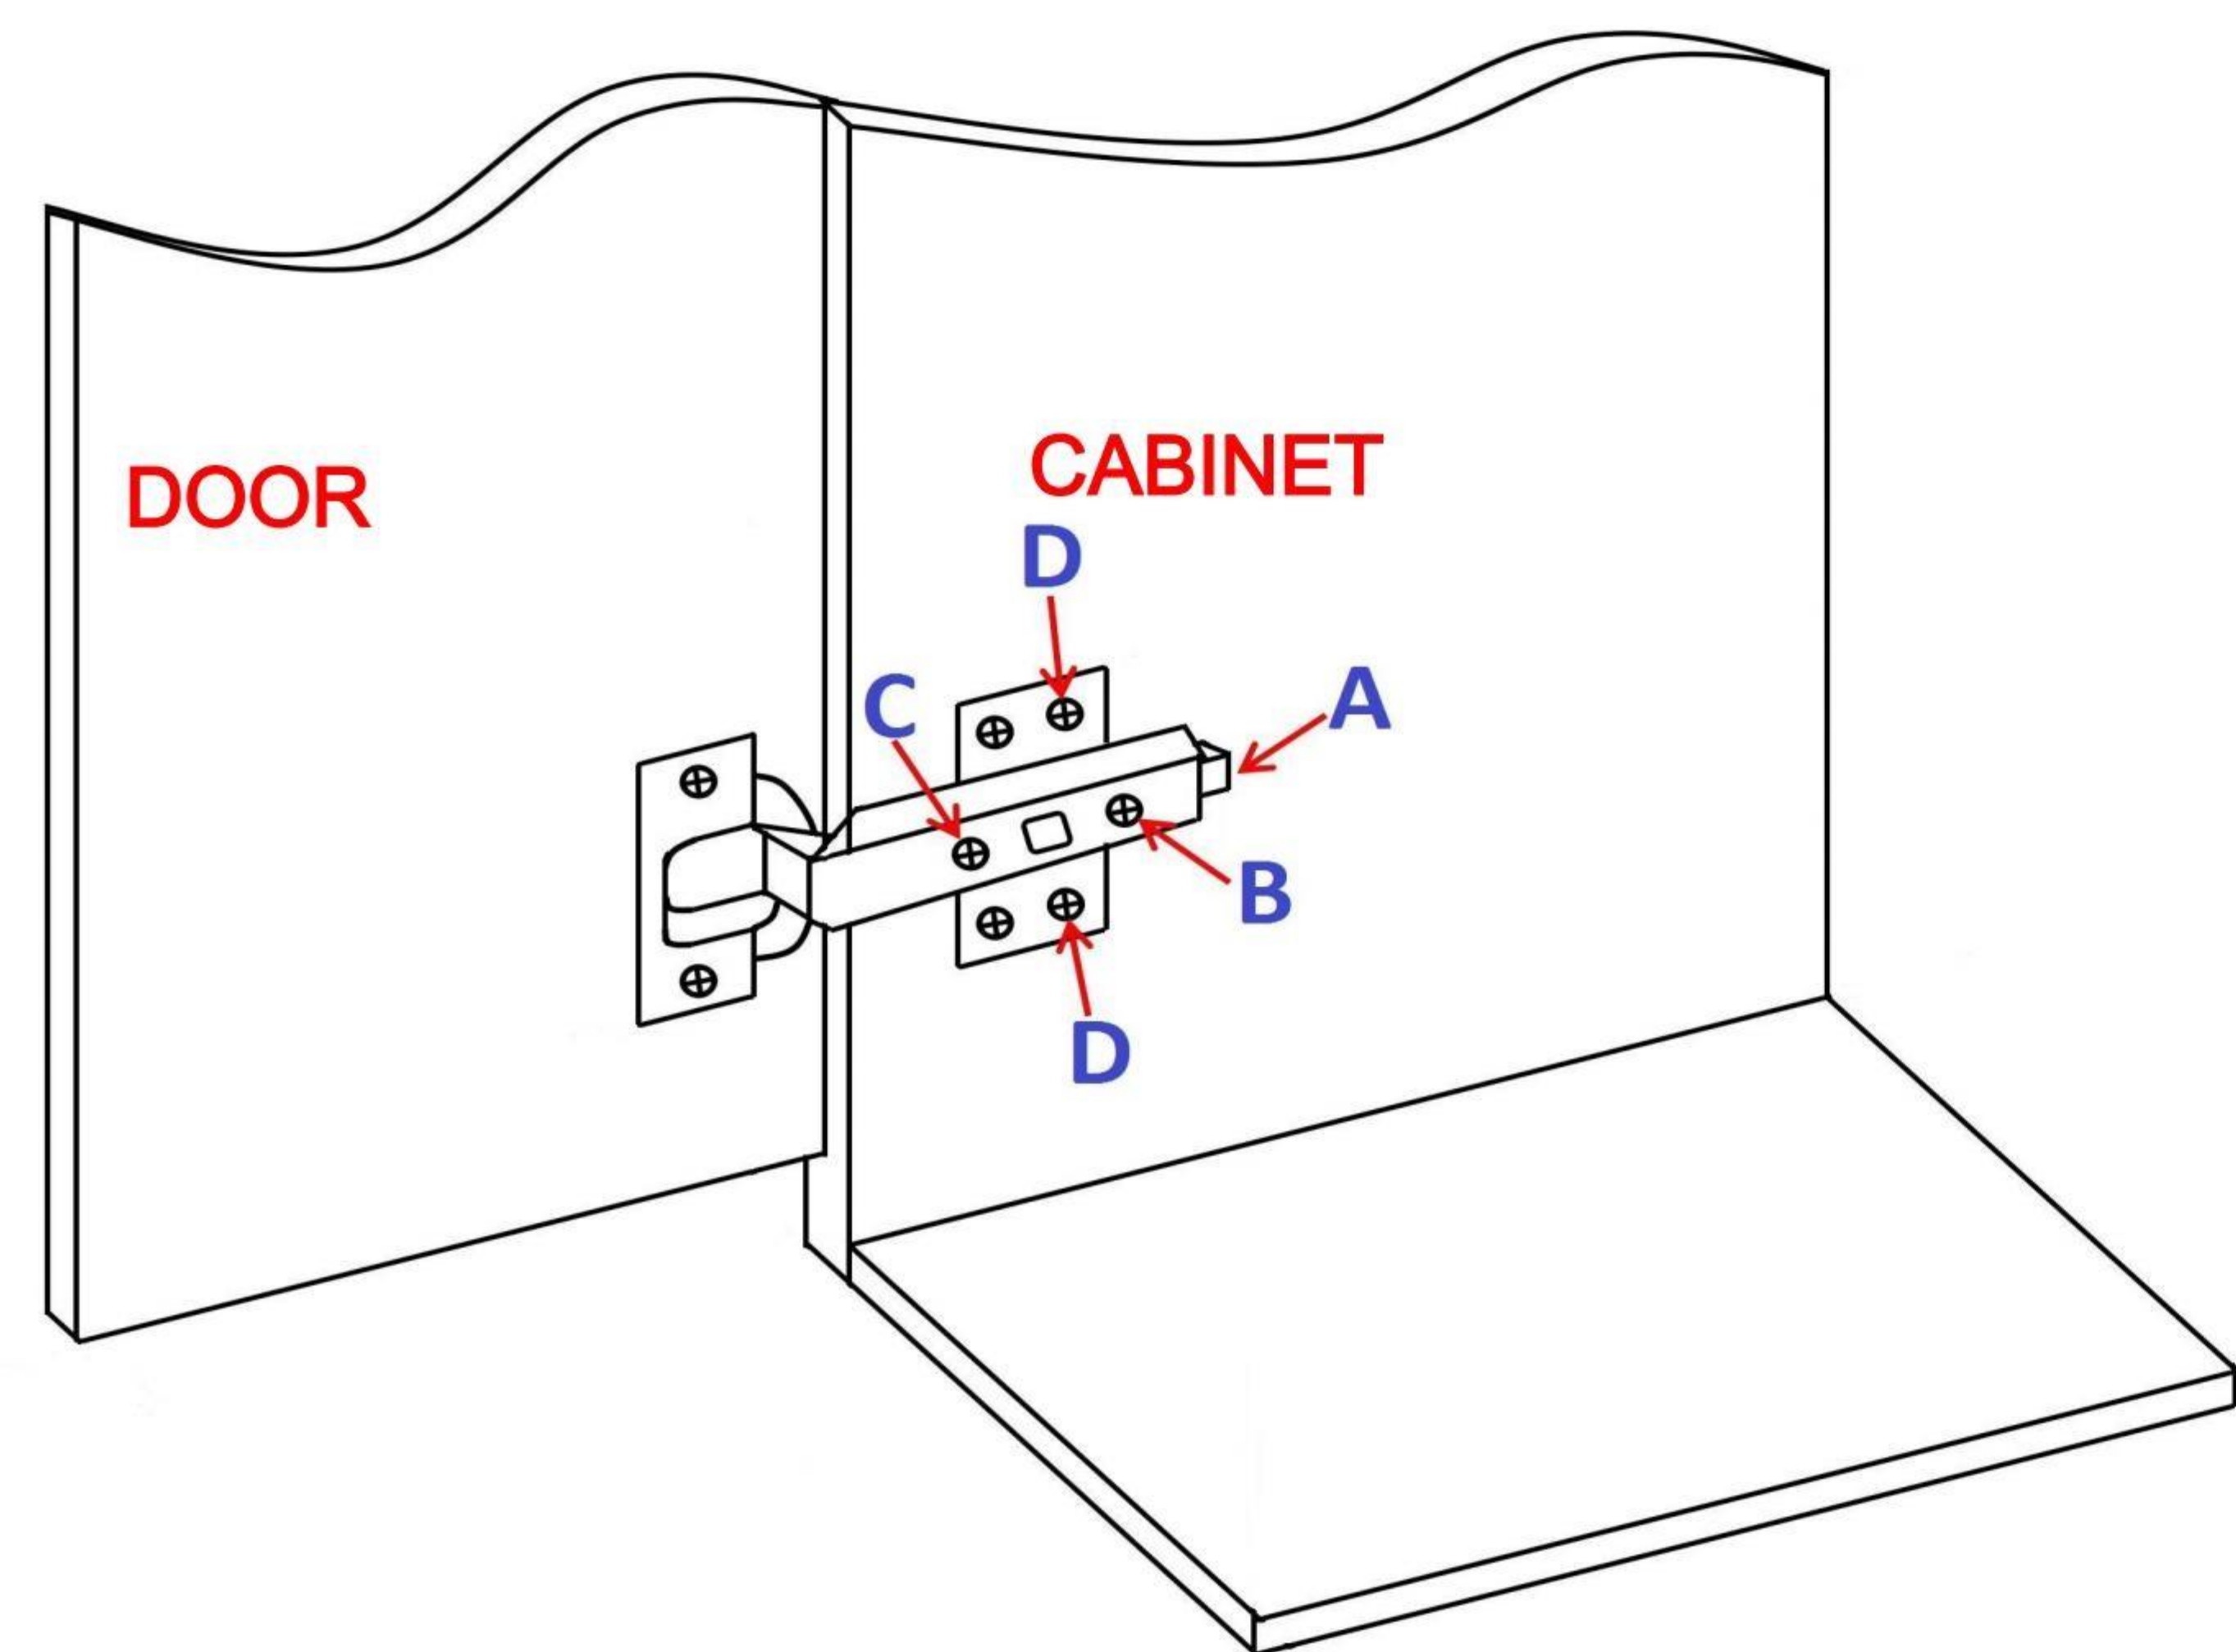


LEGS ASSEMBLY INSTRUCTION


1. Turn the cabinet upside down to make sure the leg screw holes

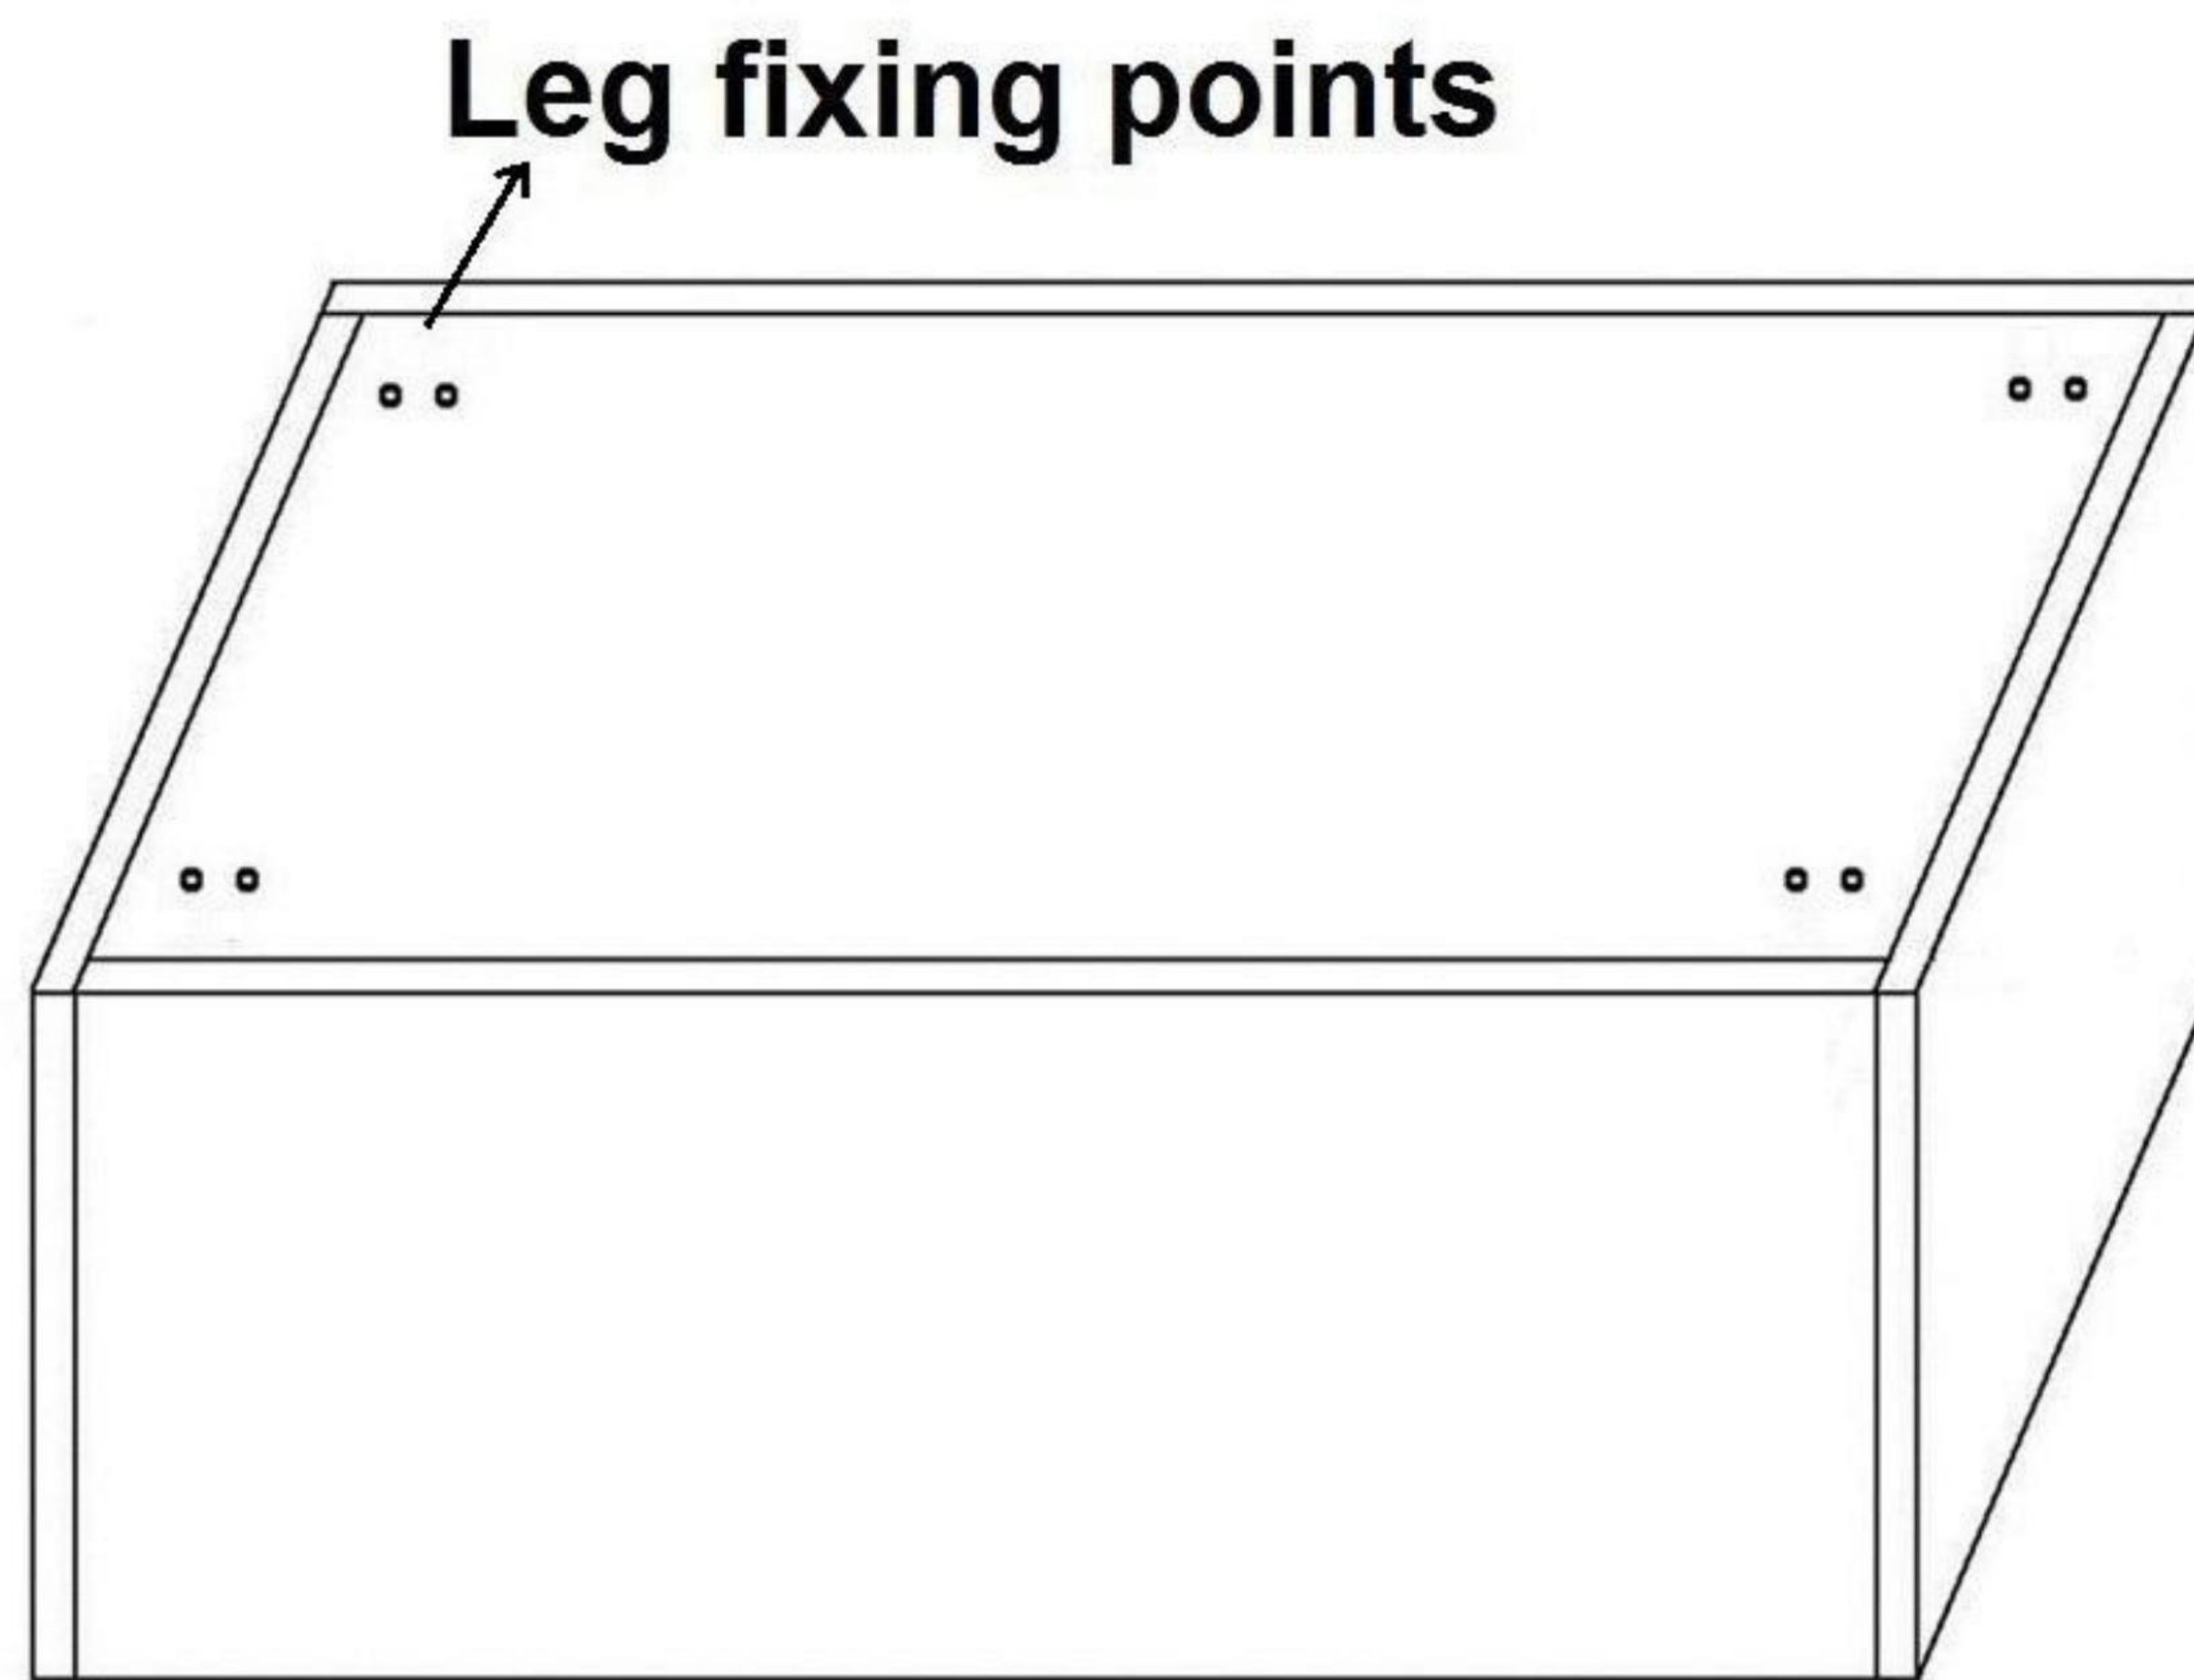

2. Install the legs on the bottom panel

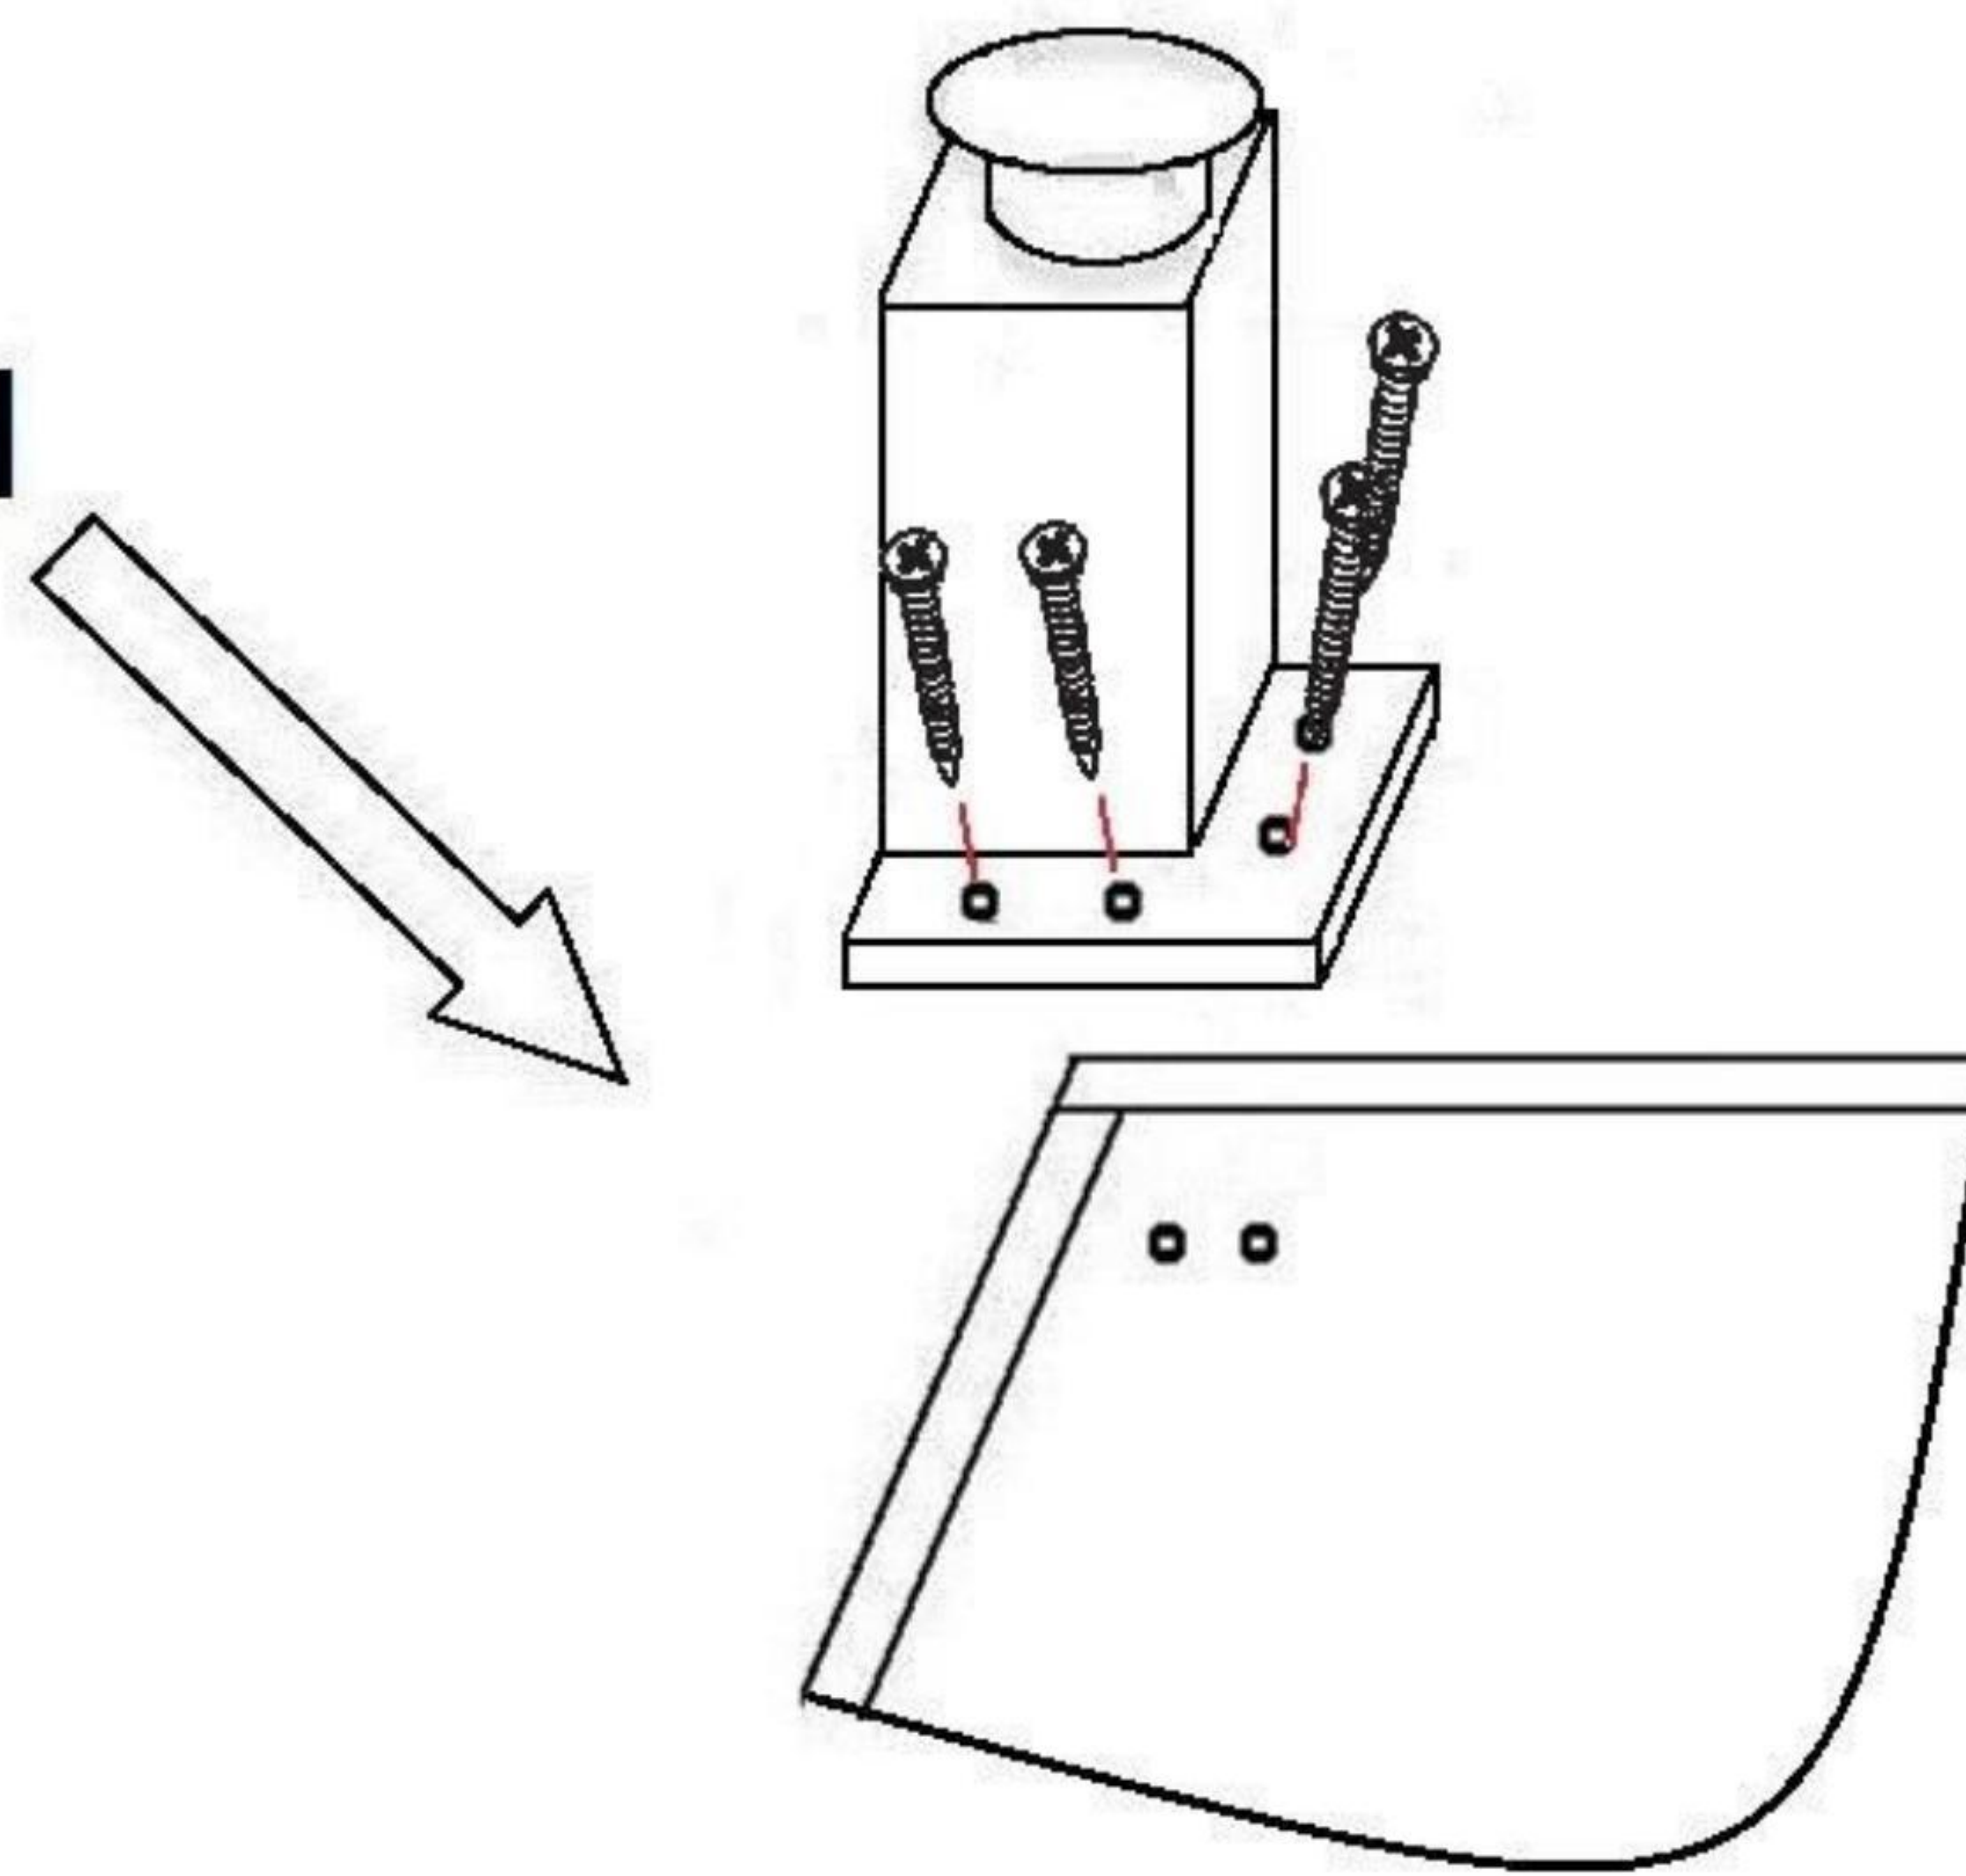


3. To adjust the plastic of legs to required length

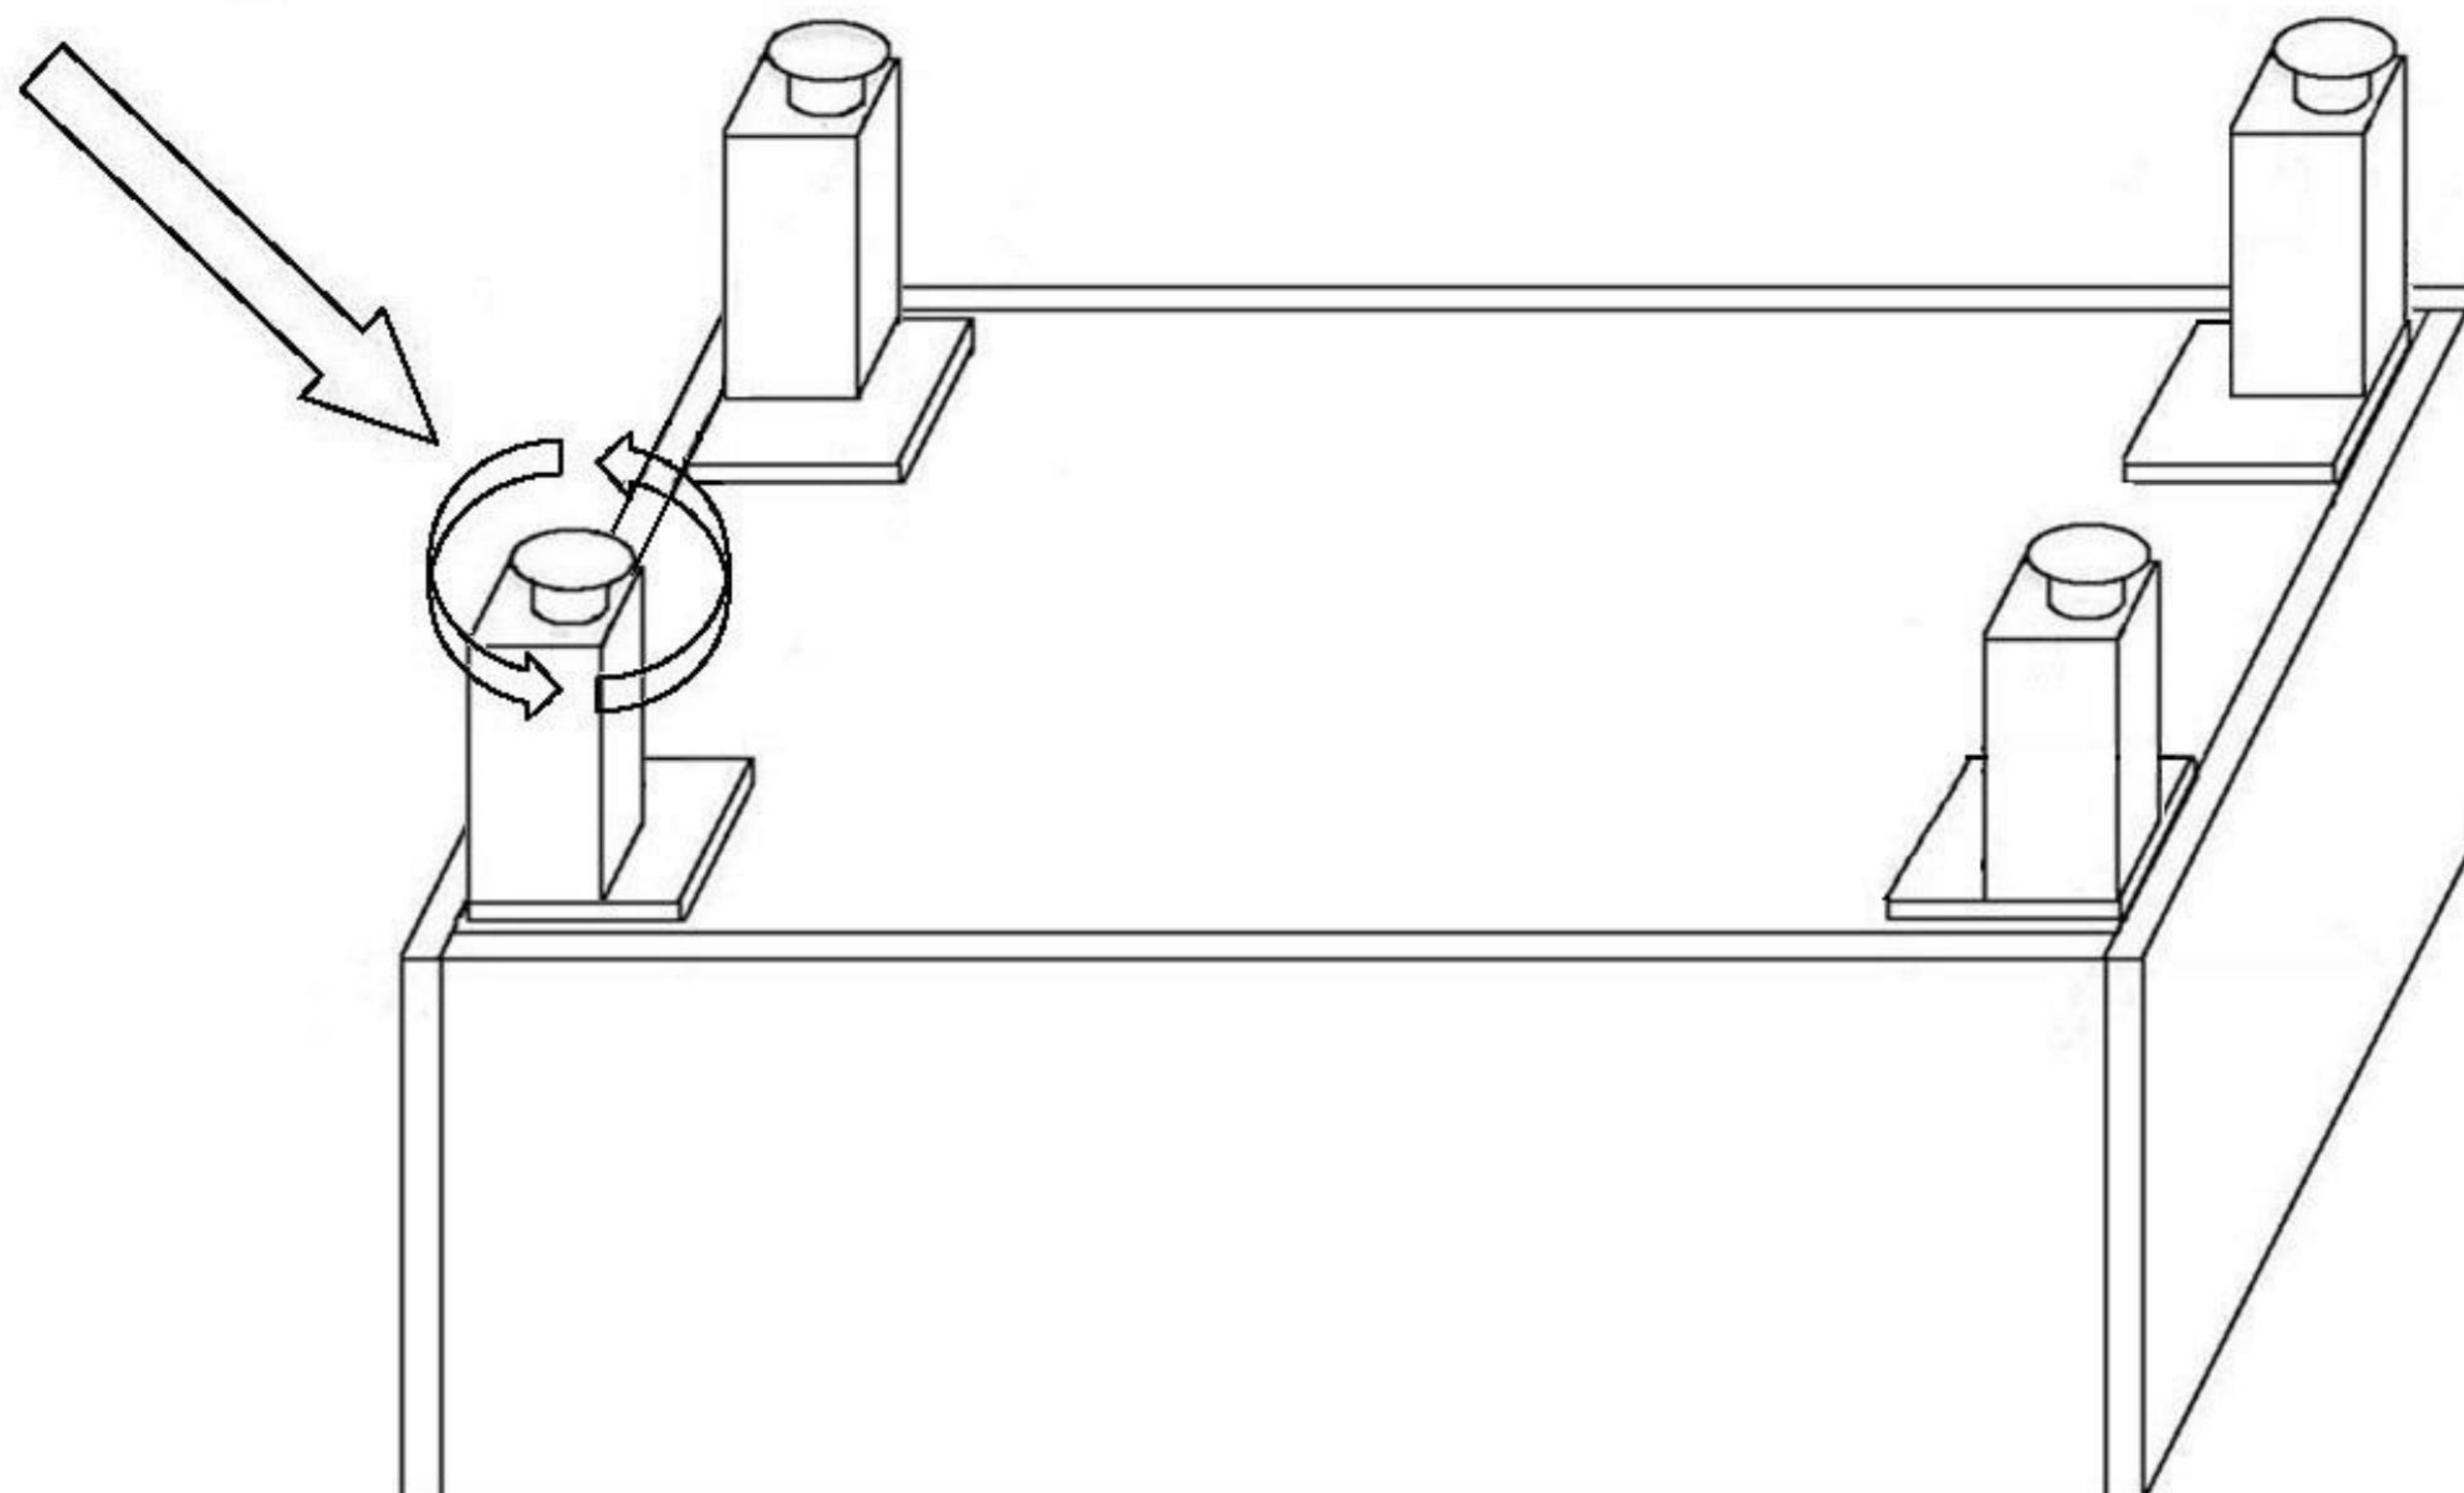

4. Finish and turn the cabinet back

FLATPACK KICKER ASSEMBLY INSTRUCTIONS

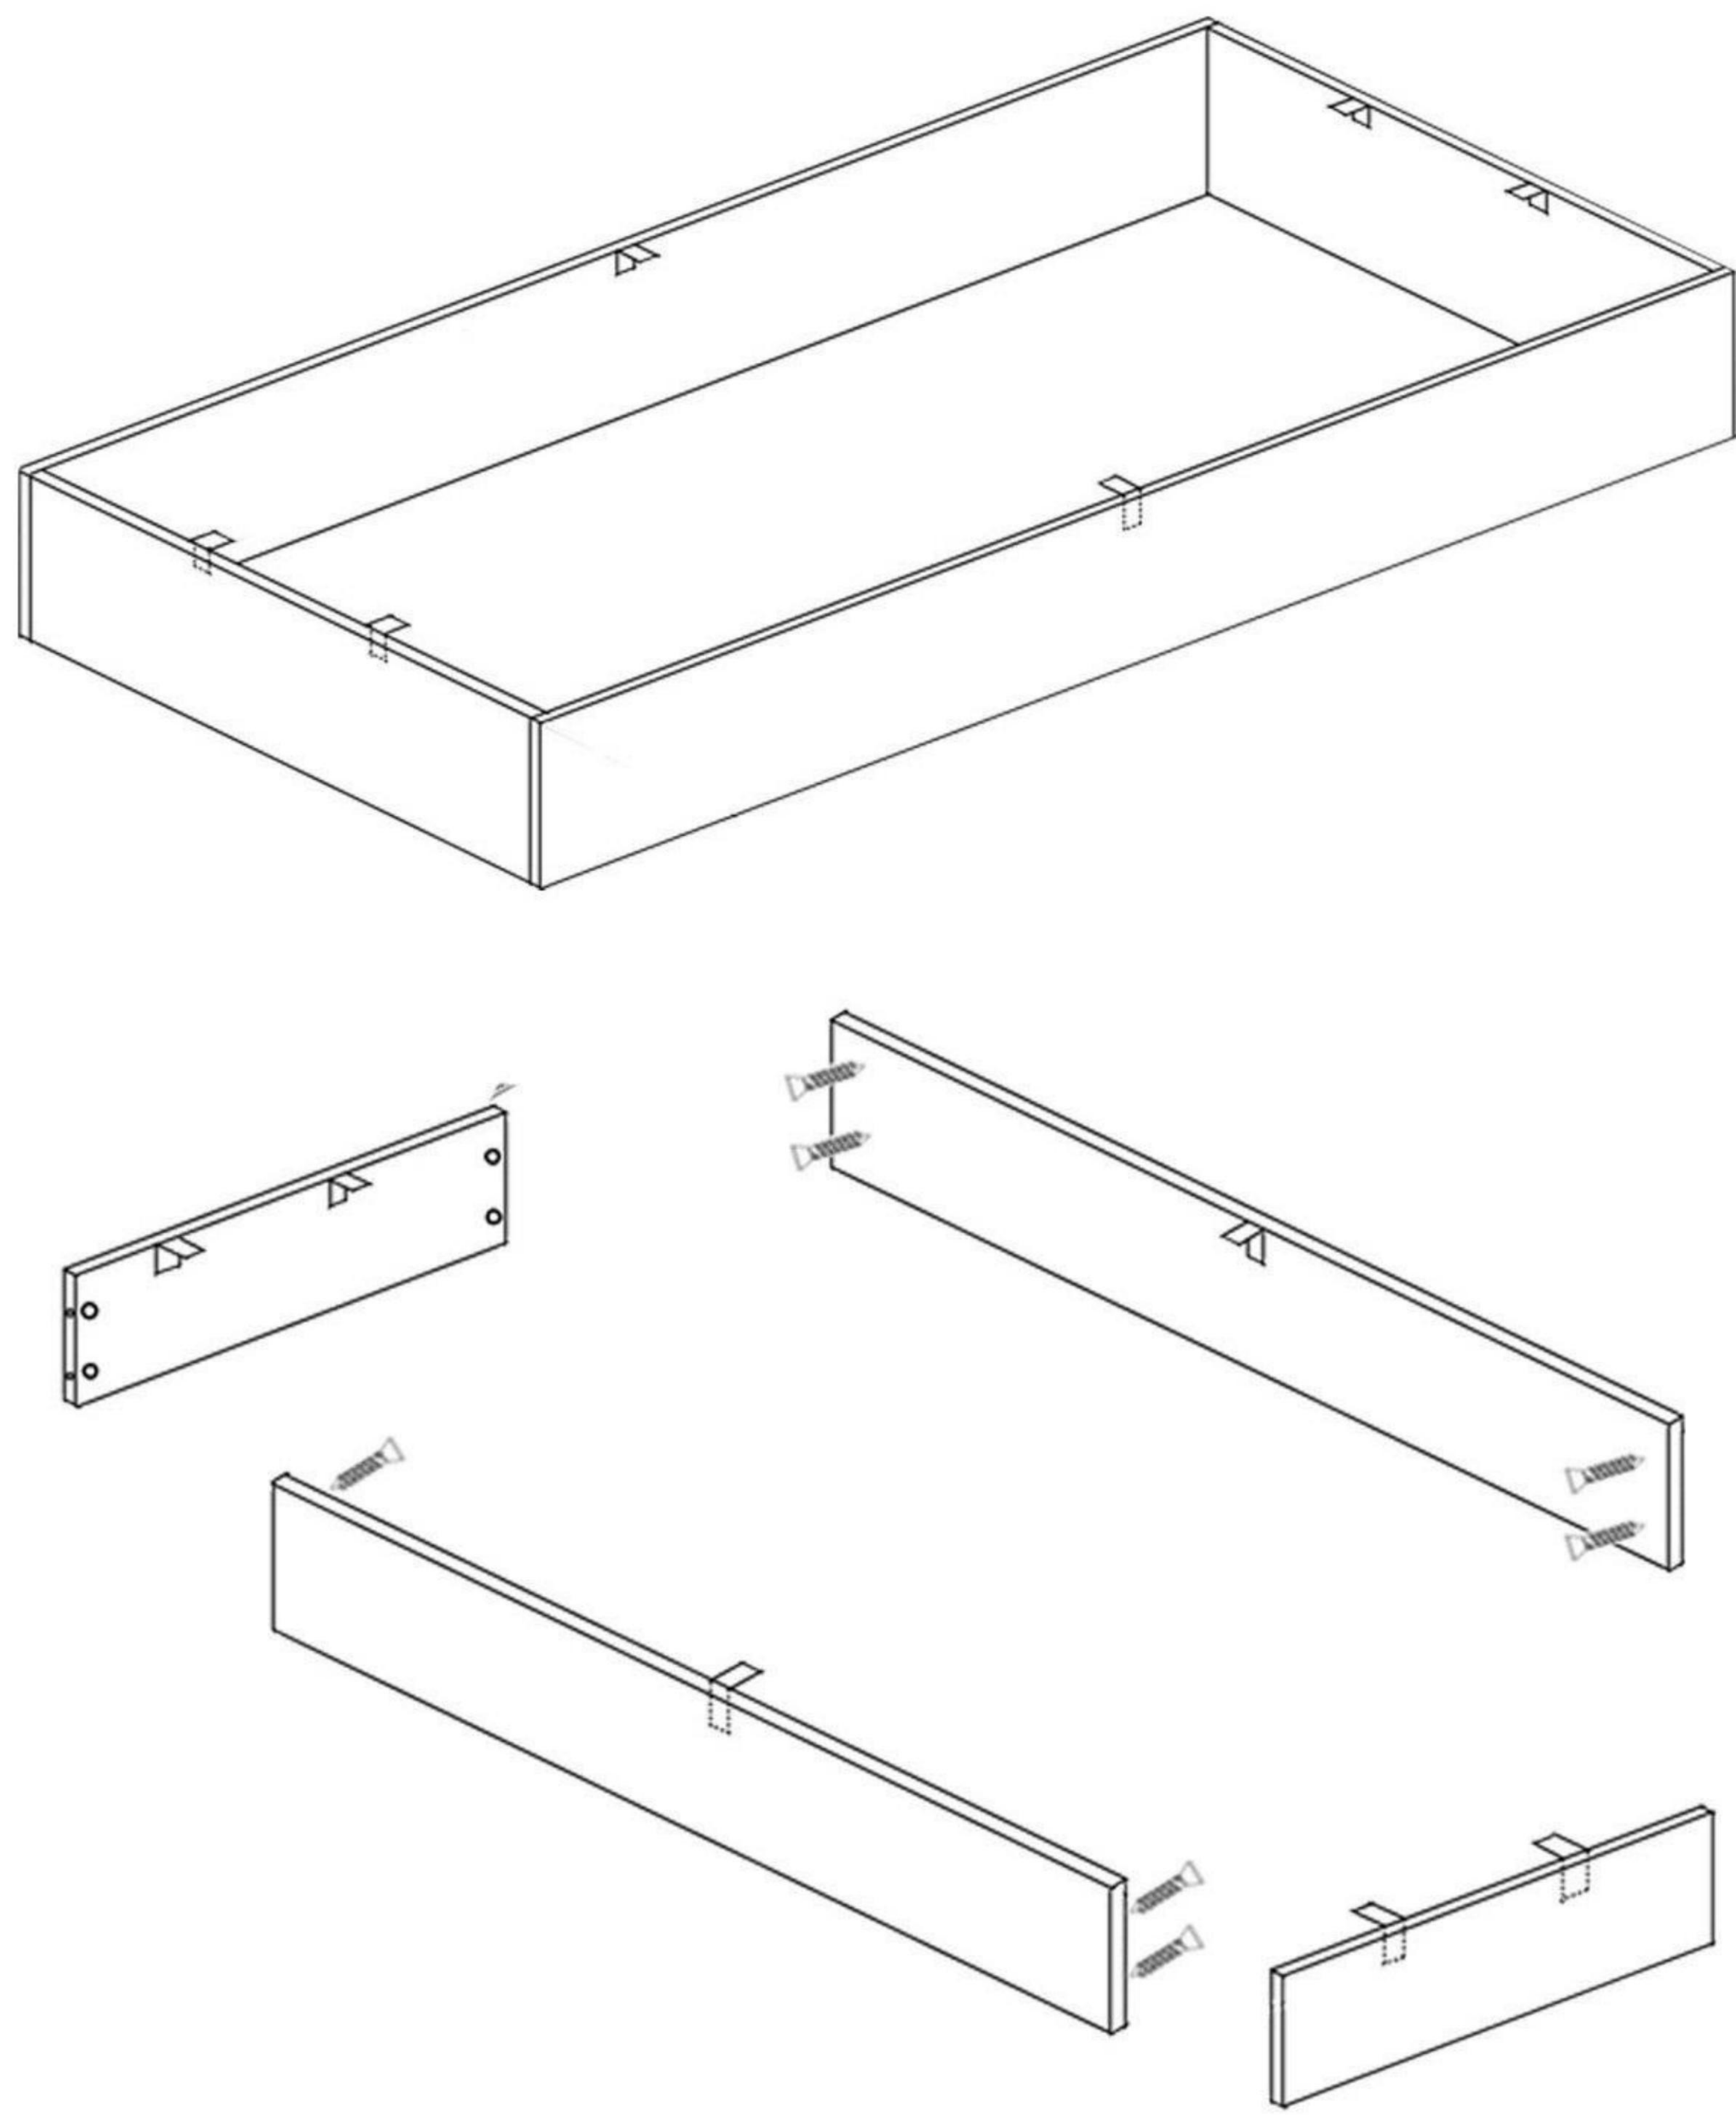


* INSERT ALL PINS AND PLUGS AS ILLUSTRATED




* CONNECT THE SIDE PANELS TO THE FRONT PANEL

* TO TIGHTEN THE LOCKS TURN WITH A PHILLIPS SCREWDRIVER CLOCKWISE

* CONNECT THE BACK PANEL TO THE ASSEMBLY

* TO ATTACH THE KICKER TO YOUR VANITY WITH THE CORNER BRACKET, REMOVE THE METAL LEG PLATES ON YOUR CABINET AND SCREW IN PLACE THE KICKER USING THE GUIDE HOLES AND SCREWS PROVIDED

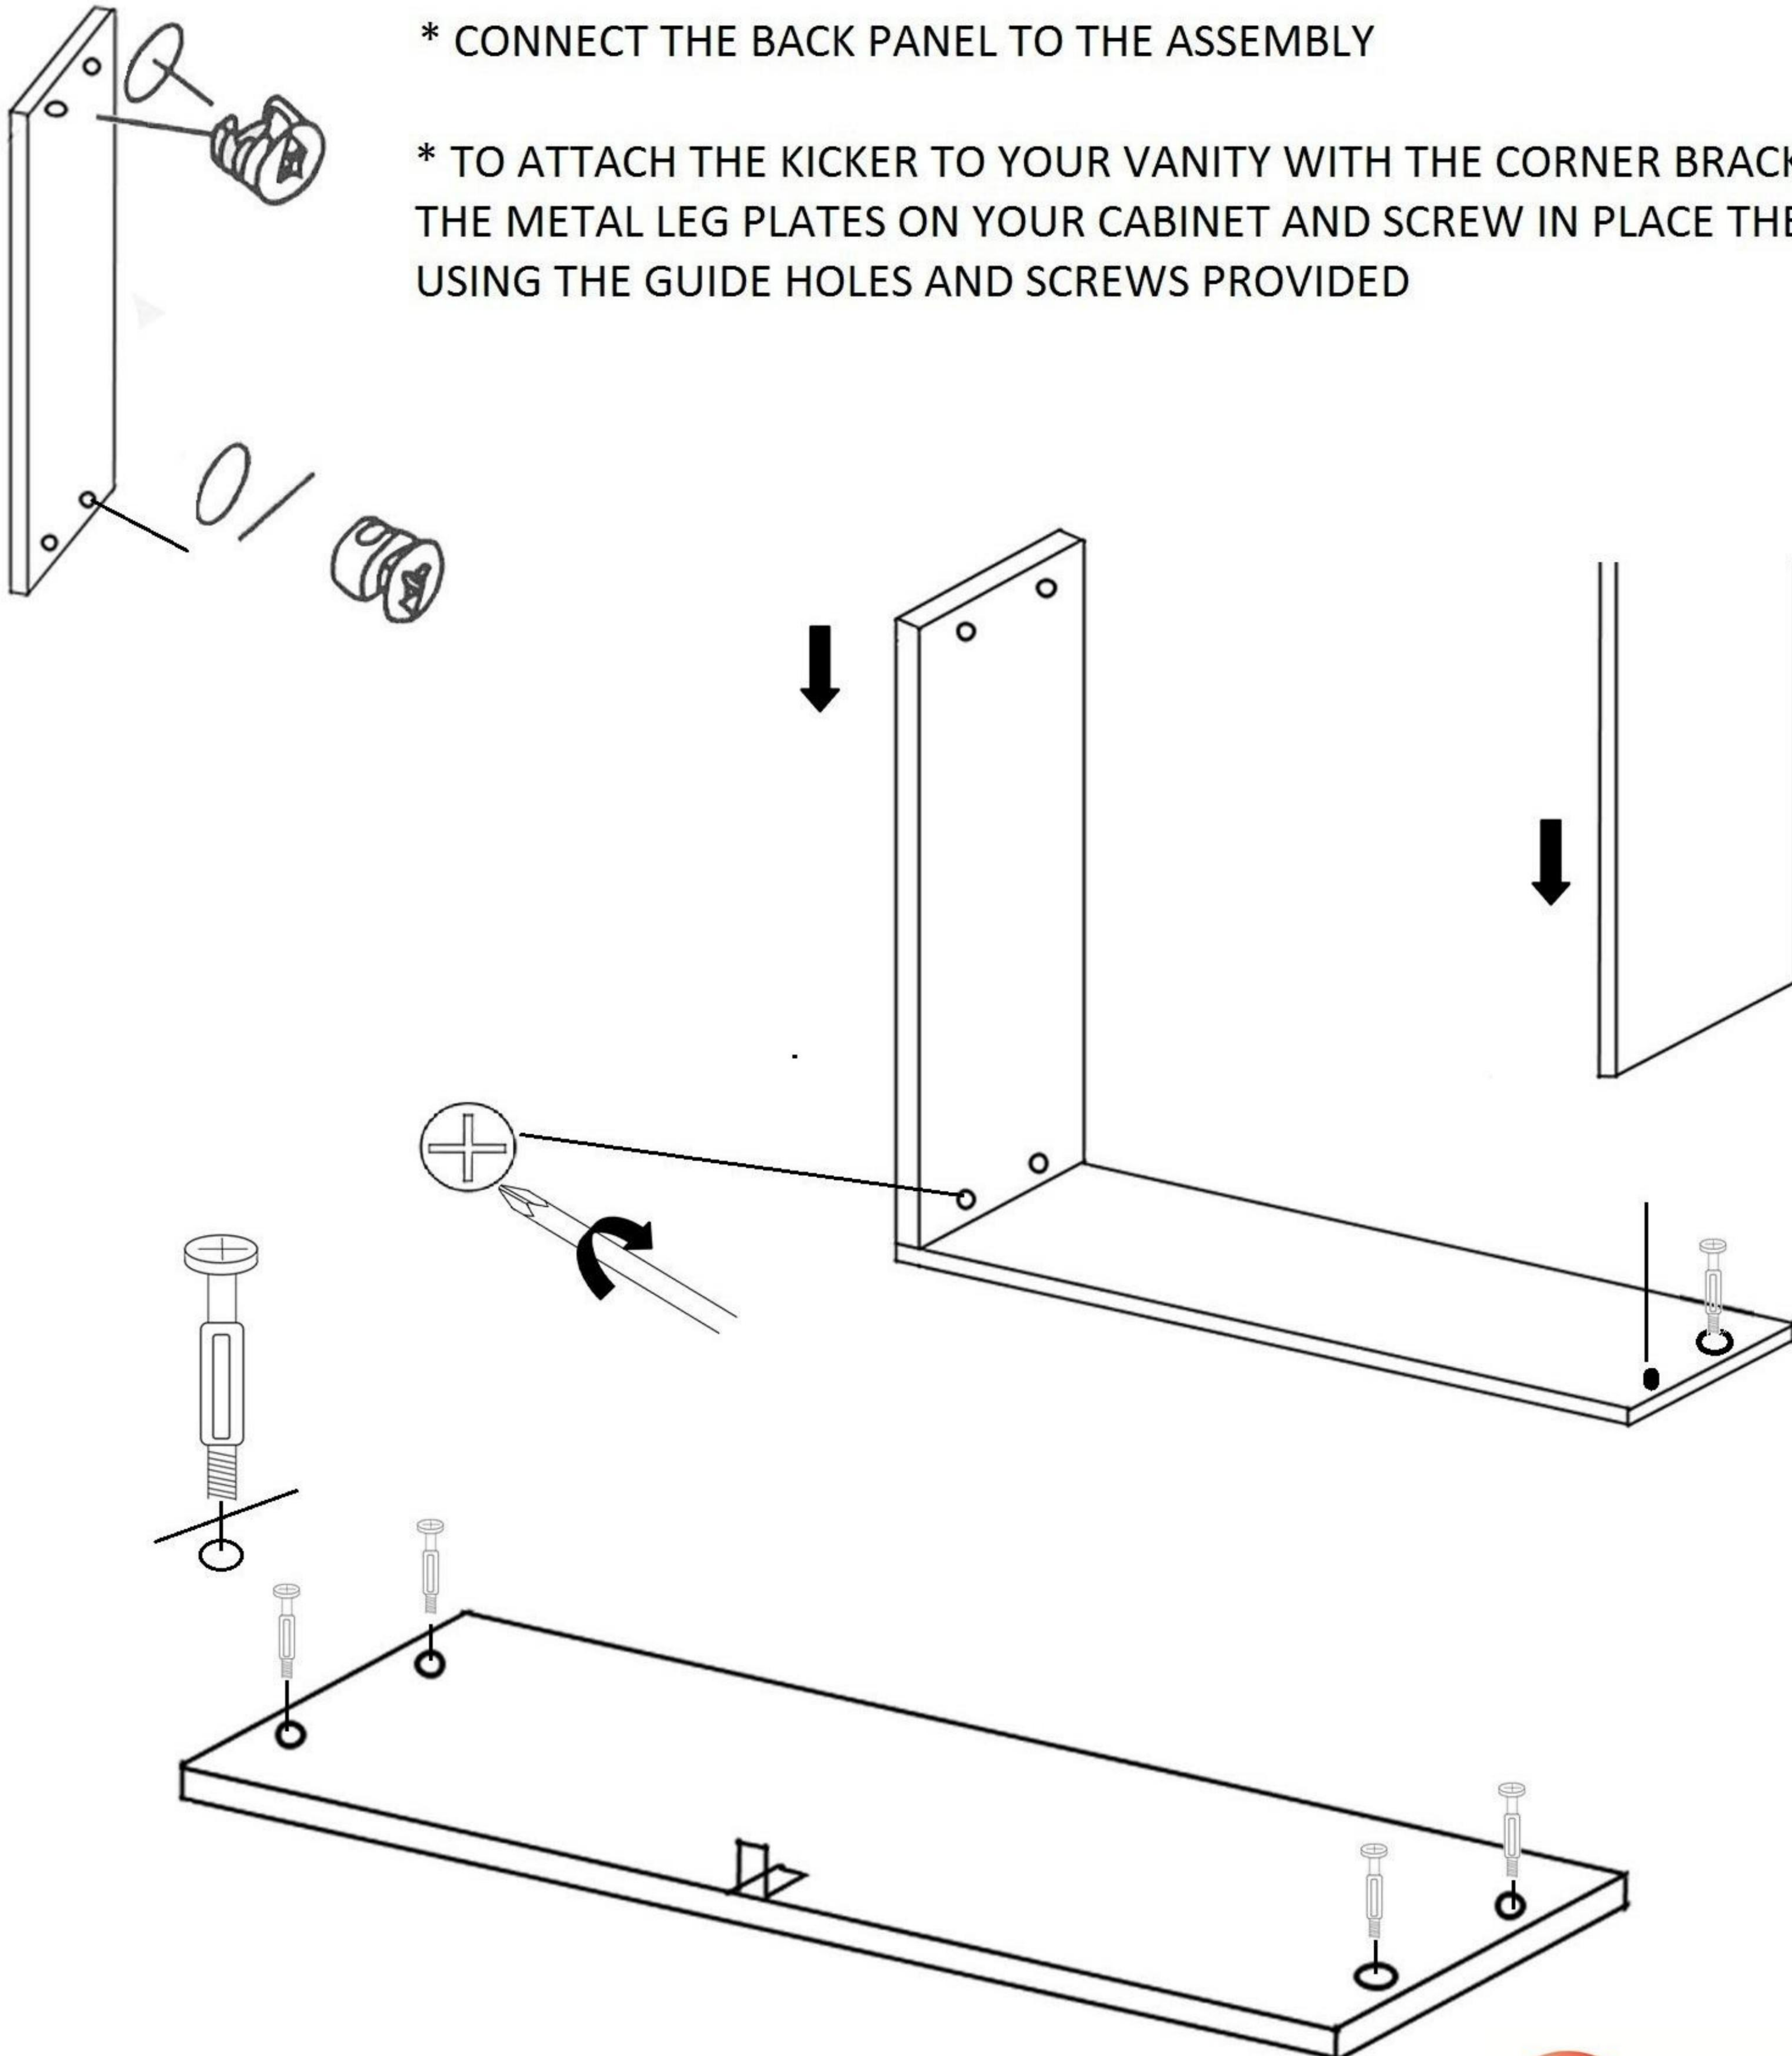

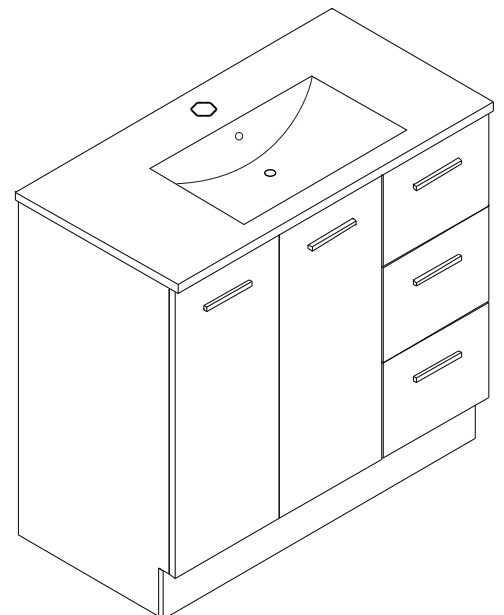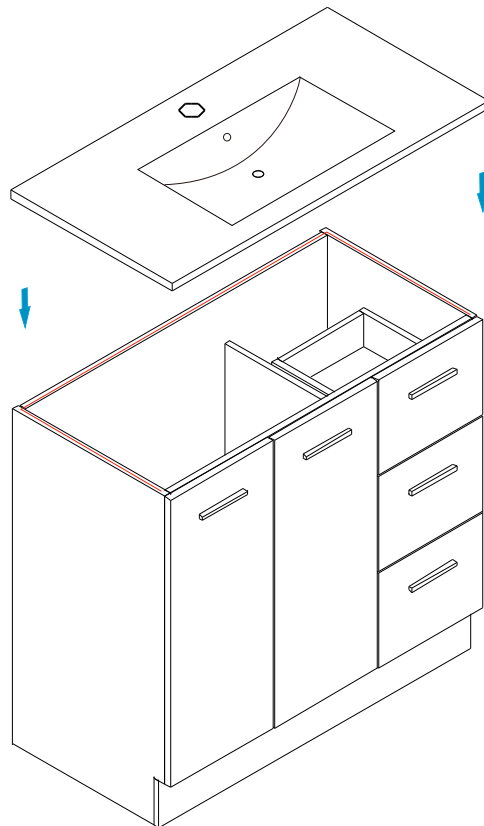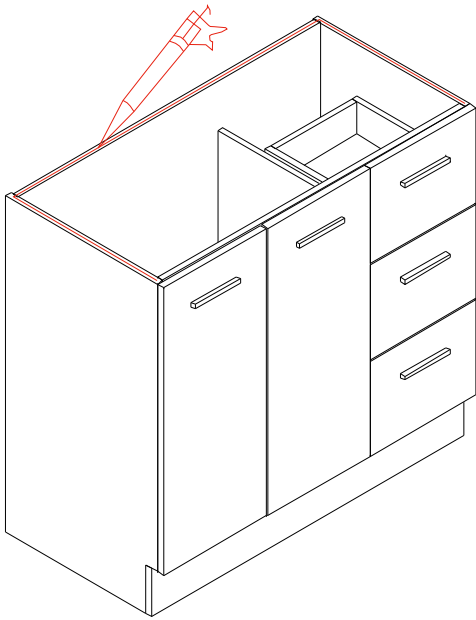

Please turn top upside down,make sure clean edge before you glue down.

Please use silicon clear or white,then press down onto cabinet.