

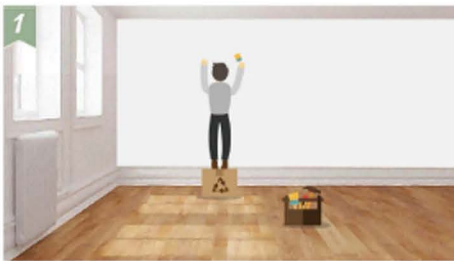


Install Self-adhesive Wall Mural

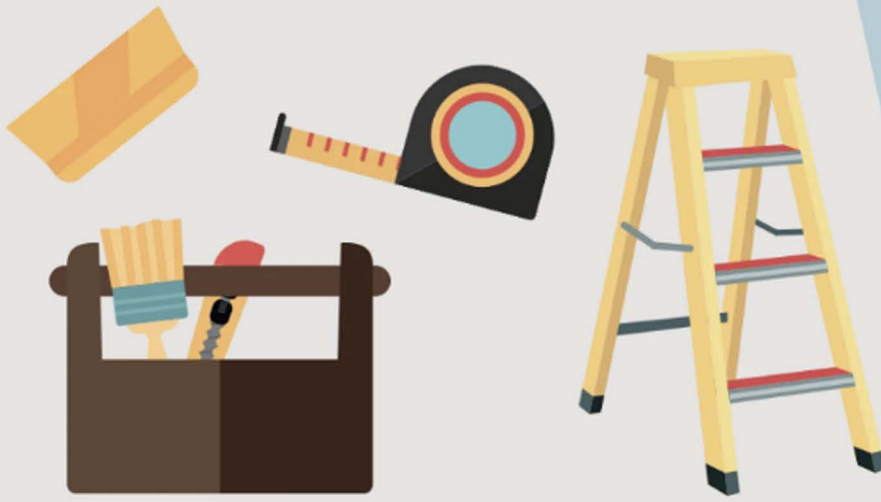

A clean and dry wall will help the adhesive from your wall mural to keep its stickiness. Put all panels on the ground, check the order. Measure and write down the dimensions of each panel. Mark vertical guidelines according to the panel's dimensions. Leave 2cm overlap between panels.

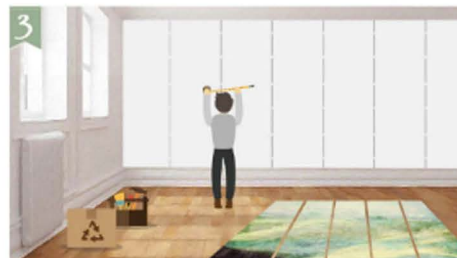

Align panel 2 to panel 1. Simply match the pattern of the mural (with 2cm overlap). No need to cut. Repeat for additional panels. Trim any ceiling and baseboard overage, it's better to wipe the mural's surface with a wet cloth after the installation. Because it will make more sticky.

Perfect!
All done.



Watch the easy installation video at: <https://vimeo.com/808524918>