

Tail Assist

INSTALLATION INSTRUCTIONS VW AMAROK SLOW DOWN EASY UP STRUTS
PART NUMBER: A12



INSTALLATION INSTRUCTIONS VW AMAROK SLOW DOWN EASY UP STRUTS
PART NUMBER: A12



1 x Down strut

1 x Up Strut

Tail Assist Assist


INSTALLATION INSTRUCTIONS VW AMAROK SLOW DOWN EASY UP STRUTS PART NUMBER: A12



Fitting to slow down strut

1: On the **DRIVERS SIDE** Remove the bolt nearest to the body

2: Place the bracket as shown and replace the bolt and tighten

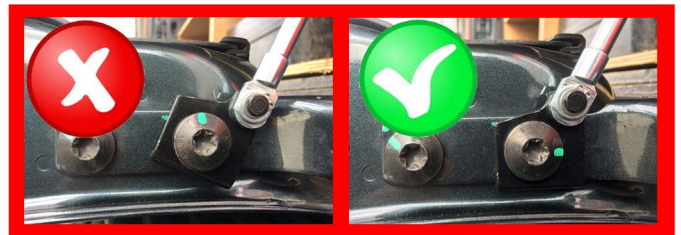

3: Remove the bolt that holds the cable

4: Replace with the pre assembled strut, making sure the factory washer & cable are replaced first

Duplicate the procedure on the passenger side for the easy lift strut

5: Once the lift strut is installed let the tailgate down and remove the aluminium spacer

