

# Tail Assist

INSTALLATION INSTRUCTIONS FORD RANGER SLOW DOWN EASY UP STRUTS  
PART NUMBER: **B12**



## INSTALLATION INSTRUCTIONS FORD PX RANGER SLOW DOWN EASY UP STRUTS PART NUMBER: **312**

### KIT CONTENTS

- 1 X UP STRUT
- 1 X DOWN STRUT
- 2 X CABLE GUIDE RUBBERS




UP STRUT

DOWN STRUT

GUIDE RUBBERS

## INSTALLATION INSTRUCTIONS PX RANGER SLOW DOWN EASY UP PART NUMBER: **B12**

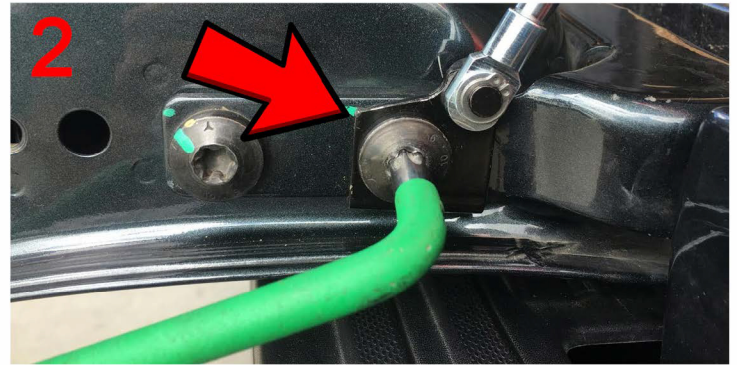

Fitting to slow down strut

1: On the **DRIVERS SIDE** Remove the bolt nearest to the body

2: Place the bracket as shown and replace the bolt and tighten



3: Remove the bolt that holds the cable

4: Replace with the pre assembled strut, making sure the cable is replaced first

Duplicate the procedure on the passenger side for the easy lift strut

5: Once the lift strut is installed let the tailgate down and remove the aluminium spacer



INSTALLATION INSTRUCTIONS FORD RANGER SLOW DOWN EASY UP STRUTS  
PART NUMBER: **312**

**6**



6: Install the cable locating rubber on the tailgate as pictured

**HSP Ute Lids**

**40 Overseas Drive, Noble Park Nth, VIC 3174**

**Phone: 1300 441 498**

**[www.hsputelids.com](http://www.hsputelids.com)**