



FULL-BODY ZERO GRAVITY MASSAGE CHAIR

MODEL: MASCHR-HOR-BK



USER MANUAL

Please read this user manual carefully before using the product.

Due to continuous quality improvements, the specifications and part names in this manual may be different from the actual product.

WARRANTY

Three year limited warranty for manufacturing defects

1. This product carries a three-year warranty that covers all manufacturing defects. The warranty is effective from the date of purchase. It is important that you keep your invoice/receipt as without it, we will not be able to process your warranty claims. This warranty and all financial responsibility thereof are limited to the product itself.
2. Manufacturing defects include circumstances where the product has broken down under normal and proper use. Please use the product safely and only for the purpose of which it is intended. Improper use may result in injury or damage to other property. Do not allow children to play or climb on the product.
3. This warranty is effective only when the product has been used as recommended and is purchased from an authorised dealer/vendor. The warranty only covers products that are purchased in new condition. Proper use means using this product on a level surface with an equal distribution of weight. In the event that the product was not used properly or abused by the customer/user, this warranty will be null and void. This warranty does not constitute an agreement to replace other parts.
4. If the product fails due to manufacturing defects, the manufacturer will, at its discretion, repair or replace the product. The manufacturer reserves the right to substitute comparable materials or models and does not guarantee that the replacement will be exactly the same model.
5. In the event that the product needs to be inspected by the manufacturer to determine warranty claims, all transportation or shipment costs will be borne by the customer.

CONTENTS

SAFETY PRECAUTIONS	1
USER PRECAUTIONS	2
COMPONENTS	3
SET-UP INSTRUCTIONS	4
PLACEMENT OF MASSAGE CHAIR	5
TRANSPORTING THE MASSAGE CHAIR	5
MASSAGE CHAIR FEATURES	6
CONTROLLER FUNCTIONS	7
OPERATING INSTRUCTIONS	8
TROUBLESHOOTING	9
PRODUCT SPECIFICATIONS	10
WARRANTY	11

PLEASE RETAIN THIS USER MANUAL FOR FUTURE REFERENCE

SAFETY PRECAUTIONS

Basic safety precautions should always be followed when using an electrical product, including the following:

- To reduce the risk of an electric shock, always unplug this product from the mains outlet after using and before cleaning.
- Always insert the power plug all the way into the mains outlet to reduce the risk of short circuit and fire.
- The product should never be left unattended when plugged in. Always unplug the product when not in use.
- Only use the product for the purpose described in this user manual.
- Do not stand on the product.
- Always return the seat to the upright position and make sure that the leg rest is completely retracted. Be careful that nothing is obstructing the leg rest while retracting. Keep children away from the leg rest.
- Never operate the product if it has a damaged cord or plug. Return the product to the vendor if the product is not working properly, has been dropped or damaged, or if it has been immersed in water.
- Keep the power cord away from any heated surface. Do not drag the product by the power cord.
- Never block the air openings during operation and make sure that all air openings are kept free of lint and hair. Do not drop or insert anything into any of the openings of the product.
- Do not use the product on top of heating appliances, such as electric carpets. Do not operate the unit under a blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- Do not use the product in bathrooms or other damp or humid places as this may cause electric shock or product malfunction. Do not spill water on the controller.
- Do not use the product outdoors.
- Do not use or operate where aerosol spray products are being used or where oxygen is administered.
- When unplugging the product, turn off all controls before removing the plug from the mains outlet.
- Do not use the product with a transformer as this may lead to malfunction or electric shock.

PRODUCT SPECIFICATIONS

MODEL	MASCHR-HOR-BK
DESCRIPTION	Full-body Zero Gravity Massage Chair
VOLTAGE	AC220-240V,50Hz
POWER	100W
RATED TIME	15 minutes
SAFETY GRADE	I Class
GROSS WEIGHT	74kg
NETT WEIGHT	63kg
PACK GE DIMENSIONS	118cm x 76cm x 105cm

TROUBLESHOOTING

PROBLEMS	CAUSES AND SOLUTIONS
The massage chair does not turn on. The controller does not work and /or has a blank display.	Ensure that the chair is plugged in and the power switch is in the 'ON' position. Check and see if the power cord has been damaged. Check the fuse and replace if required.
The massage chair stops working suddenly.	The set time has been reached. The massage chair has overheated and has automatically shut down to protect the motor. Turn off power for 30mins and then re-start power again. The massage chair may have a damaged fuse. Replace if required.
Abnormal or loud noise coming from the massage chair.	There is an mechanical malfunction. Consult qualified service personnel.



For any issues or problems not listed above, please contact our Customer Service immediately. Never attempt to repair the product on your own.

If smoke or abnormal odours are noticed during the use of the product, please turn off the power of the product immediately and contact Customer Service.

USER PRECAUTIONS

- This product is not suitable for use for persons with any of the conditions listed below, or who are undergoing medical treatment or suffer from medical conditions. They should consult with their physicians before using the product.
 - a) Pregnant women, people who are ill, or in poor physical shape.
 - b) People suffering from back, neck, shoulder or hip pain.
 - c) People who are using a pacemaker, defibrillator, or other personal medical devices that are prone to electronic interference.
 - d) People suffering from heart disease.
 - e) People who are prohibited from receiving massages by a physician due to thrombosis or aneurism, acute varicose veins, or other circulatory disorders.
 - f) People with irregular curvatures of the spine.
 - g) People who has a loss of heat sensation.
- This product should not be used by children.
- Sit down slowly on the massage chair after checking the position of the massage heads. Never put any part of your body between the massage heads as the squeezing action of the massage heads may cause injury.
- Never put your fingers or feet in the gap between the backrest and seat, the backrest and armrest, the seat and cover under the armrest, or the gap beneath the leg rest. Do not place fingers or any part of your body in the mechanism under the leg rest.
- Do not use the product against bare skin. While thin clothing may increase the effectiveness, exposing the skin directly to the massager may irritate the skin.
- Do not use the product while wearing anything hard on your head, such as a hair accessory. Do not use the product for massaging the head, abdomen, front neck, elbows or knees. Do not use excessively strong massage action on back of the neck.
- When using the body scanning function, always ensure that the shoulder position is correct. If the shoulder position is incorrect, use the POSITION button to adjust it properly, or stop the massage function and re-try the body scanning function. You can adjust the shoulder position in this way in the Auto program and manual operation. Failure to align the shoulder position correctly can lead to injury.
- If the massaging pressure is too strong when in use, the movement of the massage heads can be stopped at any time by pressing the Stop button.
- Do not go to sleep while using the massage function.
- Do not use the product after consuming alcohol.
- When the backrest is in an reclined position, do not sit or sit with your legs resting on the headrest. Do not sit on the leg rest as the product may tip over.
- Do not allow children or pets to play on and around the product, especially when the massage chair is in operation.
- Do not unplug the product or turn it off during operation. Unplug the product immediately if there is a power outage.
- Always leave the massage chair in an upright and closed position when not in use.
- Remove hard objects, such as false fingernails, wristwatches or rings, when massaging hands and feet. Empty pockets of hard objects when massaging the area of the seat or thighs.
- When Heat massage heads are used, do not let the massage heads touch the same spot for a long time. Low temperature burn may occur.

COMPONENTS

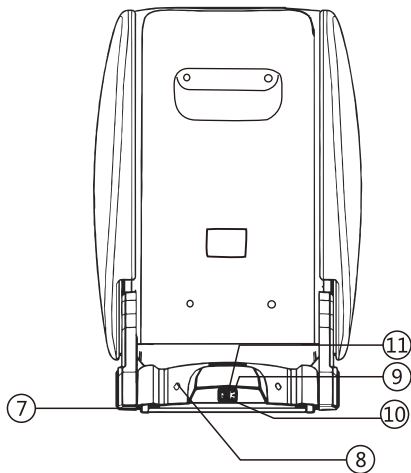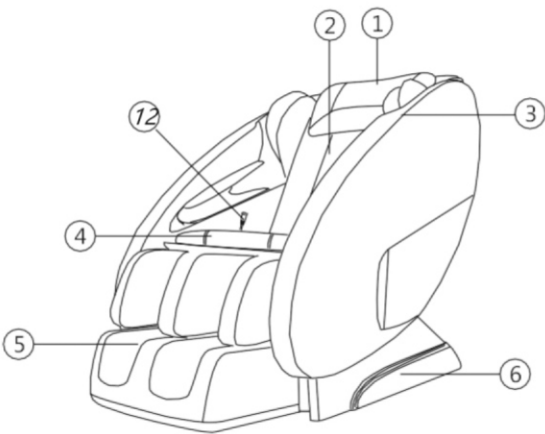

1 Headrest	5 Calf airbags	9 Power switch
2 Backrest	6 Base	10 Fuse
3 Armrest	7 Castors	11 Power cord input
4 Seat cushion	8 Power control box	12 Controller cord input

OPERATING INSTRUCTIONS

Upper back kneading
Press this button to activate or deactivate kneading.

Upper back Shiatsu
Press this button to activate or deactivate Shiatsu.

Airbag pressure
Press this button to adjust pressure of airbag massage.

Time
Press this to set timer from 5 to 30min in 5-minute intervals.

Massage intensity
Press this button to adjust intensity of kneading and Shiatsu.

Lower back kneading
Press this button to activate or deactivate kneading.

Lower back Shiatsu
Press this button to activate or deactivate Shiatsu.

Auto mode

A
Refresh

B
Relax

C
Sleep

Auto airbag
Press this button to start or stop auto/leg airbag.

Arm airbag
Press this button to start or stop arm/shoulder airbag.


Recline up/down
Press and hold to adjust reclining angle.

Power on/off
Press this button once to turn on, press again to stop or hold for 3 secs to turn off.

Zero gravity
Press this button to assume zero gravity position.

Heating
Press this button to activate/deactivate heating


CONTROLLER FUNCTIONS

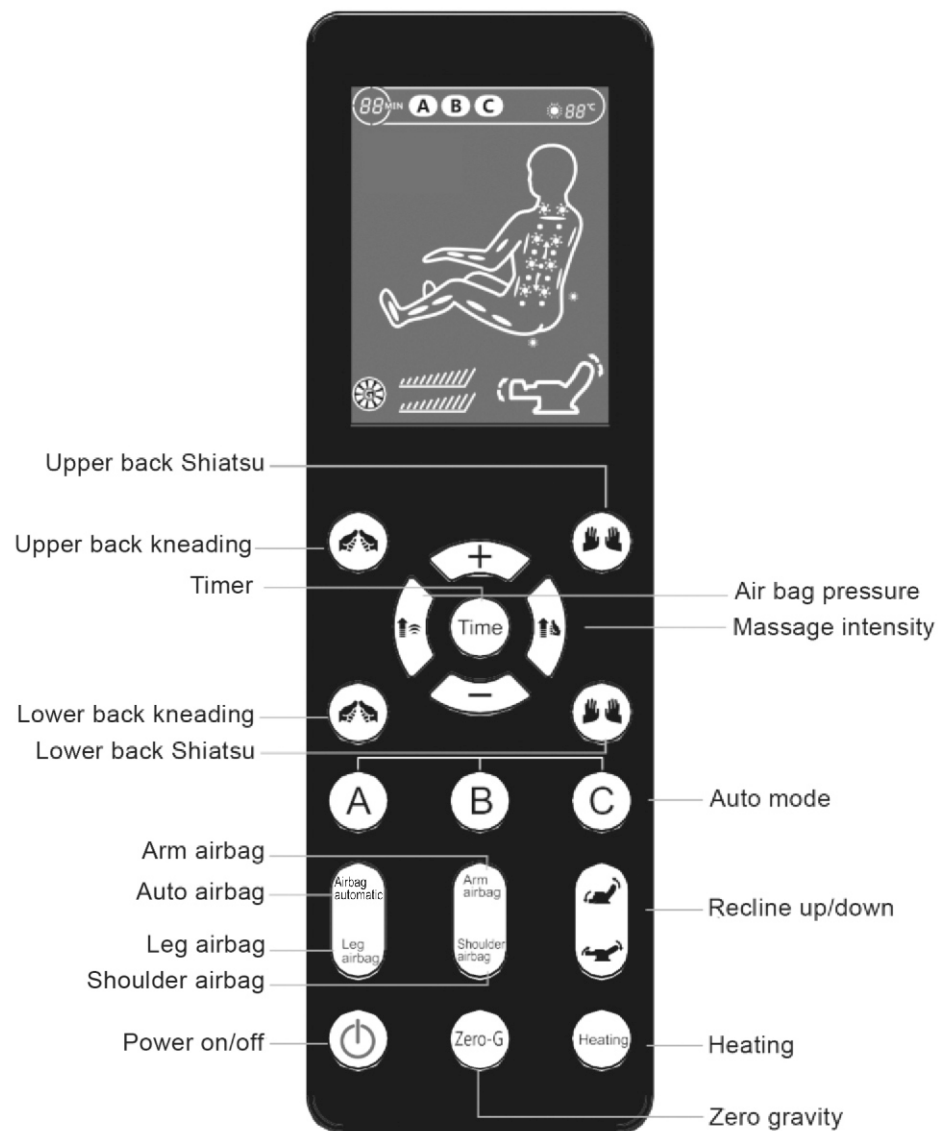

SET-UP INSTRUCTIONS


STEP 1

Carefully lift the massage chair out of the packaging and remove all shipping wrapping. It is recommended that two persons should assist in the lifting of the massage chair to avoid any personal injury or product damage.

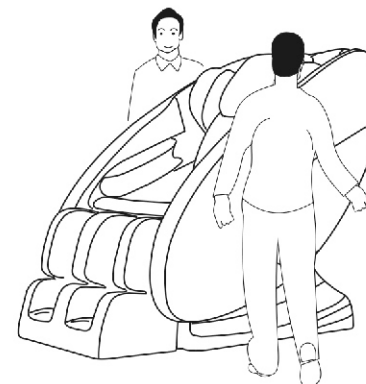


STEP 2

- Connect the controller plug into the power control box input located at the back of the massage chair (Fig. 1). Then tighten the threaded sleeve after inserting it into position.
- Next, connect the power cord to the power control box input of the massage chair (Fig. 2) before plugging the other end into the mains outlet.
- Locate the power switch (left of the fuse and power cord input) on the power control box at the back of the massage chair. Turn the switch to the ON position. At this stage, the switch indicator light should be in red to indicate that the massage chair has been powered up.

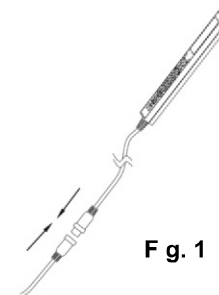


F g. 1

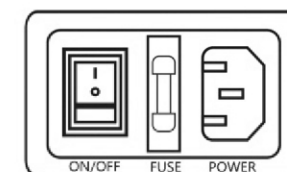

F g. 2

PLACEMENT OF MASSAGE CHAIR

- 1 When choosing a place for your massage chair, be sure to have at least 50cm of clearance both in front and behind the massage chair (Fig. 3). This will enable the massage chair to have a full range of movements when it is reclined.

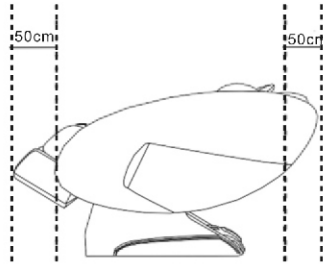

F g. 3

- 2 To prevent possible electrical leakage, do not place the massage chair in or near a damp environment, such as a bathroom.
3. As the massage chair is upholstered with faux leather, please keep the massage chair away from any heat source such as a stove, fireplace or furnace. Avoid exposing the massage chair to direct sunlight as this may cause discolouration and damage to the leather upholstery.
4. It is advisable to place the massage chair on a mat or rug to prevent damage to the floor.
5. Place the massage chair near a power socket to easy operation.

The massage chair is installed with castors for easy relocation. To move the massage chair, follow these steps:

- 1 Stand behind massage chair and push down the headrest to tilt the massage chair back to about a 30° angle to lift the front end off the ground.
2. Ensure that the foot rests are elevated from the floor at all times. Roll the massage chair on its rear castors to move or relocate to another spot.
3. It is recommended that you place a protective mat or rug under the massage chair during movement to prevent damage to the floor.

T ANSPORTATION OF MASSAGE CHAIR

