




MASCHR-4D-2GEAR-BUGR
Intelligent luxury massage chair

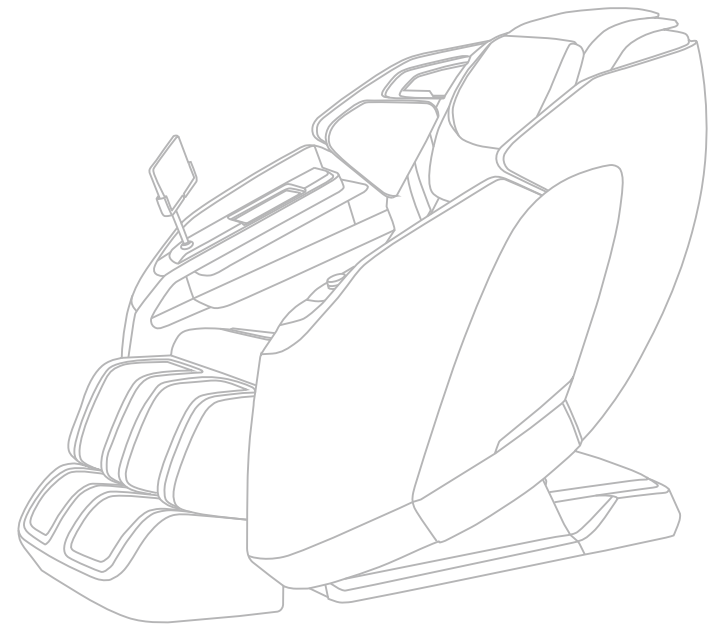

USER MANUAL

Please read this user manual carefully before using the product.

Due to continuous quality improvements, the specifications and part names in this manual may be different from the actual product.

20 Name And Content Of Hazardous Substances In This Product

Below form shows the name and content of hazardous substance in this product

Parts Name	Restricted Substances					
	Pb	Hg	Cd	Cr	PBB	PBDE
Outer Panels	○	○	○	○	○	○
Circuit Board Assembly	×	○	○	○	○	○
Metal Work	×	○	○	○	○	○
Rubber Piece	○	○	○	○	○	○
Power Cable/ Power Adapter	×	○	○	○	○	○
Inner Signal Connecting Cable	○	○	○	○	○	○
Upholstery	○	○	○	○	○	○

This form is made under the regulation of SJ/T11364

※ : Circuit Board Assemblies include the spare parts which make up a whole PCB,such as resistor,capacitor,integrated circuit ,connectors, etc.

○ : Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the GB/T26572 standard.

× : Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant threshold of the GB/T26572 standard.


Notes of environment-friendly lifetime

Lifetimeof this electrical and electronic products, if operated as set forth in the manual,with the hazardous substance or element not to emit,neither to pollute the environment nor to cause harm to person or property, is limited to 10 years.



01 PRELIMINARY CHECKS



(一) Step 1, Unpack the carton and take all massage chair units out of the carton.

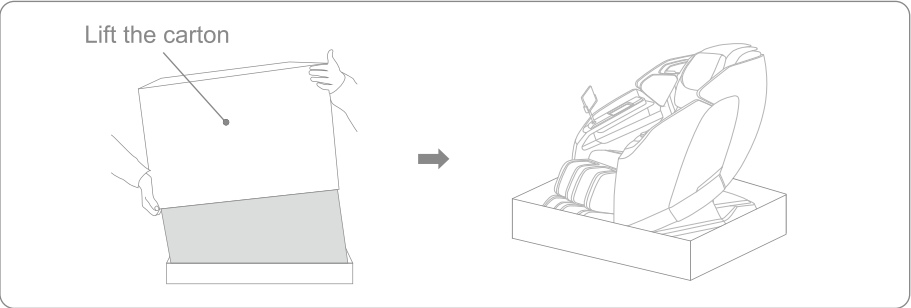



- 1.Remove secure straps and lift the carton vertically.
- 2.Take out all accessories out of the cartons.

(二) Step 2, Placing the massage chair

- * Carry the massage chair out of the carton and place at a desired location.
- * Do not put this product near heat source,open flame or in direct sunlight.
- * This may cause fading or damage.
- * The bottom of the massage chair may scratch the floor,we recommend placing a piece of carpet or soft mat underneath it to avoid damaging the floor.
- * Please allocate clearance to the front and back(a minimum 26-centimeter clearance behind the backrest) of the product;
- * Do not put the massage chair in high moisture environment or on uneven uneveled floor.
- * Keep it 1 meter away from the TV,radio or other audio/video appliance to avoid signal interference.

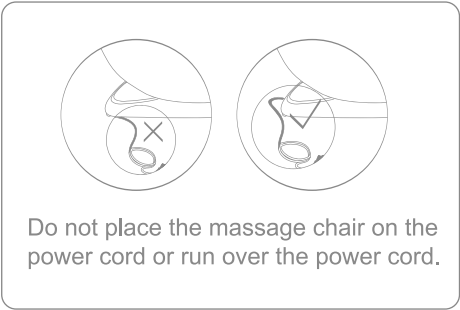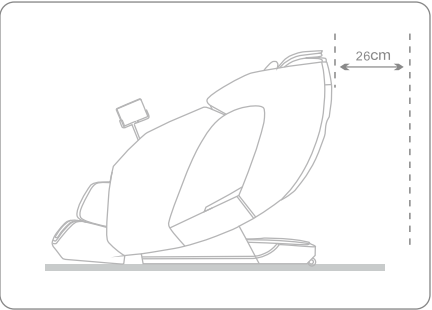

02 PRODUCT STRUCTURE

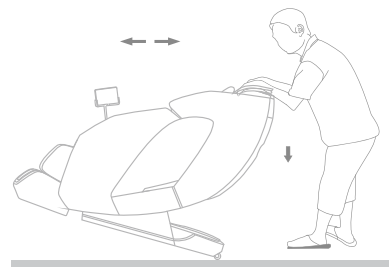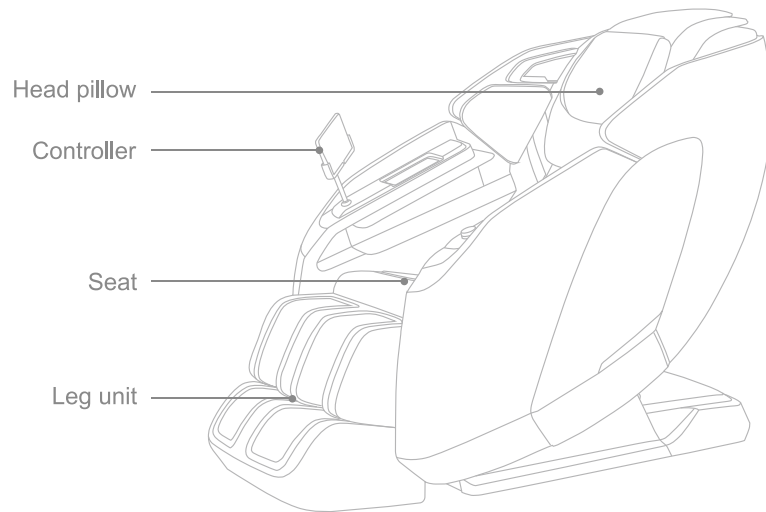

Moving the Massage Chair


1. Push down on the backrest and tilt the chair about 30°(see left figure).
2. Roll the chair on its casters to the desired location.



CAUTION

- * Do not move the chair when there is user inside.
- * Moving the chair may scratch the floor,we recommend placing a piece of carpet or soft mat underneath it.
- * Please hold the backrest firmly when moving the massage chair to avoid falling.
- * Make sure the footrest is fully retracted when moving the massage chair to avoid damage.

19 STORAGE AND MAINTENANCE

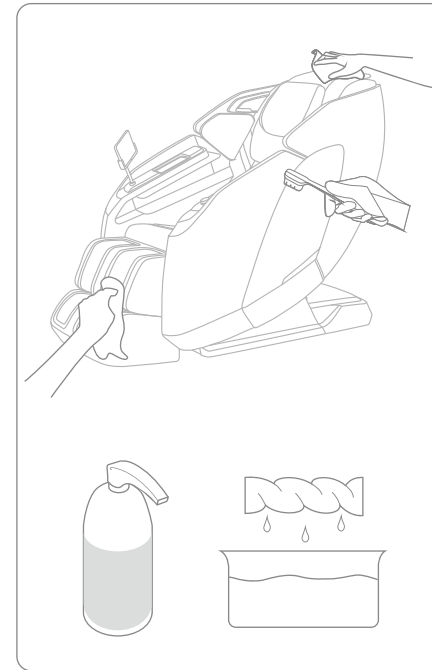

Cleaning


Never use steel wool,abrasive cleansers or corrosive liquid to clean your product.

- ❶ Be sure to disconnect the power cord from the electrical outlet before cleaning.
- ❷ Clean the massage chair,remote controller and power cord with a soft dry cloth.
- ❸ Do not use wet cloth or detergent to clean the product.

Storage

- ❶ Disconnect the power cord from the electrical outlet.
- ❷ Please keep the product away from direct sunlight.
- ❸ Do not stack heavy items on the product.

Never operate this product if it has damaged/exposed parts,please contact the authorized dealer for maintenance.

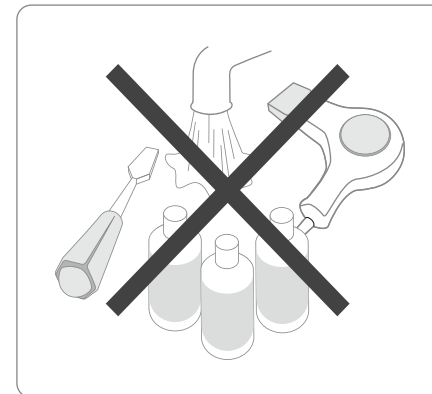

Please disconnect the power cord from the electrical outlet when the massage chair sits idle for extended periods of time.

03 PRODUCT STRUCTURE



CAUTION



- Close supervision is necessary when this product is used by, on, or near invalids, or disabled persons.(need to be supervised)
- Children should be supervised to ensure that they do not play with the massage chair.
- If the power cord is damaged,replace only with a power cord of same type and rating.
- This Massage chair is equipped with heat function, persons with reduced sensory of heat should pay attention to it.
- Check that the power voltage stated on the product corresponds to your local electricity supply.
- This product must be grounded, the plug must be plugged into an appropriate 3-wire grounded outlet.
- Do not operate the product in the event when the fabric of the backrest is torn and exposing the internal component.
- Do not spill water into the controller to avoid faulty.

18 TROUBLESHOOTING

Symptoms	Possible Solutions
Noise is heard while in use.	This sound is normal and comes from the air pump motor or other mechanical parts rubbing against the cloth cover.
Appliance does not start.	Check whether the power cord is secured into the socket. Check whether the power switch is off. Check whether the power supply cord is damaged. Check whether the fuse is blown. Check whether the controller wire is well connected.
Backrest or footrest can not raise or recline.	Check whether there is any foreign objects in the openings. Check whether the connection wire/plug connector is loose.
Massage chair has no response when operate the controller.	After long time of working,the massage chair may overheat and activate overheat protection,please turn off the power and wait 30 to 50 minutes to cool down the appliance.
Both the controller and the massage chair fail to work.	The default timer expires, Please press the power button to restart.

If a malfunction occurs while in use, stop use immediately and disconnect the power.
If problem remains, please contact the service center for maintenance.


Back of massage chair

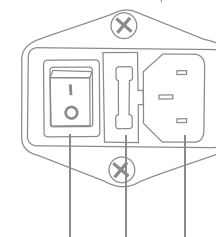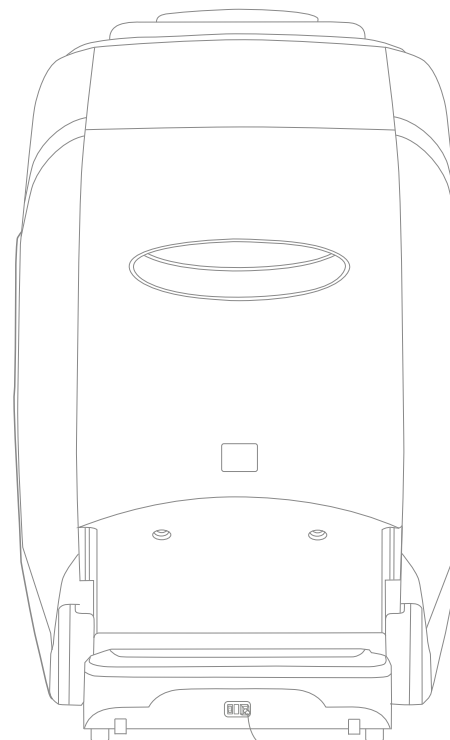

On/Off Fuse Power plug

04 Manual operation instructions

Tablet functional partitions

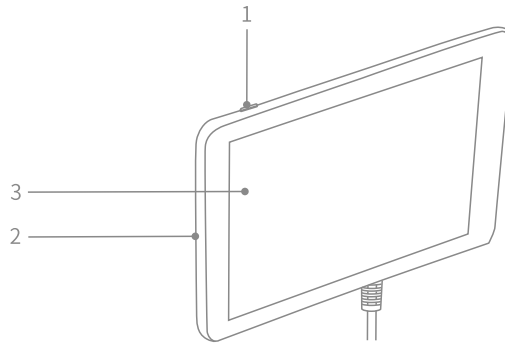

1. Button; 2.Shell; 3.Screen;

Description of the tablet button functions

1. Button;

 button, Press,screen on/off

17 SAFETY PRECAUTIONS



WARNING

Please read all instructions before using.

Use matching socket outlet only. Improperly grounded appliance may cause risk of electrical shock. Do not modify the plug connectors by yourself, refer to a qualified service professional for servicing. To avoid electrical shock, burn, fire or injury, take the following basic precautions:


- Use matching socket outlet only.
- Make sure the power plug is properly inserted and secured in place.
- Turn off the power and unplug the product after use or before cleaning.
- Do not use this product in high temperature environment.
- Do not store outdoors or in direct sunlight.
- Unplug from outlet when the power supply is cut, switch all controls to off.
- Do not operate the massage chair if the power cord is wet or broken.
- Do not operate the controller or plug/unplug the power connectors with wet hands.
- Close supervision is necessary when this product is used by, on, or near children, invalids, or disabled persons.
- Use this product only for its intended use as described in this manual.
- Only use matching accessories provided with the product.
- Do not stand, sit or jump on the footrest to avoid damage to the product.
- Do not sit on the armrest or backrest to avoid tipping over and causing serious injury.
- Do not fall into sleep while the product is operating.
- Do not put foot, fingers or any other objects in the openings of the chair.
- Do not drag the power cord to avoid damage to the cord.
- Check if there is any damage to the product before use.
- If there is any damage, do not use the product and refer to our service team for servicing.
- This product is designed for home use only.
- Please consult your physician if you have any concerns about using the massage chair.
- We recommend that those with any of the following conditions should consult your physician before using: those with malignant tumors, heart disease, back diseases or cervical spine dysfunction, women who are pregnant or menstruating, and those who are not feeling well or undergoing treatment.
- If you feel any abnormal discomfort during the operation of this product, turn off the power immediately and consult your physician.
- Do not use on swelling or bruising body parts.
- This device is designed for home leisure massage, not intended for medical use.
- It is not recommended to use the unit for more than 30 minutes and not more than 15 minutes for particular part of the body to avoid muscle or nerve pain.
- Don't use this product near aerosol sprays or oxygen.
- Do not let a child under the age of 12 years use this product.

16 TECHNICAL SPECIFICATION

Items	Specifications
Name	Intelligent Luxury Massage Chair
Item number	MASCHR-4D-2GEAR-BUGR
Rated voltage	220-240V~
Rated frequency	50Hz
Rated power	150W
Packing dimension	1240mm(L)x760mm(W)x1180mm(H)
Gross weight	103kg
Net weight	88kg
Safety design	Class I
Default working time	20 Minutes

05 OPERATION GUIDE

Hand controller function partition: armrest control panel

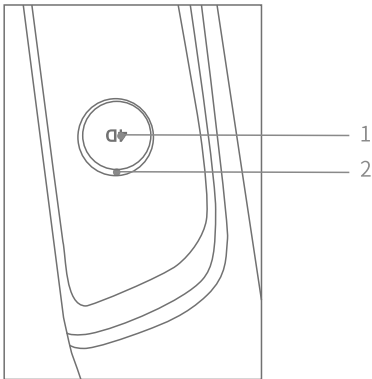

1.ON/OFF



Press and hold this button to turn on or turn off massage chair. In power on state, click this button to switch the 16 auto modes circularly.

2.Knobs



If massage chair is turned on, rotate this knob clockwise to make backrest move downward, and rotate this knob anticlockwisely to make the backrest move upward.




CAUTION

- * Do not get into the massage chair when the footrest is lifted.
- * A sudden excessive load pressed on the footrest may cause damage to the product or injury to the user.
- * Before getting in the chair,please make sure the backrest is restored to upright position,you may recline the chair to desired angles after sitting in the chair.
- * Do not put foot,fingers or any other objects in the openings of the chair.
- * Make sure there are no children,pets or other obstacles around before adjusting the backrest or footrest angle.

0 6 Manual operation instructions


screen display after turning on massage chair

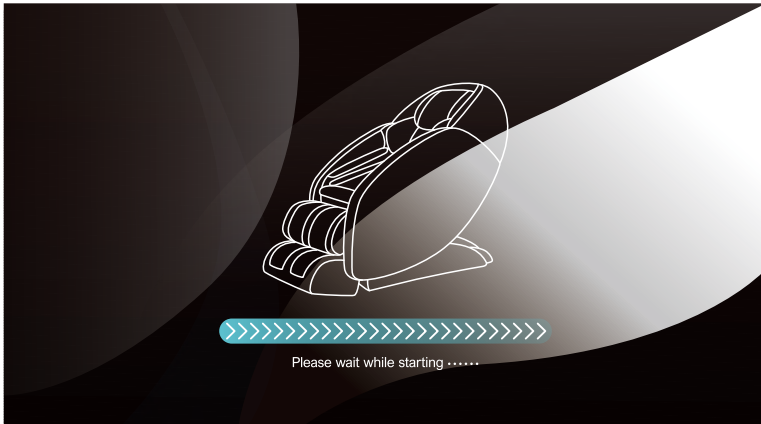

home screen



15 OPERATION GUIDE

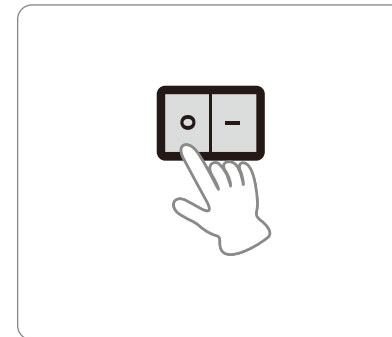

▼
The power button is located at the back of the power box.

- ① Press the power switch at the armrest to stop all massage motions.
- ② When not in use for a long period of time, be sure to turn off the power switch and disconnect the power cord from the electrical outlet.
- ③ Do not drag the power cord to avoid damage to the cord, leading to fire or electric shock.

Bluetooth Instructions

- * When the massage chair is on, the Bluetooth is on as the default setting .
- * You may turn on Bluetooth on your mobile device, choose " A9Pro;" to pair.

14 Voice Control Function Explanation

·After massage chair is power on or in standby state, you can speak “ Hello massage chair” to wake up voice control function.


·Massage chair will answer “ I’m here” after you speak “Hello massage chair”, then speak out the voice control command you want in 6 seconds, if you get the answer from massage chair, then you can get the function you want. If you don’t speak out the voice control commands in 6 seconds, the voice control function will shut off automatically. If you need the voice control function, you have to wake up it again.

Notice: When wake up voice control function, please speak the voice control commands in the standard English, not too fast.


voice control function explanation		
wake up commands: hello massage chair		answer commands: I’m here
sequence no.	voice control commands	answer commands
1	massage on	answer : power on
2	massage off	answer : power off
3	massage pause	answer : massage pause
4	massage restore	answer : massage renew
5	automatic massage	answer : automatic massage mode cycling switching
6	manual massage	answer : manual massage mode cycling switching
7	air bag massage	answer : full body air bags
8	air bag massage off	answer : airbag off
9	backrest up	answer : backrest up
10	backrest down	answer : backrest down
11	heat on	answer : full body heat
12	heat off	answer : heat off
13	calves up	answer : calves up
14	calves down	answer : calves down

07 Manual operation instructions

automatic programme-health guard which includes 4 automatic programme modes

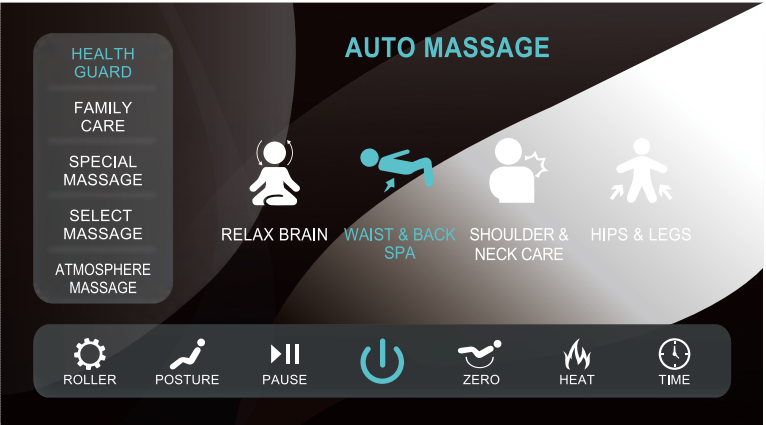


automatic programme-family care which includes 4 automatic programme modes

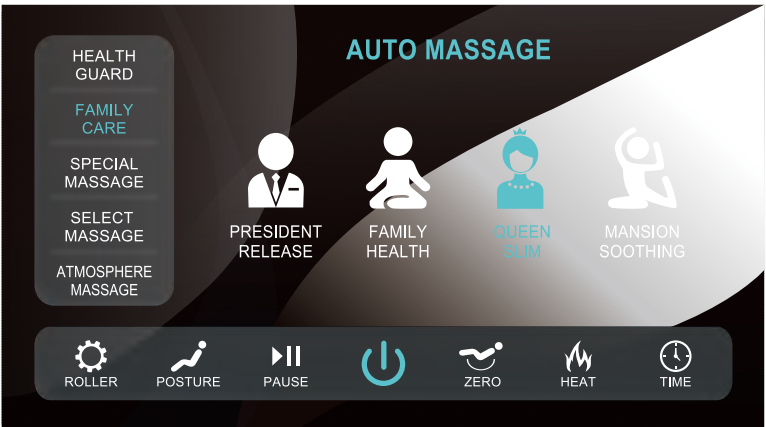

08 Manual operation instructions

automatic programme-special message which includes 4 automatic programme modes

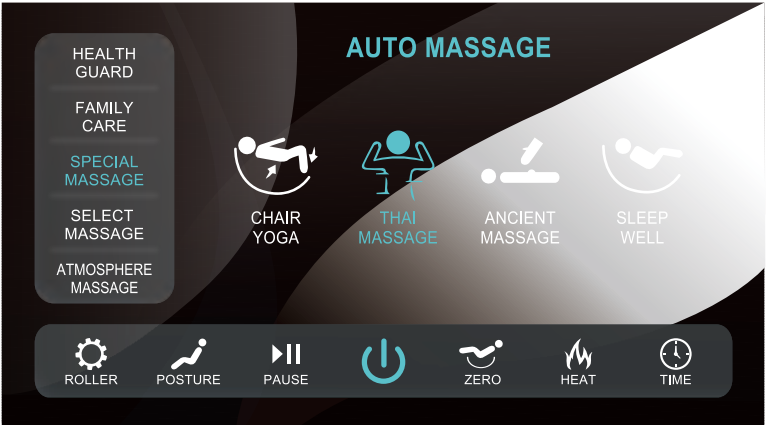


automatic programme-select message which includes 4 automatic programme modes




13 Manual operation instructions

When the child lock is on, it has to be unlocked before the massage chair can be operated.

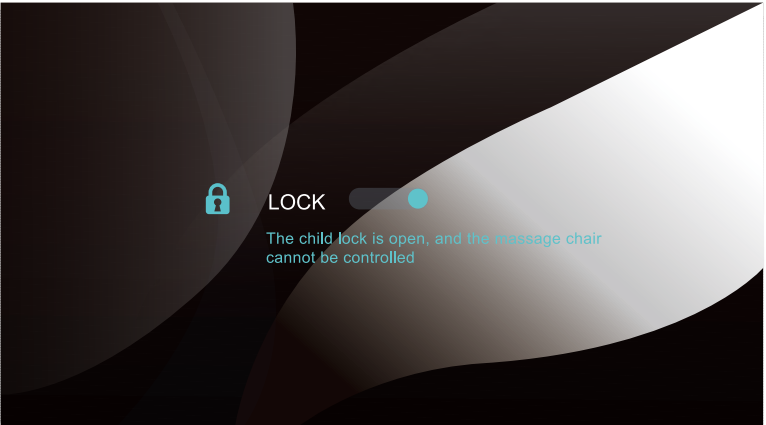


Message chair off reset page

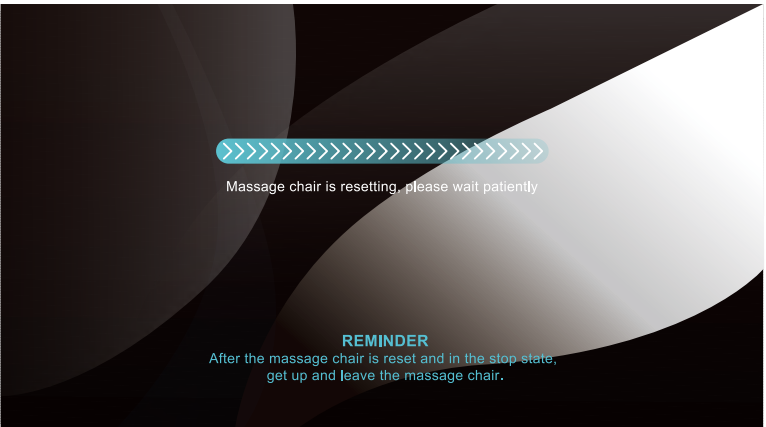

12 Manual operation instructions

automatic shoulder detection screen display after turning on massage chair, mechanism's height can be adjusted manually by using“SHOULDER UP-DOWN”button according to the user's actual shoulders' height.

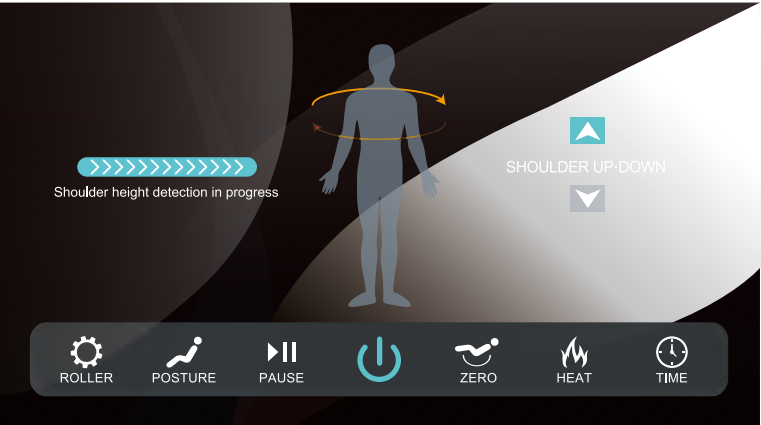


function settings page

language: four languages are available

screen luminance: it can be adjusted


bluetooth settings: turn on or turn off bluetooth. Turn on the bluetooth and connect the mobile, then music can be played.

voice announcement: voice announcement can be switched on or off

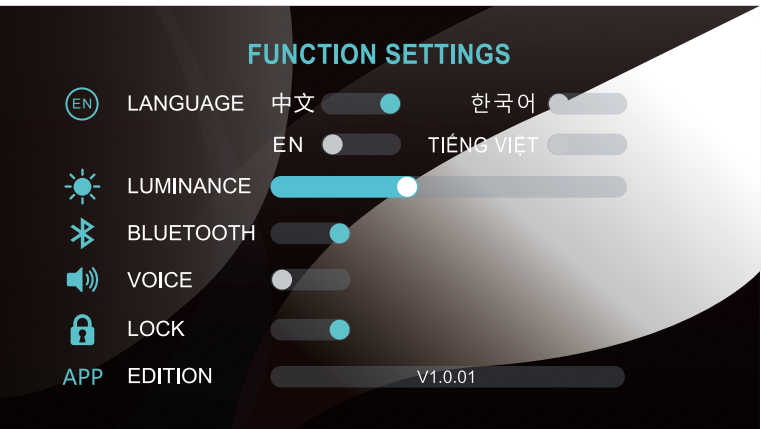


09 Manual operation instructions

automatic programme-atmosphere massage which includes 4 automatic programme modes

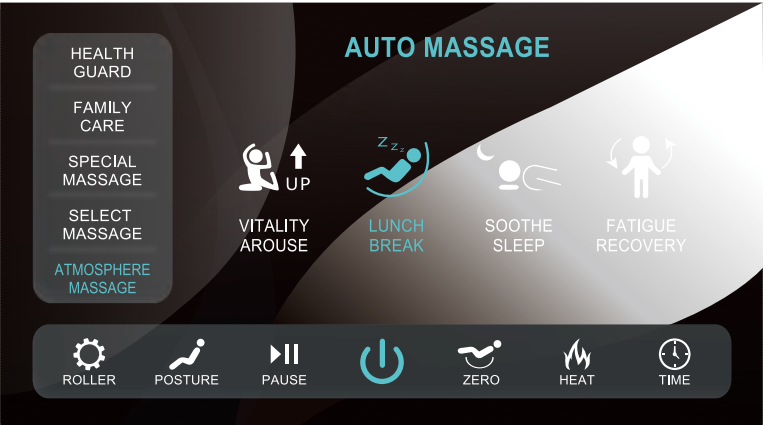


advanced massage-massage techniques which include 6 manual massage techniques

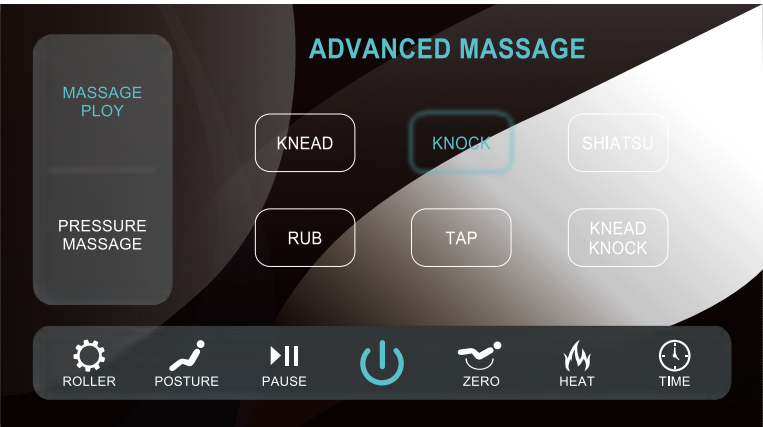

10 Manual operation instructions

advanced massage-airbag massage which includes full body automatic airbag massage and four optional airbag area massage

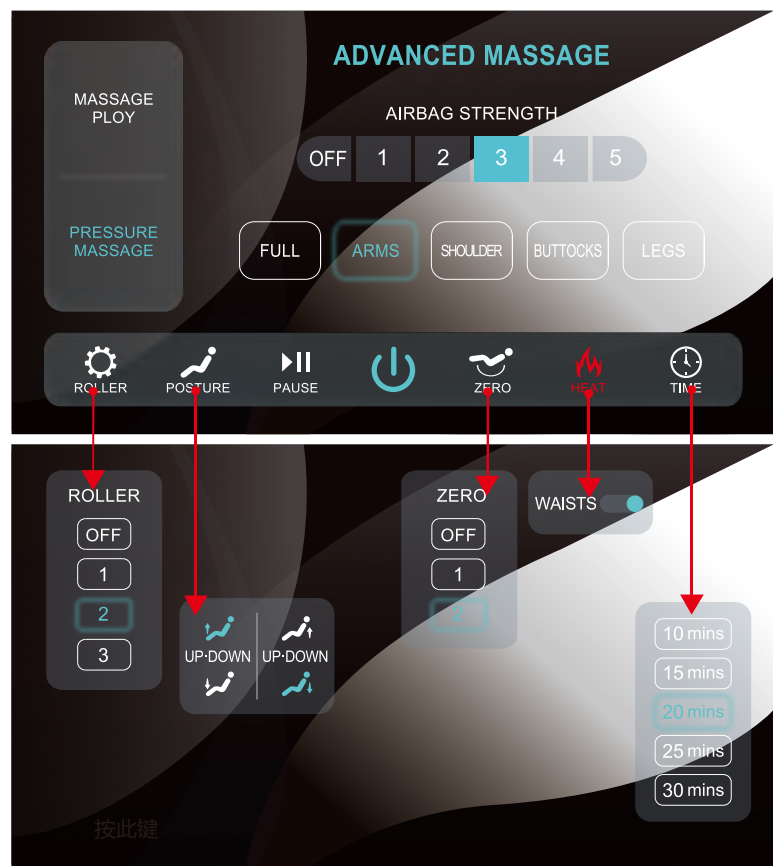

bottom menu function keys:

rollers: 3-level selection for foot massage;

seat position: backrest and calf lift adjustment;

pause: massage pause, massage resume;

on/off key: turn on or turn off massage chair

zero gravity: zero gravity two-level selection;

heat: lumbar back heating.Heating function can be turned on and off separately. But massage chair can't do the heating function alone.

time: 5 timing times to choose from;

11 Manual operation instructions



massage status display page

aromatherapy:turn on and off the aromatherapy function

anion: turn on and off the anion function

4D strength: three level of selection

airbag strength: five level of selection

massage width: It will not work with auto massage. Only in massage ploy of knock, shiatsu and tap, it can be adjusted from wide,medium and narrow circularly.

massage speed: It will not work with auto massage. Only in massage ploy of knead,knock, shiatsu,rub,tap and knead knock, it can be adjusted among three levels circularly.

massage part: It will not work with auto massage.Only in massage ploy of knead,knock, tap and knead knock, it can be adjusted from whole,partial and point circularly. Only in massage ploy of shiatsu and rub, it can be adjusted from whole and partial circularly.

airbag massage: full body automatic airbag massage, and four optional airbag area massage